

* * * To Our Customers * * *

This insert sheet (hereinafter referred to as “this sheet”) provides information regarding the HR-706 (hereinafter referred to as “this instrument”).

There have been changes to the contents of the HR-706 (DOT PRINTING) Instruction Manual (No. HR71E14) in your possession.

The changes are indicated in red below.

When using this instrument, please read both the HR-706 (DOT PRINTING) Instruction Manual and this sheet.

P.6 Within the “1.1 Checking the Accessories” table


No.	Part Name	Type	Quantity	Remarks
2	Ribbon Cassette	EP SR024C000001A	1	*The ribbon color scheme differs from that of the older model, WPSR188A000001A.

P.100 Within the “9.3 Replacing Consumables” table

No.	Name	Type	Period	Remarks	Quantity
2	Ribbon cassette	EP SR024C000001A	3 months	When chart feed speed is 20 mm/h	1

[Note]

- ① Over time, ribbon colors will begin to fade. To ensure clear recording, replace the ribbon cassette as soon as possible.
- ② Use the ribbon cassette within one year after its purchase. Over time, ribbon colors will begin to fade.
- ③ Although the ribbon cassette can be installed because it has the same shape as the older model WPSR188A000001A, the color scheme is different.
If the software version is 5.00 or later, please use EP SR024C000001A.
The software version is displayed when entering setup mode (refer to Section 7.1, page 41).
The ribbon cassette model number is printed on the side of the box; please check it before replacement.

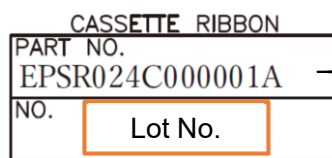

EP SR024C000001A : 5.00 or later

WPSR188A000001A : 4.03 or earlier