


Control Module

QTC1-R

INSTRUCTION MANUAL

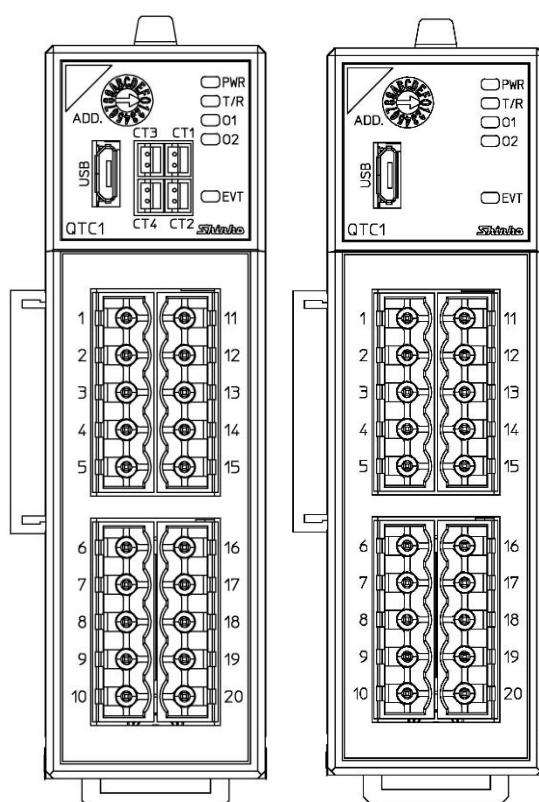

Shinko

Preface

Thank you for purchasing our control module [QTC1-R].

This manual contains instructions for the mounting, functions, operations and notes when operating the control module [QTC1-R].

To prevent accidents arising from the misuse of this instrument, please ensure the operator receives this manual

Notes

- This instrument should be used in accordance with the specifications described in the manual. If it is not used according to the specifications, it may malfunction or cause a fire.
- Be sure to follow the warnings, cautions and notices. If they are not observed, serious injury or malfunction may occur.
- The contents of this instruction manual are subject to change without notice.
- Care has been taken to ensure that the contents of this instruction manual are correct, but if there are any doubts, mistakes or questions, please inform our sales department.
- This instrument is designed to be installed on a DIN rail in an indoor control panel. If it is not, measures must be taken to ensure that the operator does not touch power terminals or other high voltage sections.
- Any unauthorized transfer or copying of this document, in part or in whole, is prohibited.
- Shinko Technos Co., Ltd. is not liable for any damage or secondary damage(s) incurred as a result of using this product, including any indirect damage.

SAFETY PRECAUTIONS (Be sure to read these precautions before using our products.)

The safety precautions are classified into categories: "Warning" and "Caution".

Depending on circumstances, procedures indicated by ⚠ Caution may result in serious consequences, so be sure to follow the directions for usage.



Warning

Procedures which may lead to dangerous conditions and cause death or serious injury, if not carried out properly.



Caution

Procedures which may lead to dangerous conditions and cause superficial to medium injury or physical damage or may degrade or damage the product, if not carried out properly.



Warning

- To prevent an electrical shock or fire, only Shinko or qualified service personnel may handle the inner assembly.
- To prevent an electrical shock, fire, or damage to instrument, parts replacement may only be undertaken by Shinko or qualified service personnel.



Safety Precautions

- To ensure safe and correct use, thoroughly read and understand this manual before using this instrument.
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after purpose-of-use consultation with our agency or main office. (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protective equipment against excessive temperature rise, etc. must be installed, as malfunction of this product could result in serious damage to the system or injury to personnel. Proper periodic maintenance is also required.
- This instrument must be used under the conditions and environment described in this manual. Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.

Meaning of Warning Message on Model Label



Caution

If do not handle this instrument correctly, may suffer minor or moderate injury or property damage due to fire, malfunction, or electric shock. Please read this manual carefully and fully understand it before using it.



Caution with Respect to Export Trade Control Ordinance

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument.

In the case of resale, ensure that this instrument is not illegally exported.

Precautions for Use

1. Installation Precautions



Caution

This instrument is intended to be used under the following environmental conditions (IEC61010-1):

- Pollution degree 2

Ensure the mounting location corresponds to the following conditions:

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gases
- No mechanical vibrations or shocks
- No exposure to direct sunlight, an ambient temperature of -10 to 50°C (14°F to 122°F) that does not change rapidly, and no icing
- An ambient non-condensing humidity of 35 to 85%RH
- No large capacity electromagnetic switches or cables through which large current is flowing
- No water, oil or chemicals or the vapors of these substances can come into direct contact with the unit.
- When installing this unit within a control panel, please note that ambient temperature of this unit – not the ambient temperature of the control panel – must not exceed 50°C (122°F).

Otherwise the life of electronic components (especially electrolytic capacitor) may be shortened.

* Avoid setting this instrument directly on or near flammable material even though the case of this instrument is made of flame-resistant resin.

2. Wiring Precautions



Caution

- Do not leave bits of wire in the instrument, because they could cause a fire and malfunction.
- When wiring, use a crimping pliers and a solderless terminal with an insulation sleeve in which an M3 screw fits.
- Tighten the terminal screw using the specified torque. If excessive force is applied to the screw when tightening, the screw or case may be damaged.
- Do not pull or bend the lead wire with the terminal as the base point during or after wiring work. It may cause malfunction.
- This instrument does not have a built-in power switch, circuit breaker and fuse. It is necessary to install a power switch, circuit breaker and fuse near the instrument.
(Recommended fuse: Time-lag fuse, rated voltage 250 V AC, rated current 2 A)
- When wiring the power supply (24 VDC), do not confuse the polarities.
- Do not apply a commercial power source to the sensor which is connected to the input terminal nor allow the power source to come into contact with the sensor.
- Use a RTD of 3-conducting wire type that meets the sensor input specifications of this instrument.
- When using a relay contact output type, externally use a relay according to the capacity of the load to protect the built-in relay contact.
- Separate the input line (RTD, etc.) from the power line and load line.

3. Operation and Maintenance Precautions



Caution

- It is recommended that auto-tuning (AT) be performed on the trial run.
- Do not touch live terminals. This may cause electrical shock or problems in operation.
- Turn the power supply to the instrument OFF when retightening the terminal or cleaning.
Working on or touching the terminal with the power switched ON may result in severe injury or death due to electrical shock.
- Use a soft, dry cloth when cleaning the instrument.
(Alcohol based substances may tarnish or deface the unit.)
- As the panel part is vulnerable, be careful not to put pressure on, scratch or strike it with a hard object.

4. Compliance with Safety Standards



Caution

- If the instrument is used in a manner not specified by the manufacturer, the protection provided by the instrument may be impaired.
- Use equipment that is reinforced-insulated or double-insulated from the primary power supply for external circuits connected to this instrument.

The following abbreviations are used in the text, figures, and tables of this manual.

Symbol	Term
PV	Process variable (PV)
SV	Desired value (SV)
MV	Output manipulated variable (MV)
AT	Auto-tuning (AT)
CT	Current transformer (CT) [for heater burnout alarm (option)]

About description of reference page

In the case of "Refer to 2-2.", it is described as (P.2-2).

Contents

1	Overview	1-1
1.1	Overview of Control Module QTC1-R.....	1-1
1.2	Description of Module.....	1-2
1.3	System Configuration	1-3
1.3.1	Using Control Module Alone	1-3
1.3.2	Connecting to Host Computer	1-4
1.3.3	Connecting to PLC	1-6
1.3.4	Connecting to CUnet	1-9
1.4	Parameter Passing.....	1-10
1.4.1	Using the Control Module QTC1-RP (with power supply / communication option)	1-10
1.4.2	Using the Communication Expansion Module QMC1-C□.....	1-10
2	Model.....	2-1
2.1	Model	2-1
2.2	How to Read the Model Label	2-2
3	Name and Functions	3-1
3.1	Control Module QTC1-R.....	3-1
4	Procedure Before Starting Operation.....	4-1
5	Communication Parameter Setting	5-1
5.1	Communication Parameter Setting.....	5-1
5.1.1	Communication Parameter Setting.....	5-1
5.1.2	Selection of Module Address	5-3
5.1.3	Setting of CUnet communication specification.....	5-4
6	Mounting.....	6-1
6.1	Selection of Location	6-2
6.2	External Dimensions (Scale: mm)	6-2
6.2.1	Control Module QTC1-R.....	6-2
6.2.2	CT (Current transformer)	6-3
6.3	Mounting.....	6-4
7	Wiring	7-1
7.1	Recommended Terminal and Recommended Rod Terminal	7-1
7.2	Terminal Arrangement	7-2
7.2.1	Input and Output Terminal Arrangement	7-2
7.2.2	Power Supply and Serial Communication Terminal Arrangement.....	7-3
7.2.3	Power Supply and CUnet Communication Terminal Arrangement	7-3
7.2.4	Event Input and Output Terminal Arrangement	7-4
7.3	Wiring	7-5
7.3.1	Wiring for Power Supply and Serial Communication / CUnet Communication	7-5
7.3.2	Wiring for Input and Output.....	7-8
7.3.3	Wiring for CT	7-9
7.3.4	Wiring for Event Input and Event Output	7-10
7.4	Connection of Host Computer and Control Module QTC1-R.....	7-11

7.4.1	Wiring Example: When Using the USB Communication Cable CMC-001-1 (Sold separately)	7-11
7.4.2	Wiring Example When Using the Communication Converter IF-400 (Sold separately) ...	7-12
8	Setting of Specification	8-1
8.1	Preparation	8-1
8.1.1	Preparation of USB Communication Cable and Console Software	8-1
8.1.2	Connecting to Host Computer	8-1
8.2	Specification Setting	8-6
8.2.1	Monitoring Value Setting	8-8
8.2.2	Operation Parameters Setting	8-10
8.2.3	Control Setting	8-12
8.2.4	Alarm Parameters Setting	8-17
8.2.5	Input Setting	8-24
8.2.6	Output Setting	8-26
8.2.7	Standard Function Setting	8-29
8.2.8	Extension Function Selection	8-31
8.2.9	Option Function Setting	8-34
8.2.10	Detail Setting	8-37
9	Communication Procedure	9-1
10	MODBUS Protocol	10-1
10.1	Transmission Mode	10-1
10.2	Data Communication Interval	10-1
10.3	Message Configuration	10-1
10.4	Message Example	10-3
11	Communication Command List	11-1
11.1	Communication Command List	11-1
11.2	Data	11-21
11.2.1	Notes About Write/Read Command	11-21
11.2.2	Write Command	11-21
11.2.3	Read Command	11-21
11.3	Negative Acknowledgement	11-22
11.3.1	Error Code 2 (02H)	11-22
11.3.2	Error Code 3 (03H)	11-22
11.3.3	Error Code 17 (11H)	11-22
11.4	Notes on Programming Monitoring Software	11-22
11.4.1	How to Speed up the Scan Time	11-22
11.4.2	How to Read PID Parameters after AT or Start-up AT Finishes	11-22
11.4.3	Notes on Batch Transmission of All Setting Values	11-22
11.5	Initialization Items by Changing Settings	11-23
12	Operation	12-1
12.1	Control Permission	12-1
12.2	Set PID Constants (Execute AT)	12-3
12.2.1	Normal AT	12-4
12.2.2	Start-up AT	12-5
12.2.3	AT Gain Setting	12-6

12.2.4	Executing AT	12-6
12.3	Set Alarm.....	12-7
12.4	Correct Process Variable	12-9
12.5	Auto/Manual Control Switch	12-11
13	Communication with PLC Using SIF Function	13-1
13.1	Flow of Before Operation.....	13-2
13.2	PLC Communication Parameter Setting.....	13-3
13.3	Mounting.....	13-6
13.4	Wiring	13-8
13.4.1	Wiring for Power Supply and Serial Communication	13-8
13.4.2	Wiring for Input and Output.....	13-10
13.4.3	Wiring for CT	13-11
13.4.4	Wiring for Event Input and Event Output	13-12
13.5	Connection of PLC and Control Module QTC1-RP	13-13
13.6	Specification Setting	13-15
13.6.1	Preparation of USB Communication Cable and Console Software	13-15
13.6.2	Connecting to Host Computer	13-15
13.6.3	Specification Setting	13-19
13.7	Operation.....	13-28
13.7.1	Communication Procedure	13-28
13.7.2	Handshake between Control Module QTC1-RP and PLC	13-29
13.7.3	PLC Communication Data Map	13-31
13.7.4	Data Exchange between Control Module QTC1-RP and PLC.....	13-39
13.7.5	Data Settings	13-40
14	CUnet Communication	14-1
14.1	Flow of Before Operation.....	14-2
14.2	Setting CUnet communication specifications.....	14-3
14.3	Mounting.....	14-6
14.4	Wiring	14-7
14.4.1	Wiring for Power Supply and Communication	14-7
14.4.2	Wiring for Input and Output.....	14-9
14.4.3	Wiring for CT	14-10
14.4.4	Wiring Example of CUnet Communication Line	14-11
14.5	Global Memory (GM).....	14-12
14.6	Software	14-12
14.7	Global Memory (GM) Map	14-13
14.8	Attached Function	14-14
15	Action Explanation.....	15-1
15.1	Control Action Explanation	15-1
15.1.1	2 DOF PID Control.....	15-2
15.1.2	Fast-PID Control	15-3
15.1.3	Slow-PID Control	15-3
15.1.4	ON-OFF Control	15-3
15.1.5	Gap-PID Control	15-3
15.1.6	PID Control Parameters.....	15-4

15.2	Standard Function	15-6
15.2.1	Control Range	15-6
15.2.2	Integral/Derivative Decimal Point Position	15-6
15.2.3	MV Bias	15-6
15.2.4	Control action selection when input error.....	15-6
15.2.5	Output Minimum ON/OFF Time	15-7
15.2.6	Alarm Output	15-8
15.2.7	Loop Break Alarm	15-8
15.2.8	Set Value Ramp Function.....	15-8
15.2.9	Power On Restore Action	15-9
15.2.10	Non-volatile IC Memory Data Save	15-9
15.2.11	Auto/Manual Control Switching.....	15-9
15.2.12	Sensor Correction Factor.....	15-10
15.2.13	Sensor Correction.....	15-10
15.2.14	Output Rate-of-Change Limit.....	15-11
15.2.15	Control Function	15-12
15.3	Extension function	15-17
15.3.1	Extension function selection	15-17
15.3.2	Output Gain – Bias Function.....	15-24
15.3.3	Input Math Function	15-25
15.3.4	Input Difference Selection.....	15-25
15.3.5	Combination of Functions	15-26
15.4	Attached Function	15-27
15.4.1	Power Failure Countermeasure	15-27
15.4.2	Self-Diagnosis	15-27
15.4.3	PV Filter Time Constant.....	15-27
15.4.4	Moving average count	15-27
15.4.5	CH Enable/Disable	15-28
15.4.6	Overscale	15-28
15.4.7	Underscale	15-28
15.4.8	Sensor Error	15-28
15.4.9	ADC Error	15-29
15.4.10	Warm-up indication.....	15-29
15.4.11	Contact Switching Total Number of Times.....	15-29
15.4.12	Total Energizing Time.....	15-29
15.4.13	Heater Accumulated Energizing Time	15-29
15.4.14	Error History	15-30
15.5	Operation Diagram	15-31
15.5.1	Control Output Operation Diagram	15-31
15.5.2	Control Output ON/OFF Operation Diagram.....	15-32
15.5.3	Alarm Operation Diagram	15-33
15.5.4	Heater Burnout Alarm Operation Diagram.....	15-35
15.5.5	Heating/Cooling Control Operation Diagram	15-36
15.5.6	Heating/Cooling Control Operation Diagram (When Setting Dead Band).....	15-37
15.5.7	Heating/Cooling Control Operation Diagram (When Setting Overlap Band).....	15-38
16	Maintenance and Inspection	16-1
16.1	Maintenance	16-1
16.2	Inspection	16-3

17	Specifications	17-1
17.1	Standard Specifications.....	17-1
17.2	Optional Specifications	17-21
18	Troubleshooting.....	18-1
18.1	Communication (Upper Communication)	18-1
18.2	Communication (CUnet Communication)	18-2
18.3	PV Reading Value	18-2
18.4	Status Flag 1	18-3
18.5	Status Flag 2	18-3
18.6	Control.....	18-4
18.7	Loop Break Alarm.....	18-5
18.8	Heater Burnout Alarm	18-5

1 Overview

1.1 Overview of Control Module QTC1-R

This instrument is a control module that can be 2ch controlled.

A multi-point control system can be configured with the control module alone, or via a host computer or PLC.

A maximum of 16 instruments can be connected via BUS, and a maximum of 32 points can be controlled.

One block connected to BUS is called "1 unit".

In addition, a maximum of 16 units can be connected using the communication expansion module QMC1-C□ and a maximum of 512 points can be controlled.

1.2 Description of Module

2ch control module.

Terminal block type or connector type, input and output are 2ch individual.

The following options are available:


- Power supply / communication option
 - With power supply / upper communication function
 - With power supply / CUnet communication function
- Heater burnout alarm option
- Event input/output option

Depending on whether have the option, the panel design differs.

There is a triangle mark on the upper left of the panel.

QTC1-R0C-□□RR-0□


No options

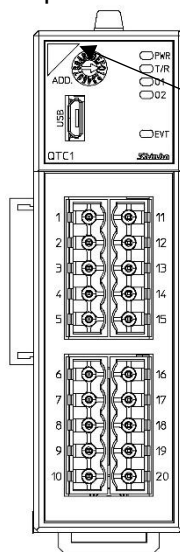

(Fig. 1.2-1)

QTC1-R0C-□□RR-2□, QTC1-R0C-□□RR-A□

With heater burnout alarm option

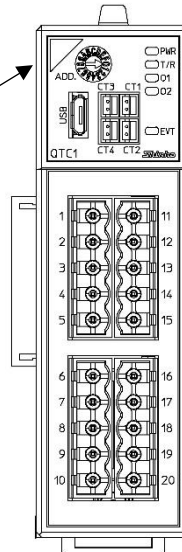


(Fig. 1.2-2)

QTC1-RCC-□□RR-0□,

QTC1-RPC-□□RR-0□

With power supply /
communication options

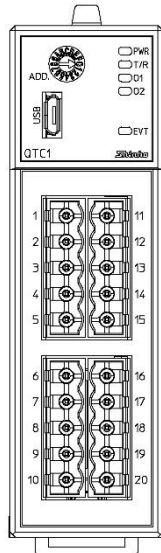


(Fig. 1.2-3)

QTC1-RCC-□□RR-2□, QTC1-RCC-□□RR-A□

QTC1-RPC-□□RR-2□, QTC1-RPC-□□RR-A□

With power supply / communication option
and heater burnout alarm options

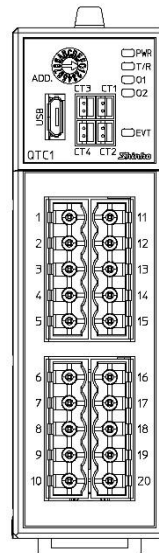

(Fig. 1.2-4)


1.3 System Configuration

1.3.1 Using Control Module Alone

When using the control module alone, one control module QTC1-RP (with power supply / communication option) is required for connecting to the power line.

The second and subsequent power lines to the control module are BUS-connected by the connector. For the second and subsequent control modules, use the control module QTC1-R0(no power supply / communication option).

Maximum of 16 control modules can be connected.

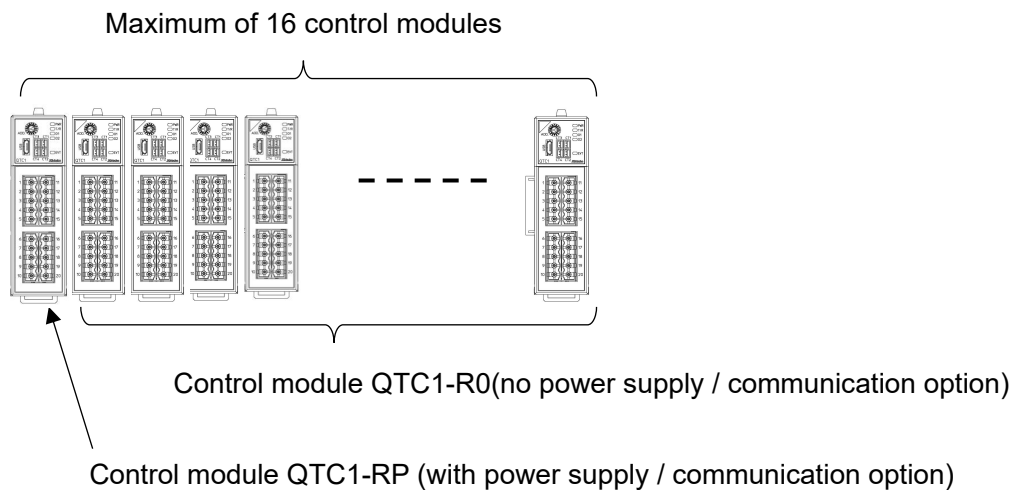


(Fig. 1.3.1-1)

1.3.2 Connecting to Host Computer

When connecting to the host computer, one control module QTC1-RP (with power supply / communication option) is required for host communication.

The second and subsequent power lines to the control module are BUS-connected by the connector. For the second and subsequent control modules, use the control module QTC1-R0(no power supply / communication option).


Maximum of 16 control modules can be connected.

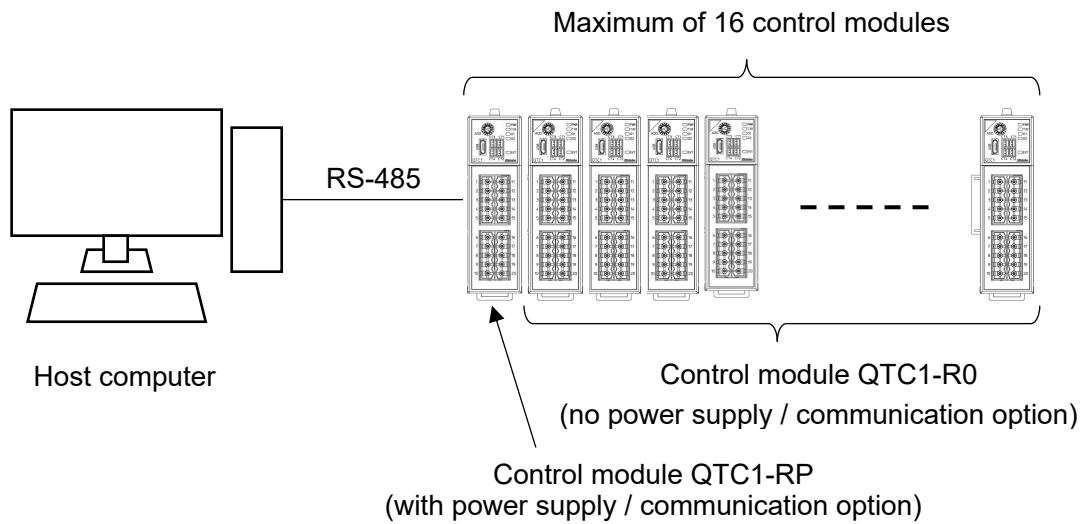

(Fig. 1.3.2-1)

A maximum of 16 units can be connected by connecting the communication expansion module QMC1-C□s.

Refer to communication expansion module QMC1-C□ instruction manual for detail.

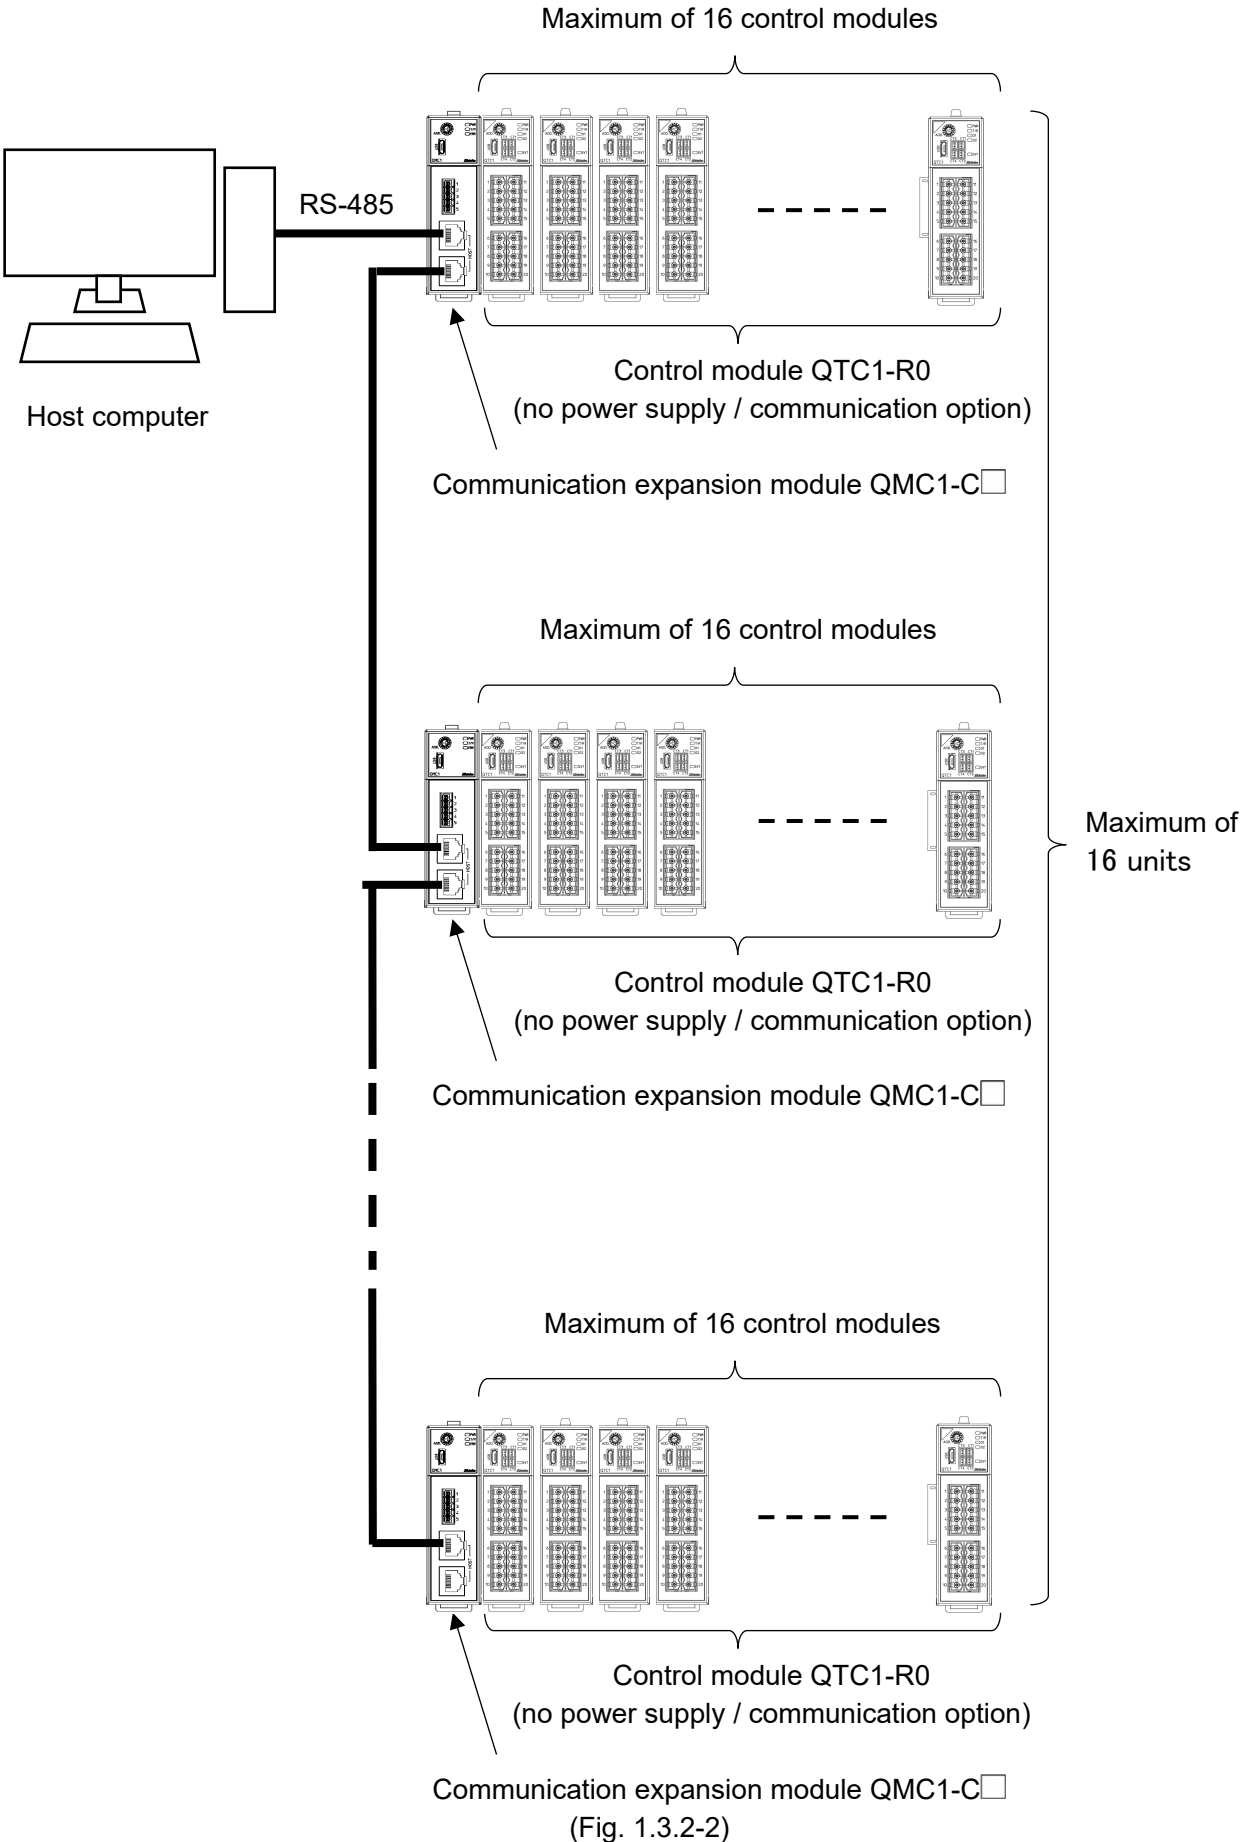

1.3.3 Connecting to PLC

(1) When connecting to MELSEC Q, QnA series by Mitsubishi Electric Corporation


When connecting to the MELSEC Q, QnA series by Mitsubishi Electric Corporation, one control module QTC1-RP (with power supply / communication option) is required for upper communication.

Use the SIF function (Smart InterFace, programless communication function) (P.13-1).

The second and subsequent power lines to the control module are BUS-connected by the connector.

For the second and subsequent control modules, use the control module QTC1-R0(no power supply / communication option).

Maximum of 16 control modules can be connected.

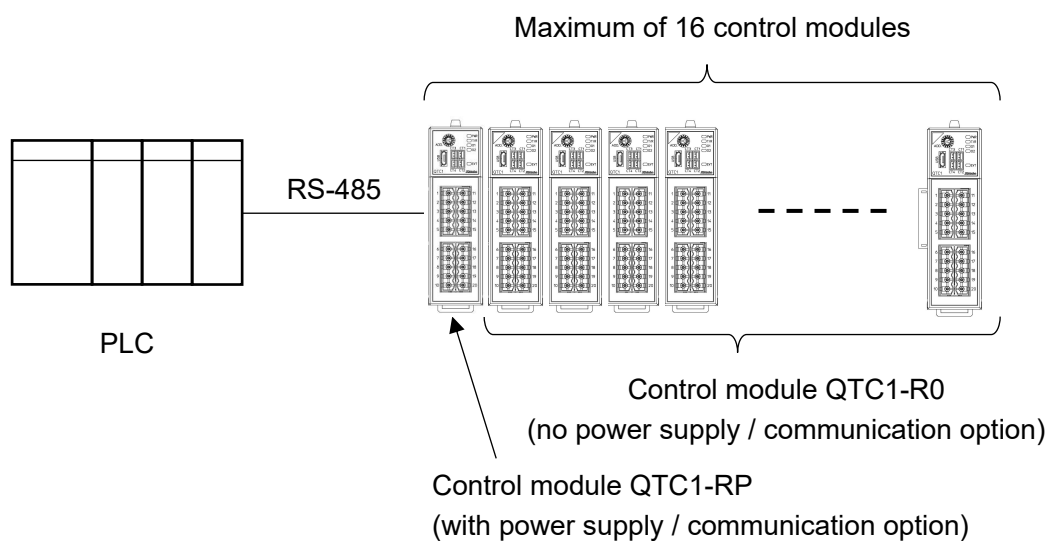

(Fig. 1.3.3-1)

- (2) When connecting to PLC by Mitsubishi Electric Corporation, PLC by OMRON Corporation and PLC by KEYENCE CORPORATION

When connecting to the PLC by Mitsubishi Electric Corporation, PLC by OMRON Corporation (*) and PLC by KEYENCE CORPORATION, one communication expansion module QMC1-C□ is required for upper communication per unit.


The power lines to the control module are BUS-connected by the connector.

Use the control module QTC1-R0 (no power supply / communication option).

Maximum of 16 control modules can be connected.

- (*): When connecting to an OMRON PLC with the SIF function of communication expansion module QMC1-C□, the RS-485 communication type cannot be used.


Only RS-422A communication type can be connected.

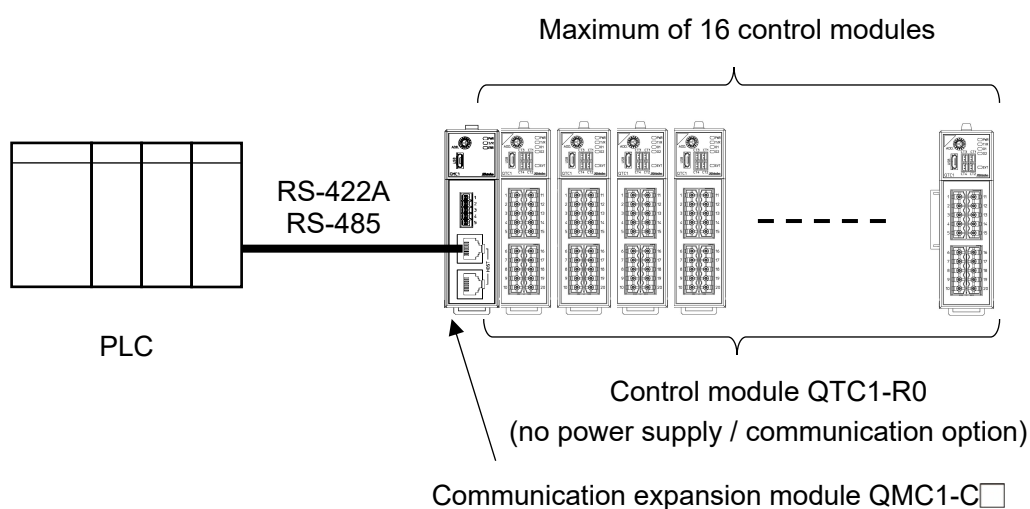

(Fig. 1.3.3-2)

A maximum of 16 units can be connected by connecting the communication expansion module QMC1-C□s.

Refer to communication expansion module QMC1-C□ instruction manual for detail.

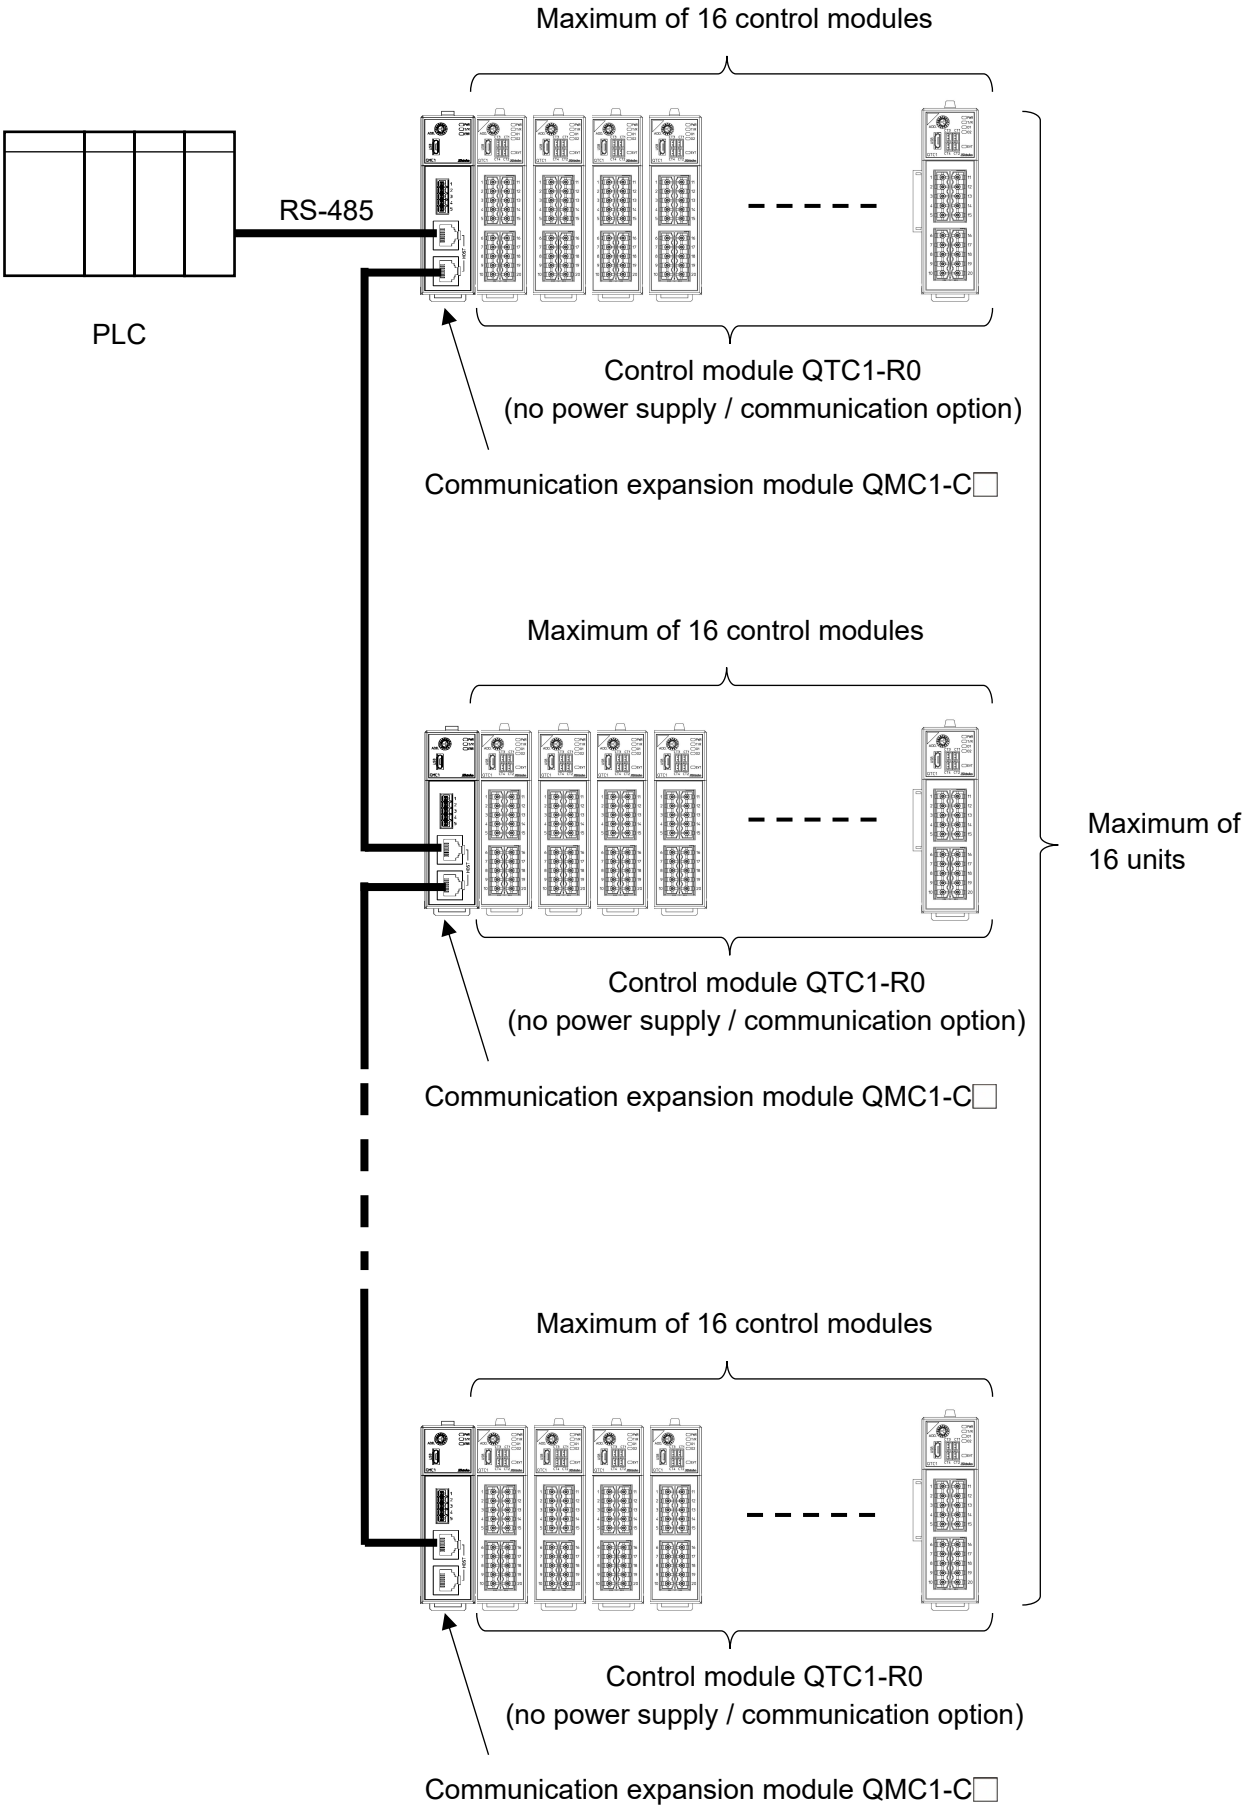


(Fig. 1.3.3-3)

1.3.4 Connecting to CUnet

When connecting to the CUnet, control module QTC1-RC (with power supply / CUnet communication option) is required.

Maximum of 64 control modules can be connected.

Configuration example of host computer (master board) and QTC1-RC

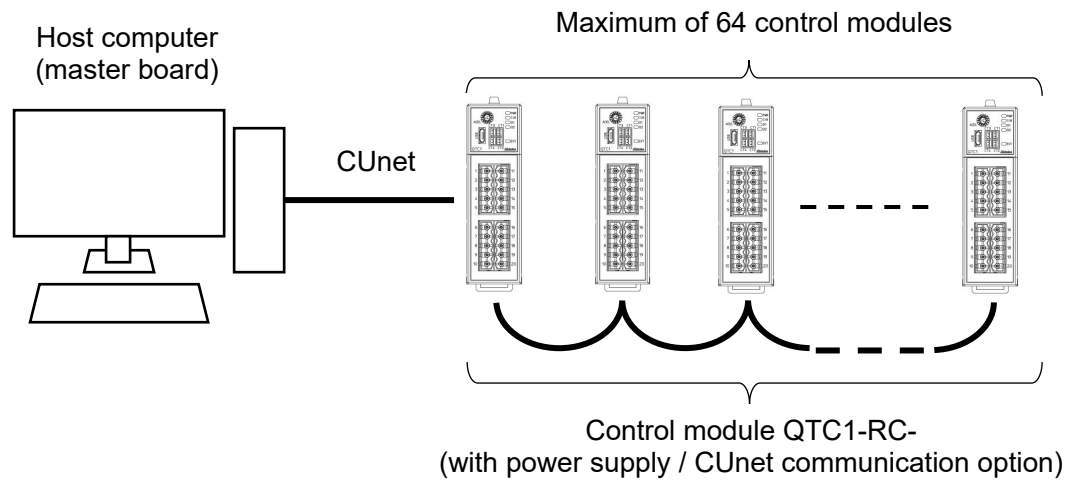


(Fig. 1.3.4-1)

1.4 Parameter Passing

1.4.1 Using the Control Module QTC1-RP (with power supply / communication option)

When the control module QTC1-RP (with power supply / communication option) is used, the parameter passing is as shown below.

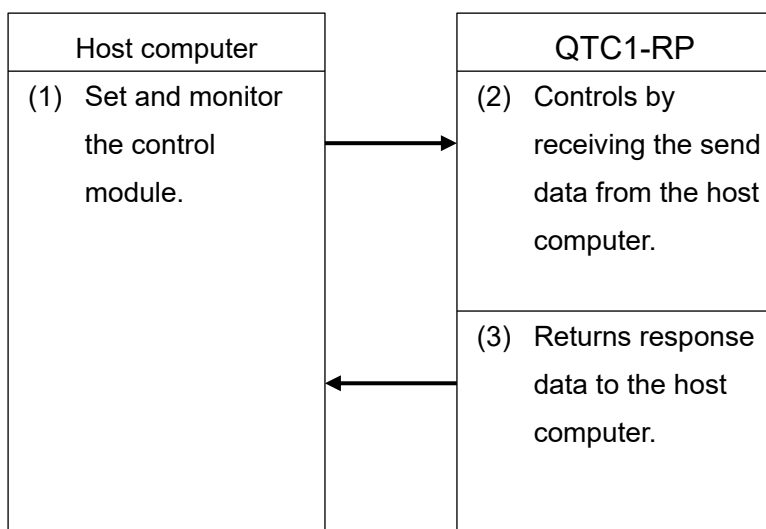


(Fig. 1.4.1-1)

1.4.2 Using the Communication Expansion Module QMC1-C□

When the communication expansion module QMC1-C□ is used, the parameter passing is as shown below.

Refer to the communication expansion module QMC1-C□ instruction manual for detail.

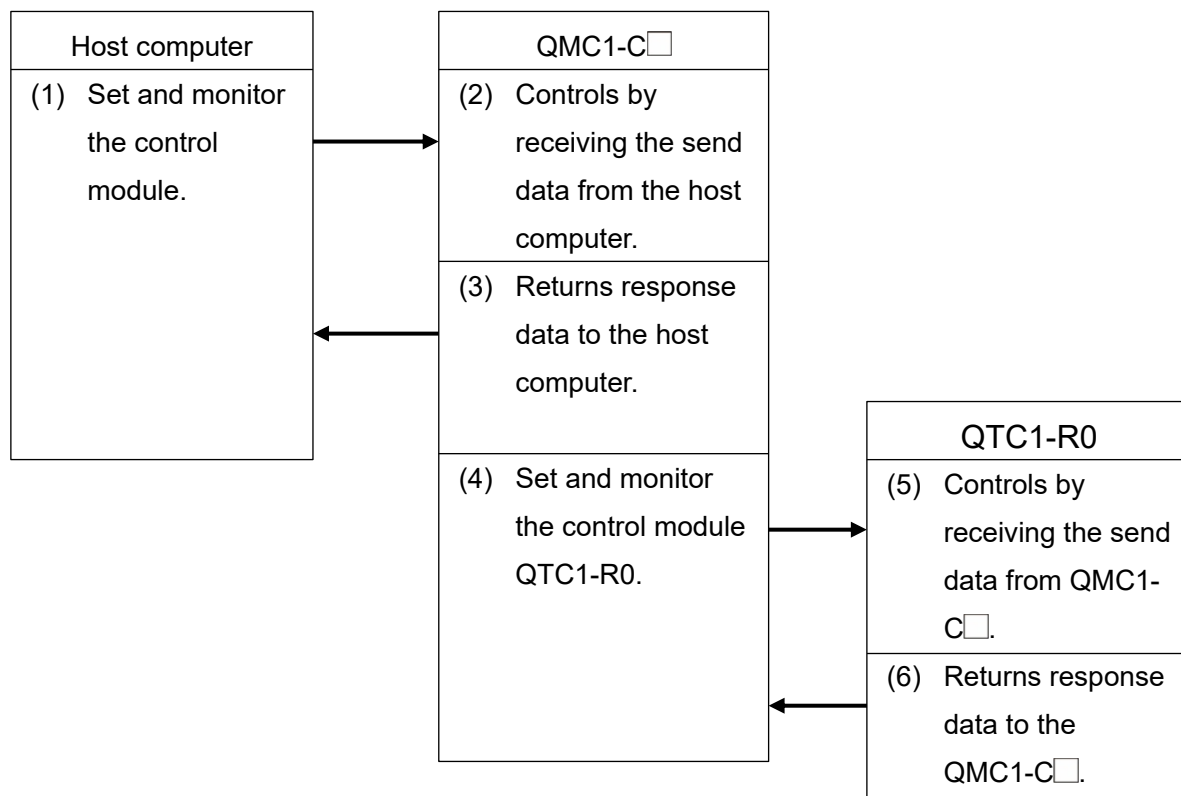

(Fig. 1.4.2-1)

2 Model

2.1 Model

QTC1-R	☐	☐	☐	☐	☐	☐	☐	☐	
Power supply / communication option	0								No option
	P								With power supply / communication option
	C								With power supply / CUnet communication option
Wiring type	C								Connector type
Control output 1	☐								Refer to output code table
Control output 2	☐								
Input 1				R					Pt100 4-wire type
Input 2					R				Pt100 4-wire type
Heater burnout alarm option						-0			No option
						-2			CT 2 points 20 A (*1) (Single-phase / 3-phase)
						-A			CT 2 points 100 A (*1) (Single-phase / 3-phase)
Event input/output option							0		No option
							1		Event input (2 points) (*2)
							2		Event output (4 points) (*2)

(*1): CT and connector harness are sold separately.

(*2): Connector harness is sold separately.

Output code table


Output code	Output type
R	Relay contact output
S	Non-contact voltage output (For SSR drive)
A	Direct current output 4 to 20 mA DC
0	Direct current output 0 to 20 mA DC
V	DC voltage output 0 to 1 V DC
1	DC voltage output 0 to 5 V DC
2	DC voltage output 1 to 5 V DC
3	DC voltage output 0 to 10 V DC
C	Open collector output

Input code table

Input code	Input type	Range
R	Pt100 4-wire type	0.000 to 32.000°C

2.2 How to Read the Model Label


The model label is attached to the right side of this instrument.

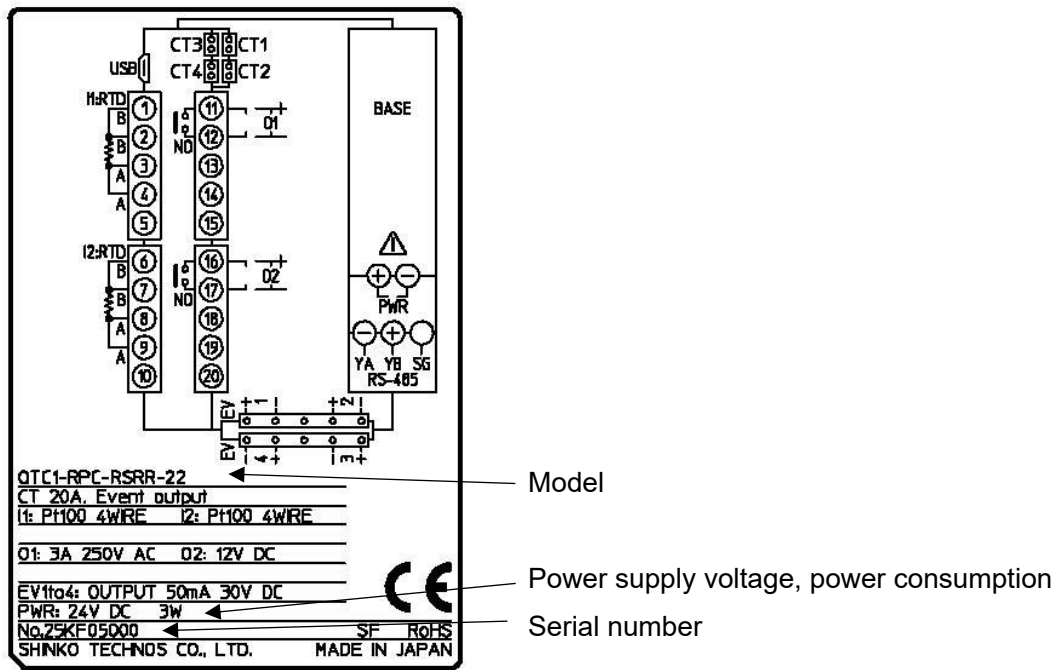

(Fig. 2.2-1)

3 Name and Functions

3.1 Control Module QTC1-R

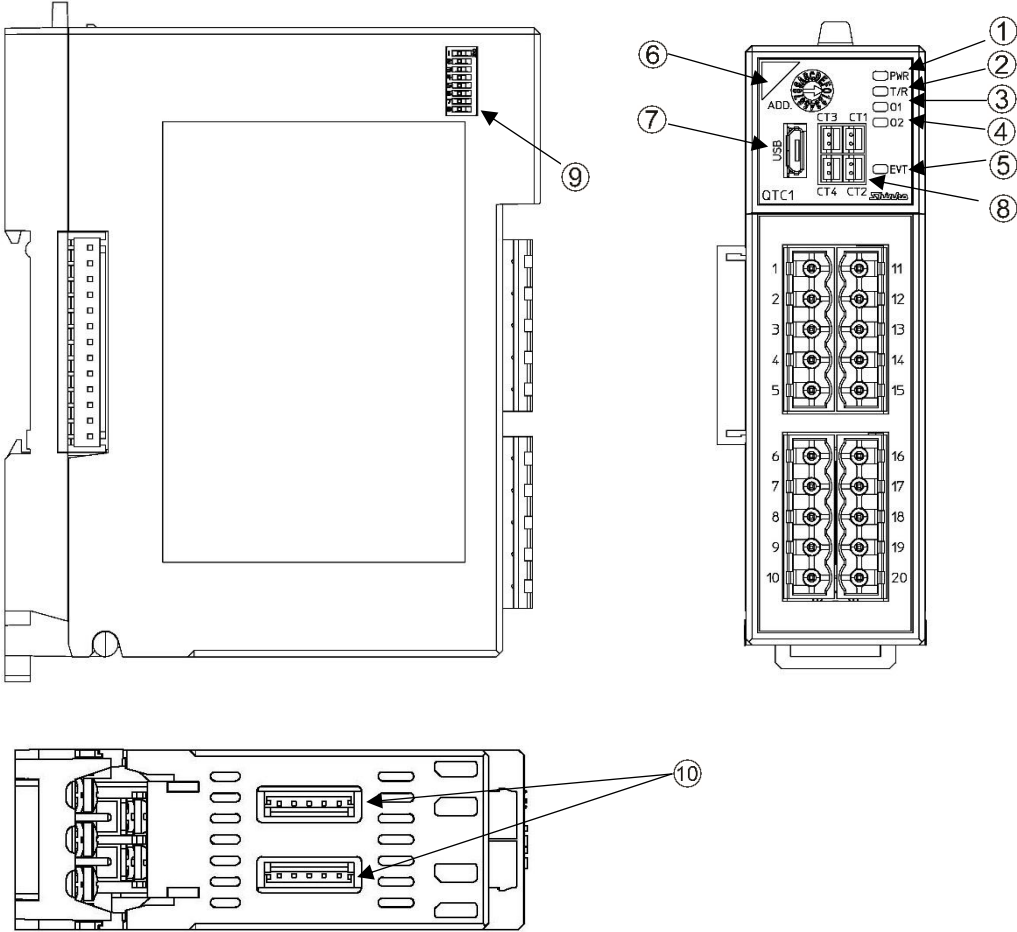

(Fig. 3.1-1)

Control Module


No.	Symbol (color)	Name and Function
①	PWR (Green)	Power indicator • Lights off (always): No power supply to the instrumen • Lights up (always): Power supply to the instrumen • Flashing for 500 ms (3 seconds): Warming up the instrument • Flashing for 500 ms (always): Internal failure of the instrument [When non-volatile IC memory error or ADC (internal circuit) error]
②	T/R (Yellow)	Communication indicator • Lights off (always): Communication error (no response) or USB communication • Flashing (slow): Communication error (reception error) • Flashing (fast): Communication is normal
③	O1 (Green)	Control output OUT1 indicator • Lights off: Control output OUT1 is OFF or control is prohibited • Lights up: Control output OUT1 is ON (other than direct current output and DC voltage output) • Flashing for 100 ms (always): Control output is ON (Direct current output, DC voltage output)
④	O2 (Green)	Control output OUT2 indicator • Lights off: Control output OUT2 is OFF or control is prohibited • Lights up: Control output OUT2 is ON (other than direct current output and DC voltage output) • Flashing for 100 ms (always): Control output is ON (Direct current output, DC voltage output)
⑤	EVT (Red)	Event indicator • Lights off (always): No alarm or abnormality • Lights up (always): Alarm, loop abnormality alarm or heater burnout alarm (option) is activated • Flashing for 500 ms: (always) Sensor error (overscale, underscale) • Flashing for 250 ms: (always) Power is supplied from the computer by USB bus power

Switch and connector

No.	Symbol	Name and Function
⑥	ADD	Module address selection rotary switch Rotary switch for module address selection. The module address is the value of the selected rotary switch plus one.
⑦	USB	Console communication connector Connector for console communication tool cable.
⑧	CT1, CT3	CH1 CT input connector Connector for heater burnout alarm CT input of CH1. For single-phase, use CT1 or CT3. For 3-phase, use CT1 and CT3.
	CT2, CT4	CH2 CT input connector Connector for heater burnout alarm CT input of CH2. For single-phase, use CT2 or CT4. For 3-phase, use CT2 and CT4.
⑨		Communication specification selection dip switch DIP switch for selecting communication specifications. Select the communication specifications such as communication speed, data bit, parity, stop bit and communication protocol.
⑩		Event input/output connector Connector for event input or event output. Operation is selected by event input assignment selection or event output assignment selection.

4 Procedure Before Starting Operation

The procedure up to the start of operation when connecting to a host computer is shown below.

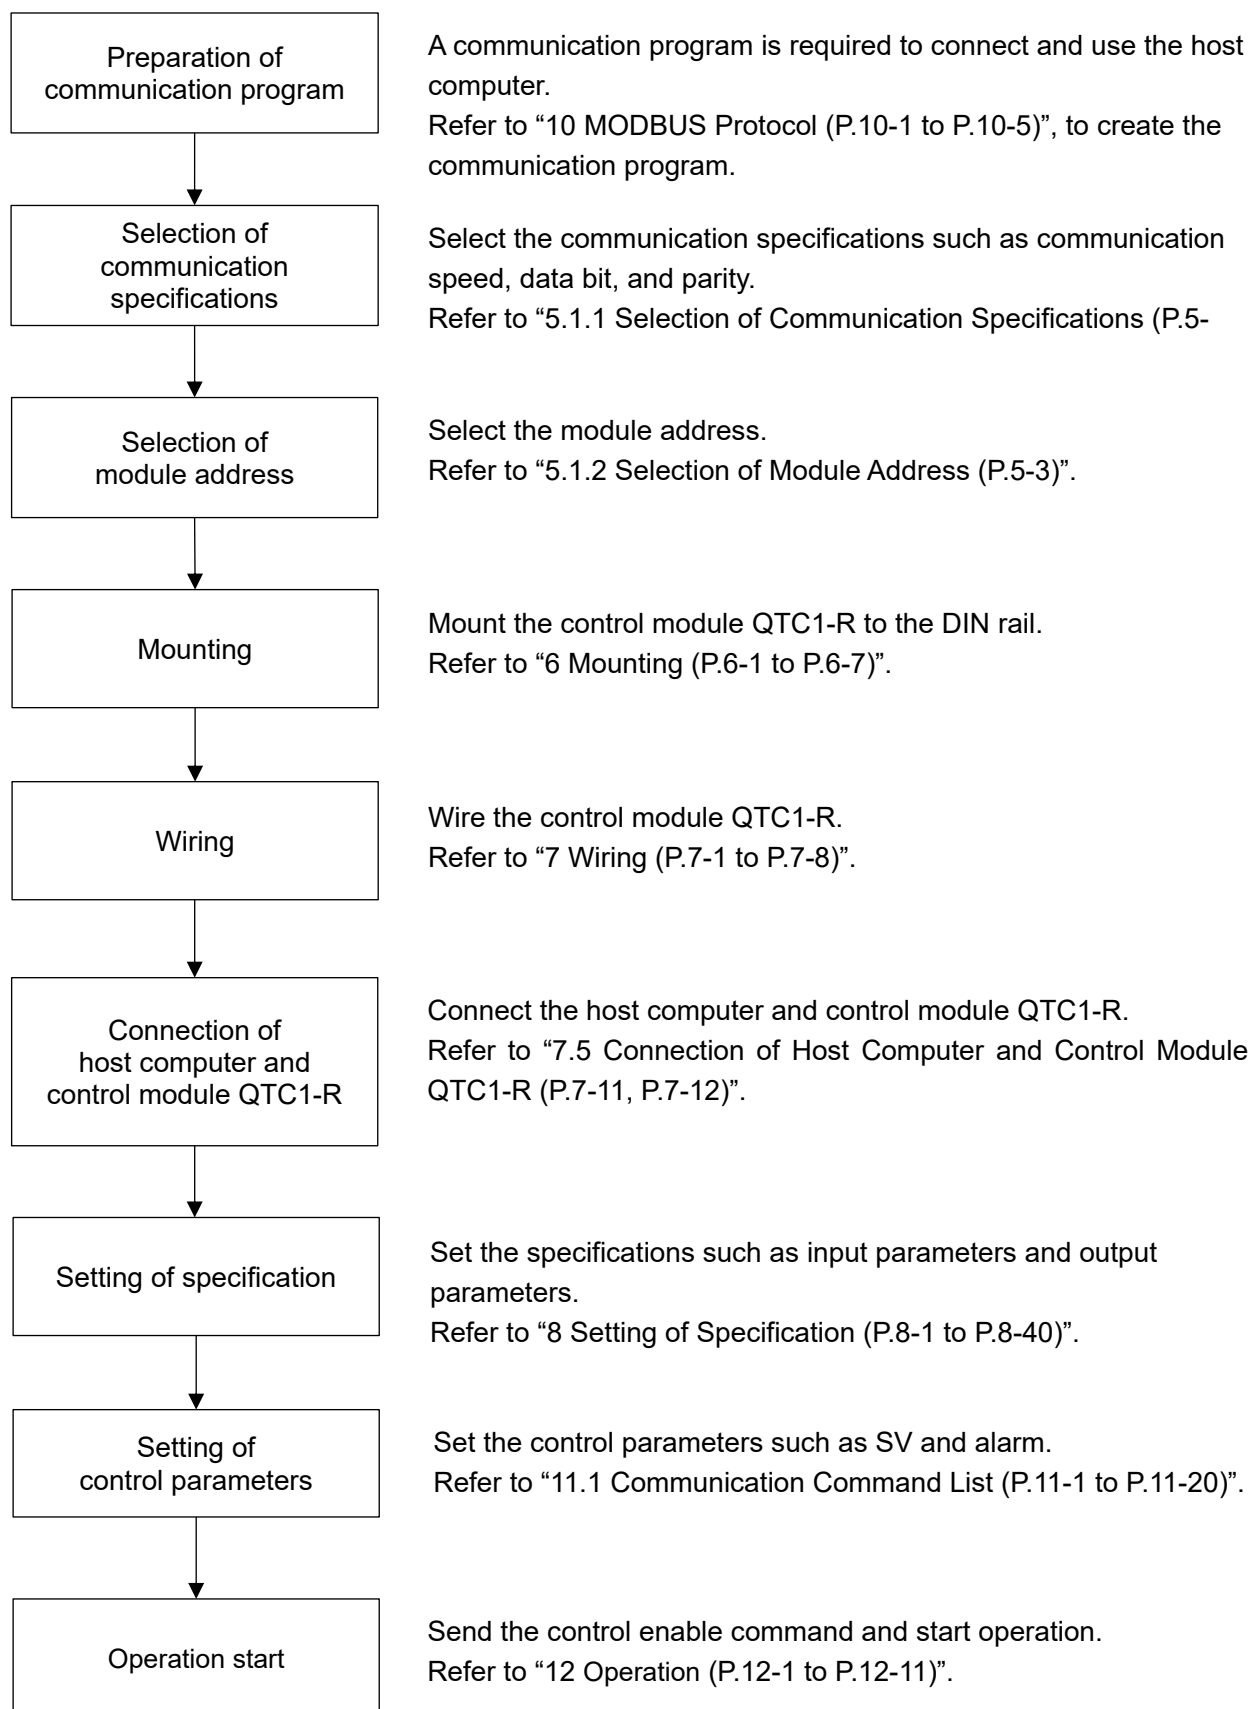

(Fig. 4-1)

5 Communication Parameter Setting

5.1 Communication Parameter Setting

5.1.1 Communication Parameter Setting




Caution

When connecting to the communication expansion module QMC1-C□, the communication specification selection is not required.

Use it in the factory default (all OFF).

Use the communication specification selection dip switch on the left side of the instrument to select communication specifications.

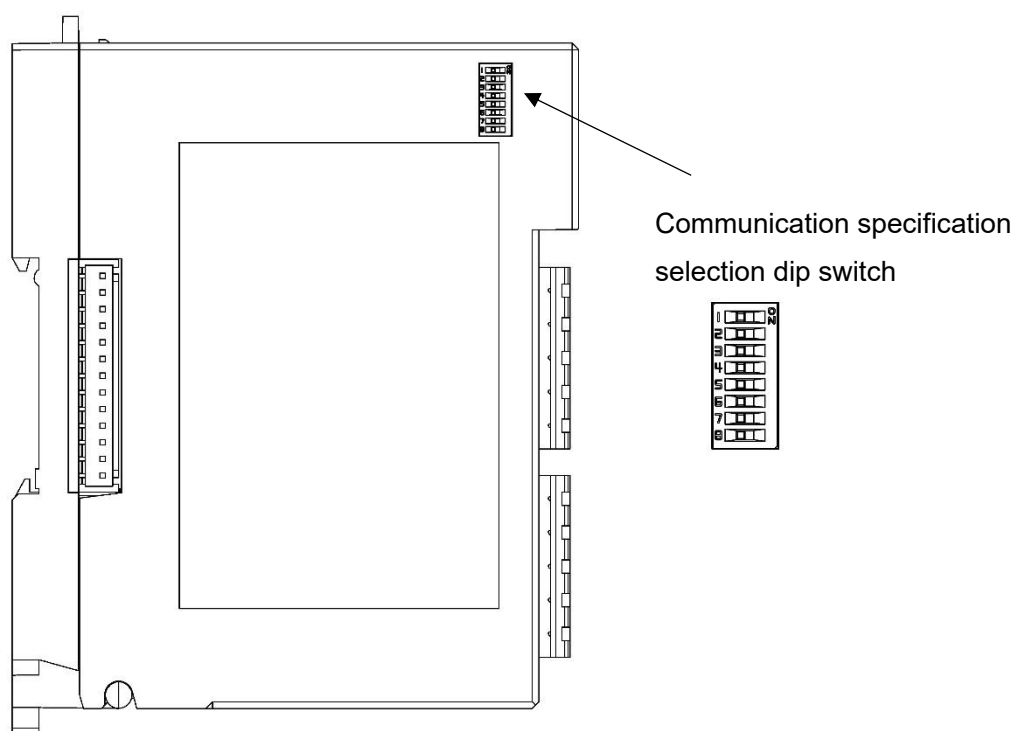

(Fig. 5.1.1-1)

Select the communication speed, data bit, parity, stop bit and communication protocol.

All are off when shipped from the factory.

- Communication speed: 57600 bps
- Data bit: 8 bits
- Parity: Even
- Stop bit: 1 bit
- Communication protocol: MODBUS specification

(1) Selection of communication speed

Communication specification selection dip switch		Communication speed
1	2	
OFF	OFF	57600 bps
ON	OFF	38400 bps
OFF	ON	19200 bps
ON	ON	9600 bps

(2) Selection of data bit, parity and stop bit

Communication specification selection dip switch			Data bit, parity and stop bit
3	4	5	
OFF	OFF	OFF	8 bits, Even, 1 bit
ON	OFF	OFF	8 bits, Even, 2 bits
OFF	ON	OFF	8 bits, Odd, 1 bit
ON	ON	OFF	8 bits, Odd, 2 bits
OFF	OFF	ON	8 bits, None, 1 bit
ON	OFF	ON	8 bits, None, 2 bits

(3) Selection of communication protocol

Communication specification selection dip switch	Communication protocol
6 (*)	
OFF	MODBUS specification
ON	SIF specification

(*): Valid for QTC1-RP (with power supply / upper communication function)

Dip switches No.7 and No.8 does not use. Leave it OFF.


5.1.2 Selection of Module Address

Caution

When SIF specification is selected in "Selection of communication protocol (P.5-2)" or when auto balance control function is selected in "Extension function selection (P.8-31)", select module addresses from 1 to consecutive numbers.

If select MODBUS specification, select any number from 0 to F (1 to 16).

The module address is selected with the rotary switch.

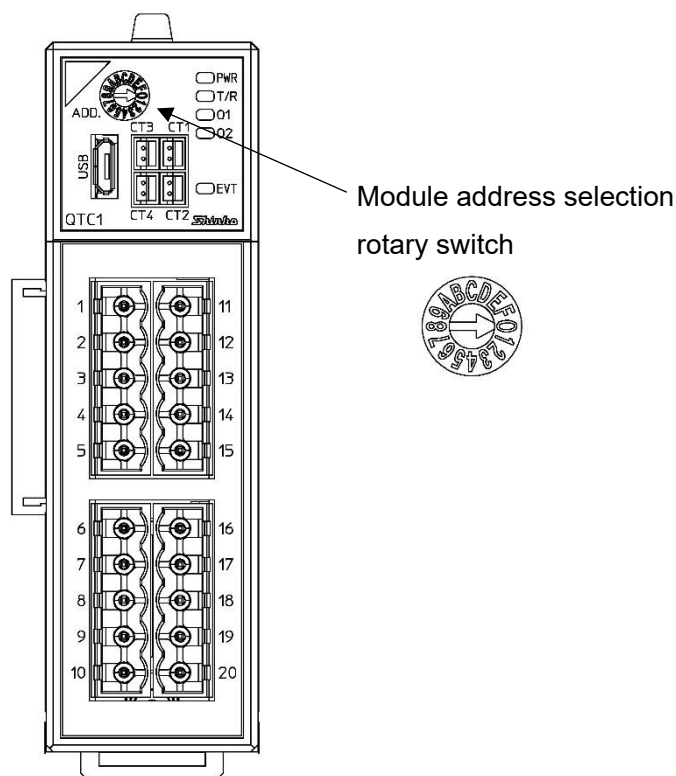

(Fig. 5.1.2-1)

Use a small flat blade screwdriver to select the module address.


The value obtained by adding 1 to the value of the selected rotary switch becomes the module address.

Module address: 0 to F (1 to 16)

Rotary switch	0	1		9	A	B		F
Module address	1	2		10	11	12		16

5.1.3 Setting of CUnet communication specification

The CUnet communication specifications are set by the dip switches (SW10, SW11) on the base part.

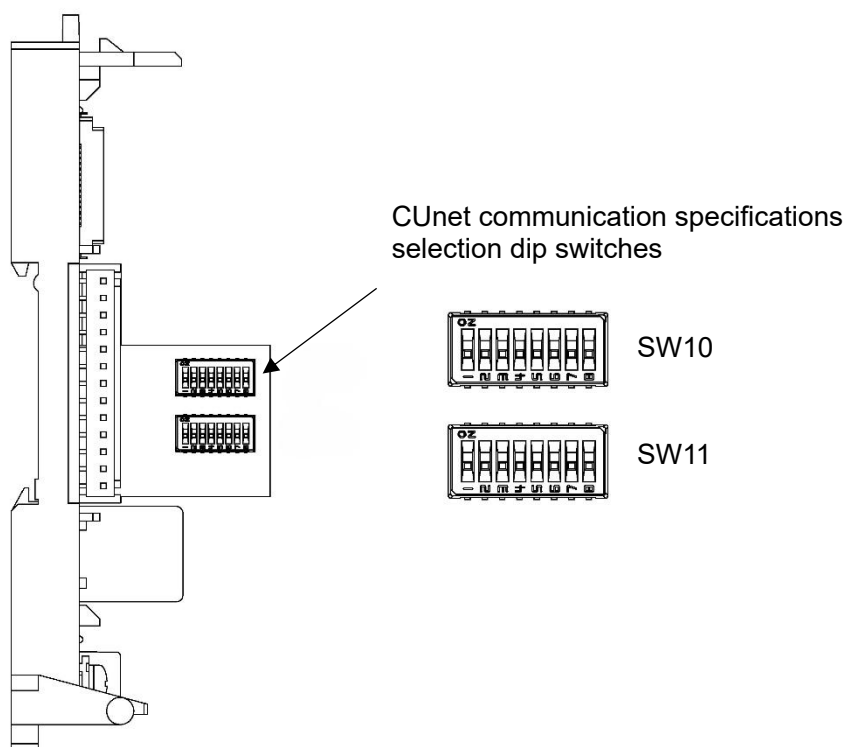

(Fig. 5.1.3-1)

SW	No.	State		Factory default
SW10	1	Station address setting	Bit0 ON: Enable, OFF: Disable	Disable
	2		Bit1 ON: Enable, OFF: Disable	Disable
	3		Bit2 ON: Enable, OFF: Disable	Disable
	4		Bit3 ON: Enable, OFF: Disable	Disable
	5		Bit4 ON: Enable, OFF: Disable	Disable
	6		Bit5 ON: Enable, OFF: Disable	Disable
	7	Communication speed setting	7:OFF 8:OFF 12Mbps	12 Mbps
	8		7:ON 8:OFF 6Mbps 7:OFF 8:ON 3Mbps 7:ON 8:ON Disable (12 Mbps)	
SW11	1	Master address setting	Bit0 ON: Enable, OFF: Disable	Disable
	2		Bit1 ON: Enable, OFF: Disable	Disable
	3		Bit2 ON: Enable, OFF: Disable	Disable
	4		Bit3 ON: Enable, OFF: Disable	Disable
	5		Bit4 ON: Enable, OFF: Disable	Disable
	6		Bit5 ON: Enable, OFF: Disable	Disable
	7	Number of occupied (OWN) items selection(*)	7: OFF 8: OFF 1 item	1 item
	8		7: ON 8: OFF 2 items 7: OFF 8: ON 3 items 7: ON 8: ON 4 items	

(*): The following items are allocated to global memory for each module.

Number of occupied (OWN) items	QTC1-R	
	Read item	Write item
1	PV: 03E8-03EB	SV: 0018-001B
2	Status flag 1: 03F4-03F7	Control Allowed/Prohibited: 0004-0007
3	MV: 03EC-03EF	Auto/Manual control: 0010-0013
4	SV: 03F0-03F3	Manual control MV: 0014-0017

Refer to “11. Communication Command List” for details.


6 Mounting



Caution

- When mounting or removing this instrument, be sure to turn off the power supply to this instrument.
- Mount the DIN rail horizontally.
- This instrument fits the following DIN rails.


Top hat rail TH35 JIS C 2812-1988

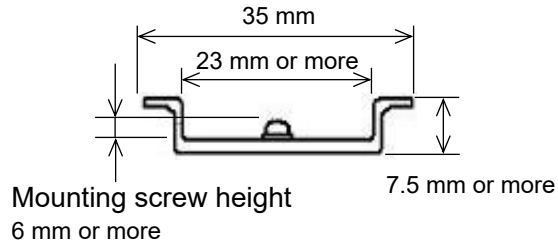

Width: 35 mm
Height: 7.5 mm or more
Groove width: 23 mm or more
DIN rail mounting screw height:
6 mm or more
(For DIN rail height 7.5 mm)

(Fig. 6-1)

- If this instrument is mounted in a position susceptible to vibration or shock, mount commercially available stopper at both ends of the instrument.
Recommended stopper: HDV-3, manufactured by TOYOGIKEN CO., LTD.
- When installing, make sure that the orientation (upper and lower) of this instrument is correct.
- When mounting or removing this instrument on the DIN rail, it must be tilted slightly
Secure a space of 50 mm or more in the vertical direction of the instrument, considering the wiring space of the power supply/communication line and heat dissipation.

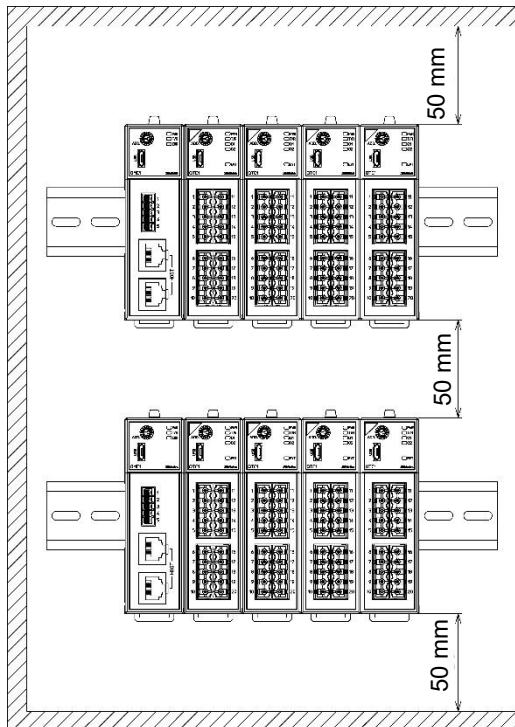

(Fig. 6-2)


6.1 Selection of Location

Ensure the mounting location corresponds to the following conditions:

- A minimum of dust, and an absence of corrosive gases
 - No flammable, explosive gases
 - No mechanical vibrations or shocks
 - No exposure to direct sunlight, an ambient temperature of -10 to 50°C (14°F to 122°F) that does not change rapidly, and no icing
 - An ambient non-condensing humidity of 35 to 85%RH
 - No large capacity electromagnetic switches or cables through which large current is flowing
 - No water, oil or chemicals or the vapors of these substances can come into direct contact with the unit.
 - When installing this unit within a control panel, please note that ambient temperature of this unit – not the ambient temperature of the control panel – must not exceed 50°C (122°F). Otherwise the life of electronic components (especially electrolytic capacitor) may be shortened.
- * Avoid setting this instrument directly on or near flammable material even though the case of this instrument is made of flame-resistant resin.

6.2 External Dimensions (Scale: mm)


6.2.1 Control Module QTC1-R

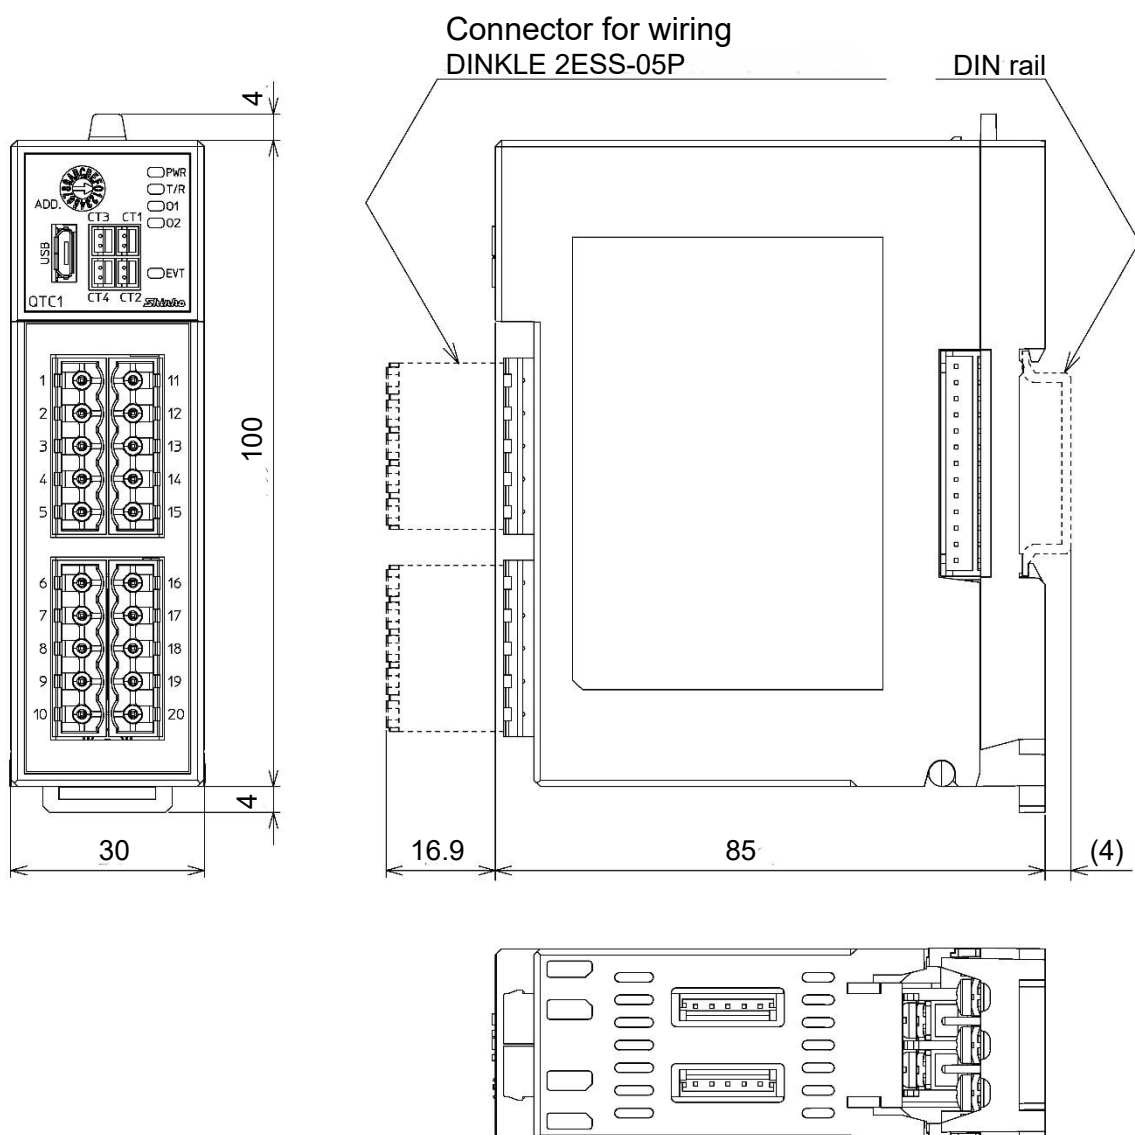


(Fig. 6.2.1-1)

6.2.2 CT (Current transformer)

CTL-6-S-H

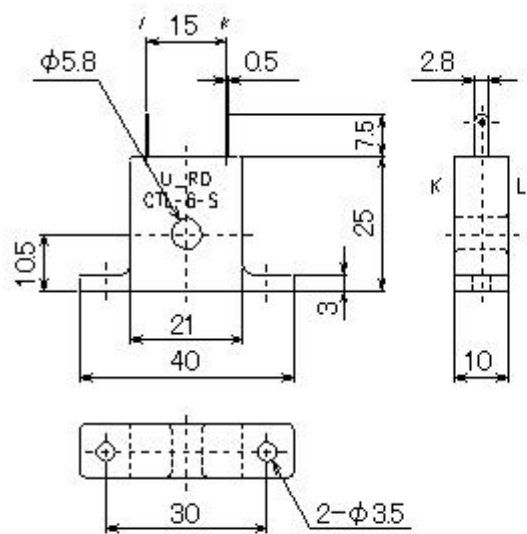

CTL-12-S36-10L1U

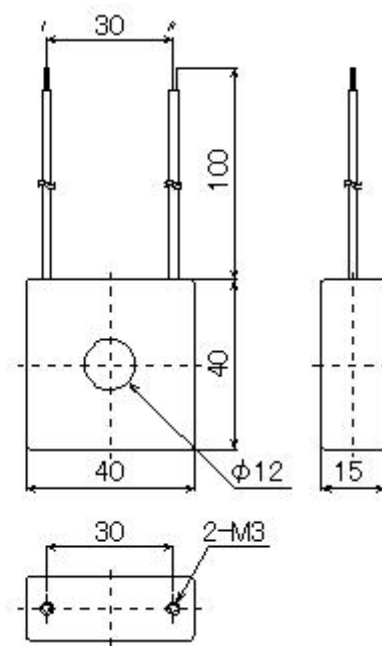


(Fig. 6.2.2-1)


6.3 Mounting

Mounting to the DIN rail

- ① Lower the lock lever of this instrument. (The lock lever of this instrument has a spring structure, but if lower it in the direction of the arrow until it stops, it will be locked in that position.)
- ② Hook the part ② of this instrument onto the top of the DIN rail.
- ③ Insert the lower part of this instrument with the part ② as a fulcrum.
- ④ Raise the lock lever of this instrument.
Make sure it is fixed to the DIN rail.

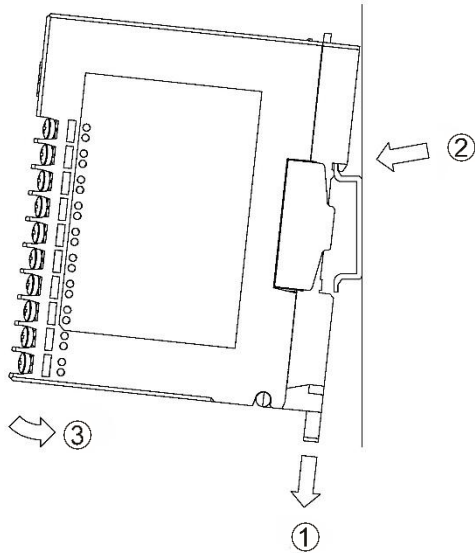


(Fig. 6.3-1)

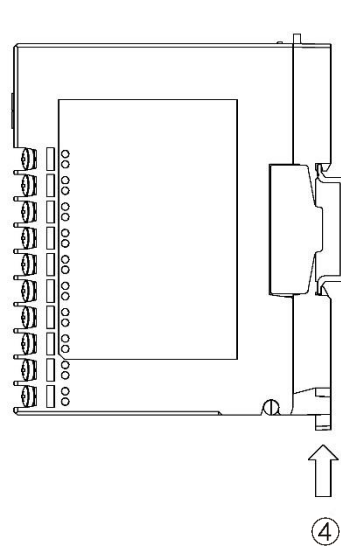

(Fig. 6.3-2)

Removal from the DIN rail

- ① Insert a flat blade screwdriver into the lock lever of this instrument and lower the lock lever until it stops.
- ② Remove this instrument from the DIN rail by lifting it from below.

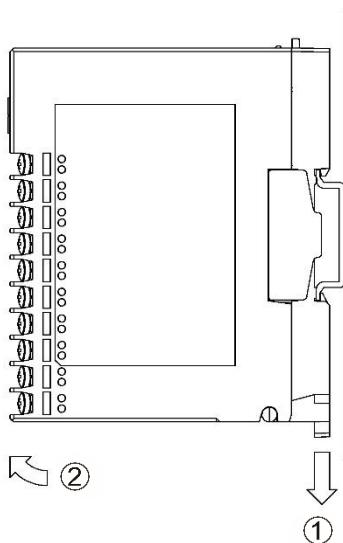


(Fig. 6.3-3)

Mounting multiple modules to the DIN rail


This section describes an example of mounting multiple control modules QTC1-R on the DIN rail.

- ① Remove the protective sticker on the right side of the QTC1-RP.
- ② Lower the lock lever of the QTC1-R0, and mounting the QTC1-R0 to the DIN rail.
- ③ Slide the QTC1-R0 to the left and connect the connectors to each other.
- ④ Raise the lock lever of this instrument.

Make sure it is fixed to the DIN rail.

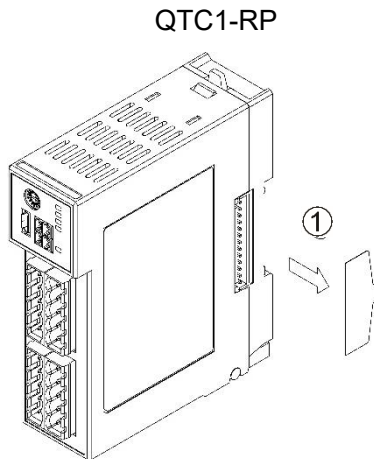


(Fig. 6.3-4)

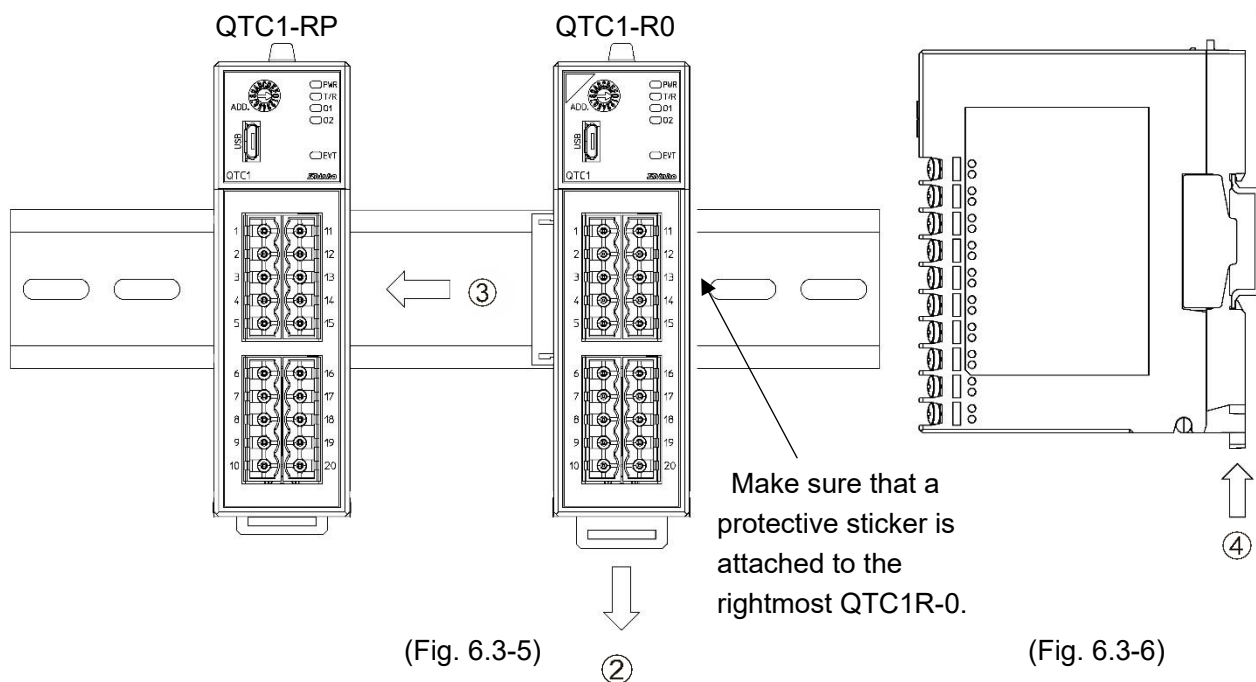

This section describes an example of mounting communication expansion module QMC1-C□ and control module QTC1-R0 on the DIN rail.


- ① Lower the lock lever of the QTC1-R0, and mounting the QTC1-R0 to the DIN rail.
- ② Slide the QTC1-R0 to the left and connect the connectors to each other.
- ③ Raise the lock lever of the QTC1-R0.
Make sure it is fixed to the DIN rail..

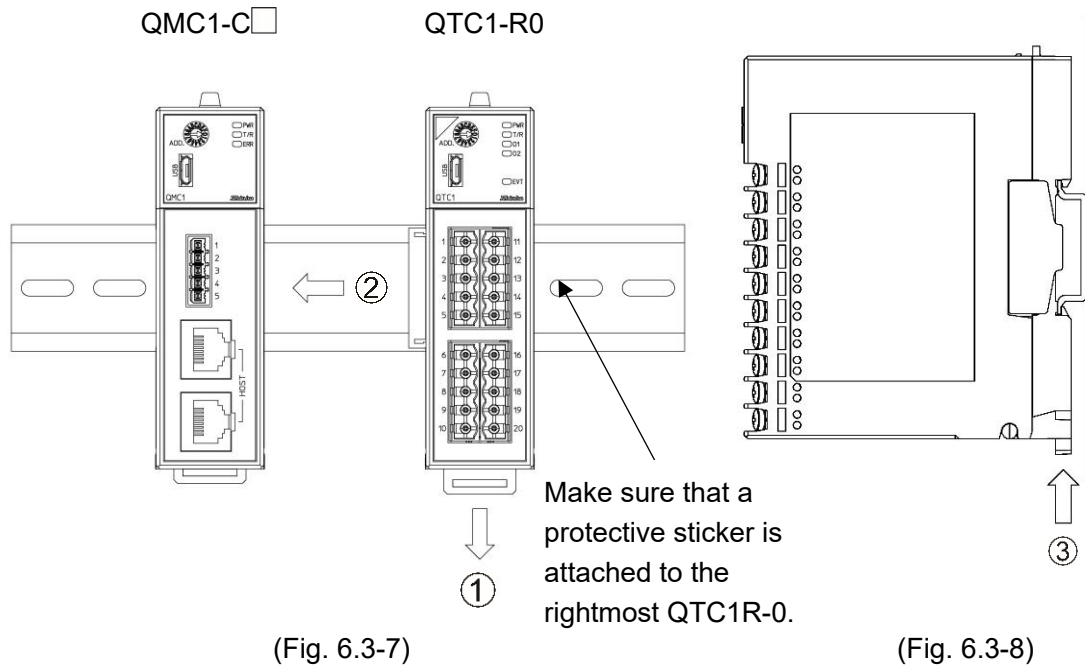

Removal multiple modules from the DIN rail

This section describes an example of removing multiple control modules QTC1-R0 on the DIN rail.

- ① Insert a flat blade screwdriver into the lock lever of the QTC1-R0 and lower the lock lever until it stops.
- ② Slide the QTC1-R0 to the right side and disconnect it from the connector, then remove it from the DIN rail.

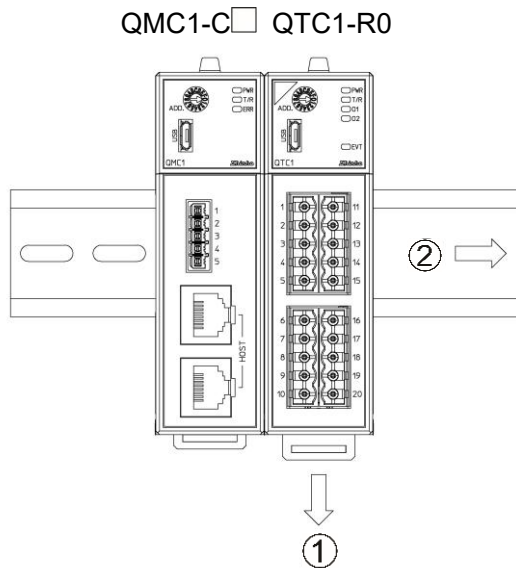

(Fig. 6.3-9)

7 Wiring



Warning

Turn off the power supply to this instrument before wiring.

If you work while the power is supplied, you may get an electric shock, which could result in an accident resulting in death or serious injury.


7.1 Recommended Terminal and Recommended Rod Terminal

Recommended terminal

Use a solderless terminal with an insulation sleeve in which an M3 screw fits as shown below.

Ring-type for power supply, serial communication section and CUnet communication section.

Solderless Terminal	Manufacturer	Model	Compatible wire size	Tightening torque
Ring-type	NICHIFU TERMINAL INDUSTRIES CO., LTD.	TMEX1.25-3	AWG22 to 16	Input/output section: 0.63 N•m Power supply section: 0.5 N•m Serial communication section: 0.3 N•m CUnet communication section: 0.3 N•m
		TMEX2-3S	AWG16 to 14	
	J.S.TMFG.CO.,LTD.	V1.25-3	AWG22 to 16	
		V2-MS3	AWG16 to 14	

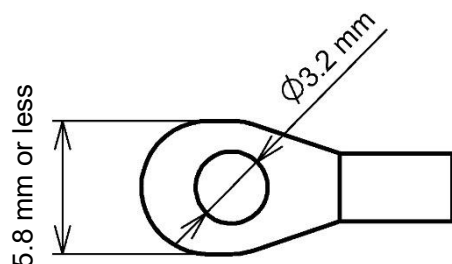

(Fig. 7.1-1)


Recommended rod terminal

Use PHOENIX CONTACT brand rod terminals with insulating sleeves and crimping tools for the input/output sections.

Model	AWG	Crimping tool
AI 0,25-10 YE	AWG24	ZA3 CRIMPFOX UD 6
AI 0,34-10 TQ	AWG22	
AI 0.5-10 WH	AWG20	
AI 0,75-10 GY or AI 1-10 RD	AWG18	
AI 1,5-10 BK	AWG16	
AI 2,5-10 BU	AWG14	
AI 4-10 GY	AWG12	


7.2 Terminal Arrangement

7.2.1 Input and Output Terminal Arrangement

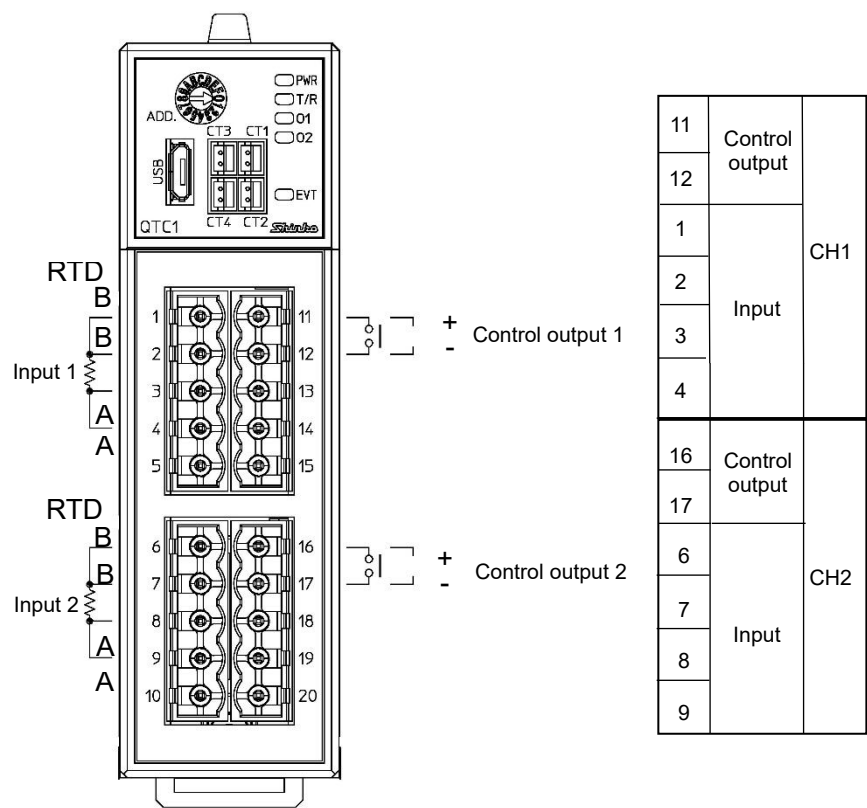


(Fig. 7.2.1-1)

7.2.2 Power Supply and Serial Communication Terminal Arrangement

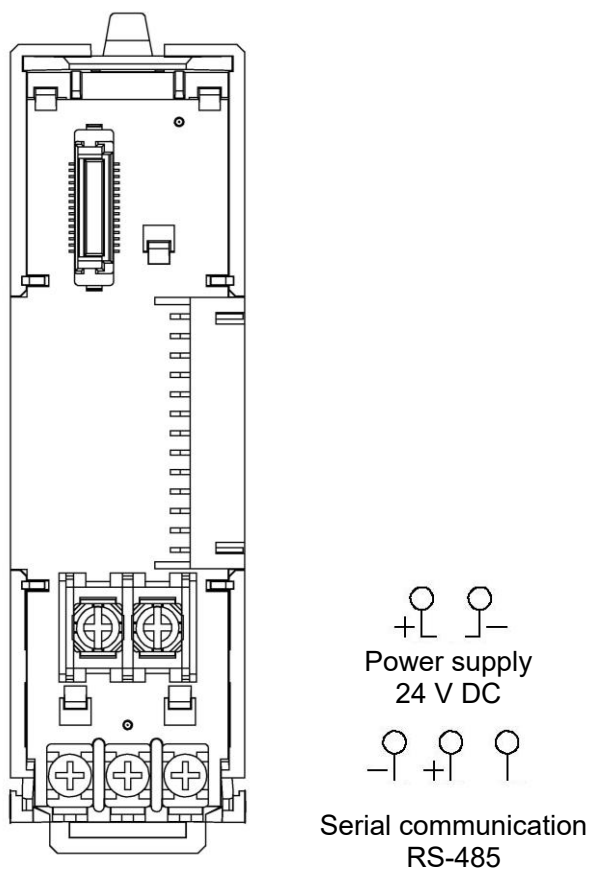

(Fig. 7.2.2-1)


7.2.3 Power Supply and CUnet Communication Terminal Arrangement

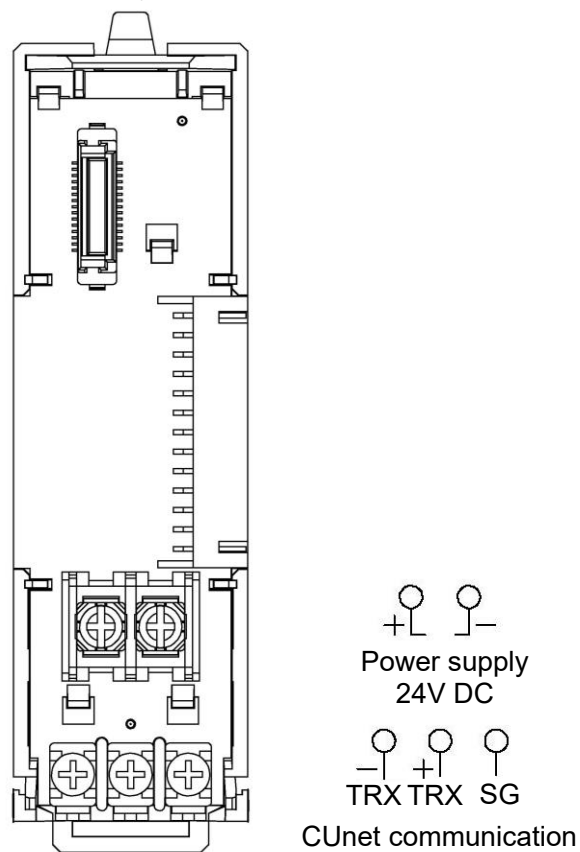

(Fig. 7.2.3-1)


7.2.4 Event Input and Output Terminal Arrangement

Event output: 2 points

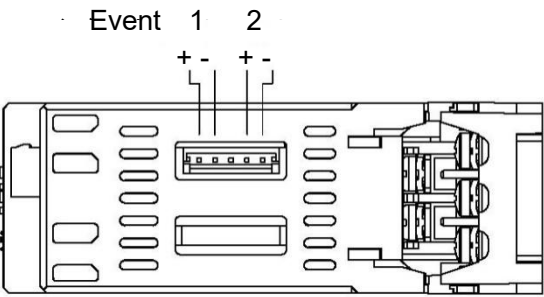

(Fig. 7.2.4-1)

Event output: 4 points

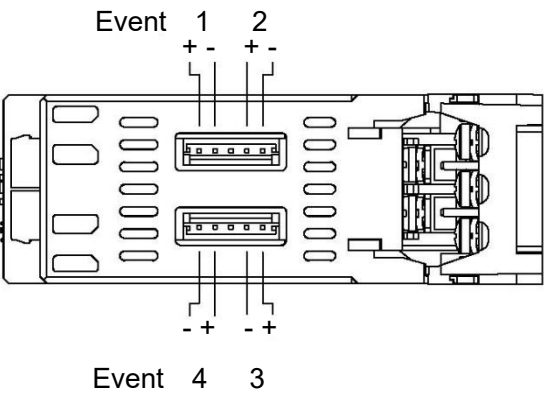

(Fig. 7.2.4-2)

7.3 Wiring


7.3.1 Wiring for Power Supply and Serial Communication / CUnet Communication

The terminal block for power supply and serial communication / CUnet communication is located on the base of this instrument.

Wiring by the following procedure.

(1) Case removal


- ① Push the release lever on the top of this instrument to unlock it.
- ② Remove the case.

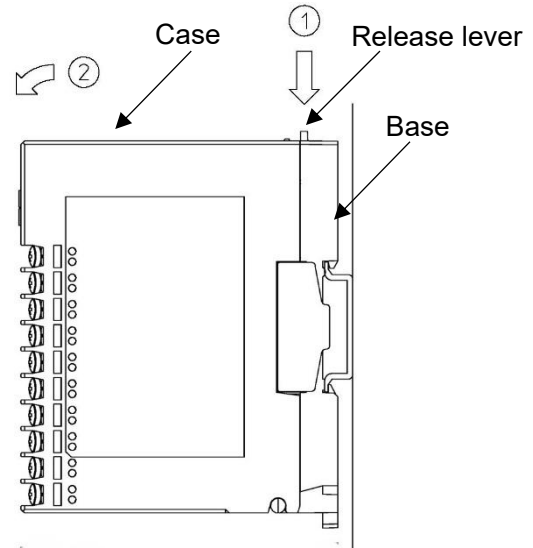

(Fig. 7.3.1-1)

(2) Wiring


Serial communication

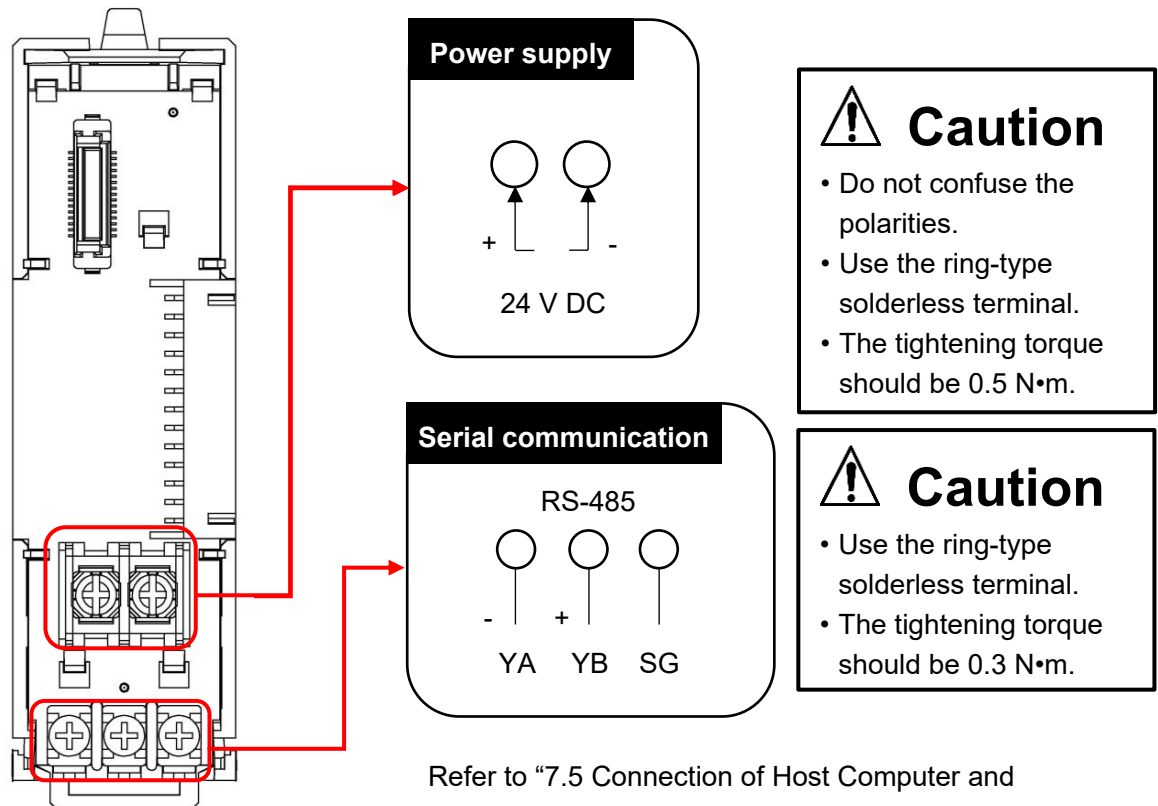

Refer to “7.5 Connection of Host Computer and Control Module QTC1-R (P.7-13)” for the serial communication

(Fig. 7.3.1-2)


About termination resistance

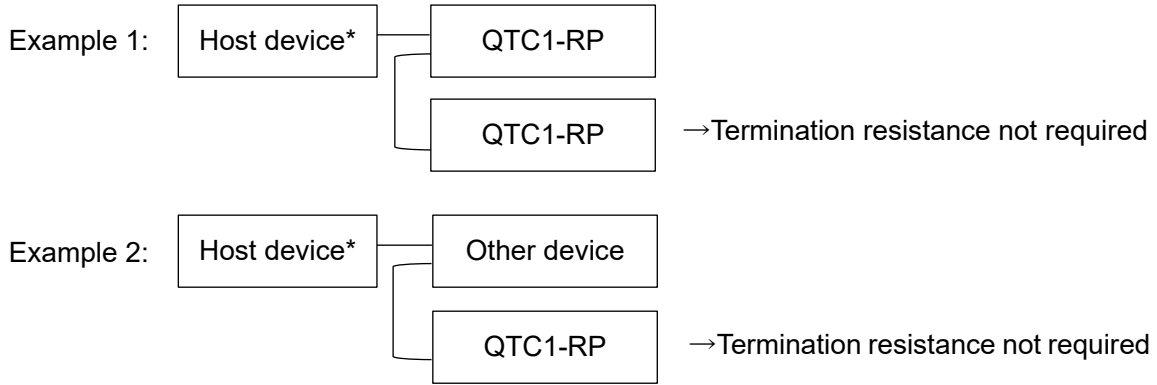

* Install the termination resistance of the host device in accordance with the instruction manual of the host device.

(Fig. 7.3.1-3)

CUnet communication

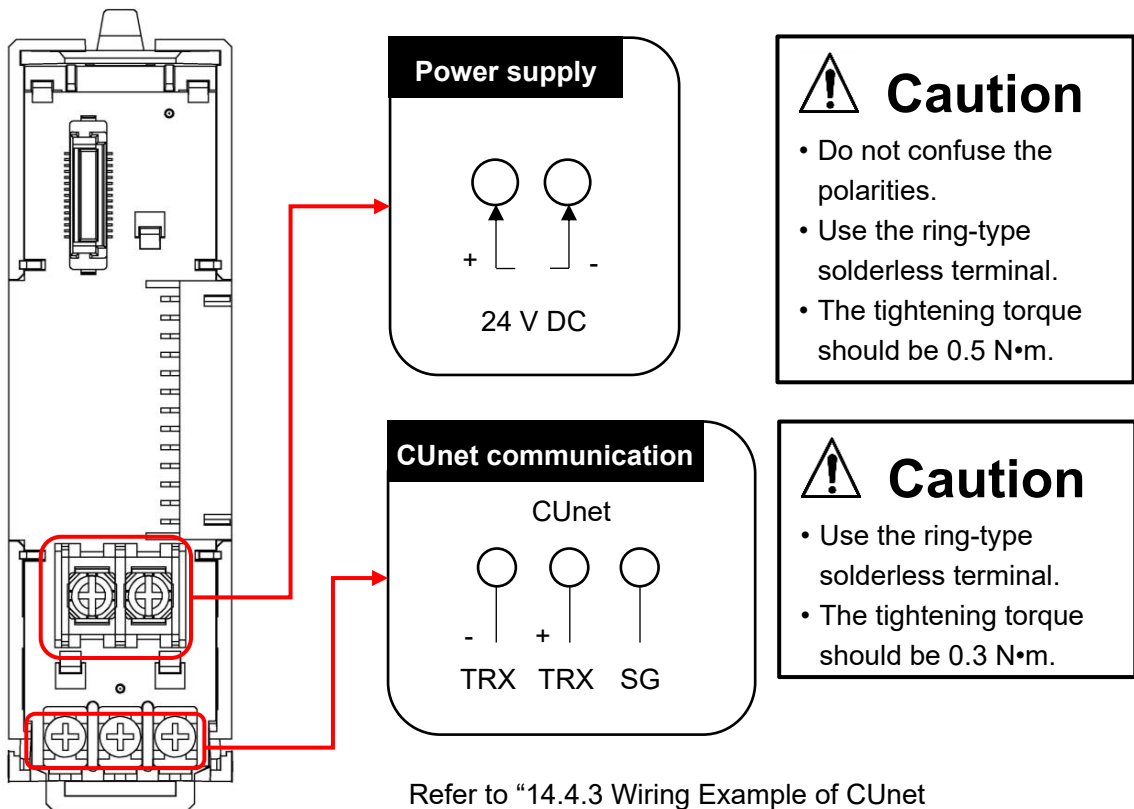


Refer to “14.4.3 Wiring Example of CUnet Communication Line” (P.14-11) for the wiring of CUnet communication.

(Fig. 7.3.1-4)


(3) Case mounting

- ① Hook the case on the lower part ① of this instrument.
 - ② Mount the case so that the lower part ① of this instrument is the fulcrum and covers the release lever.
- There is a clicking sound.

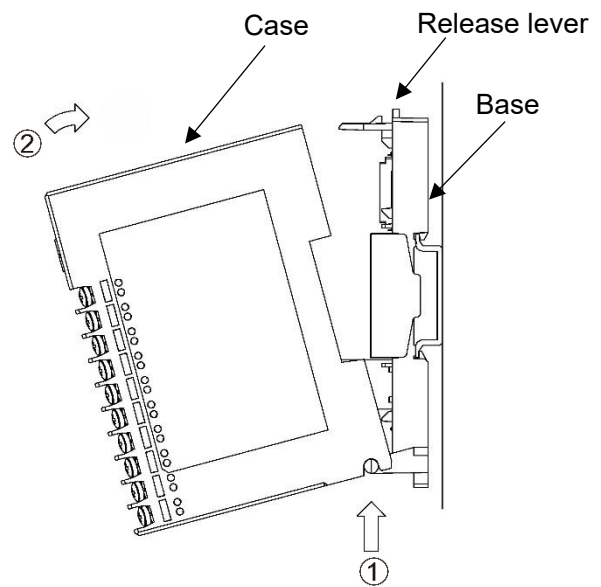

(Fig. 7.3.1-5)


7.3.2 Wiring for Input and Output

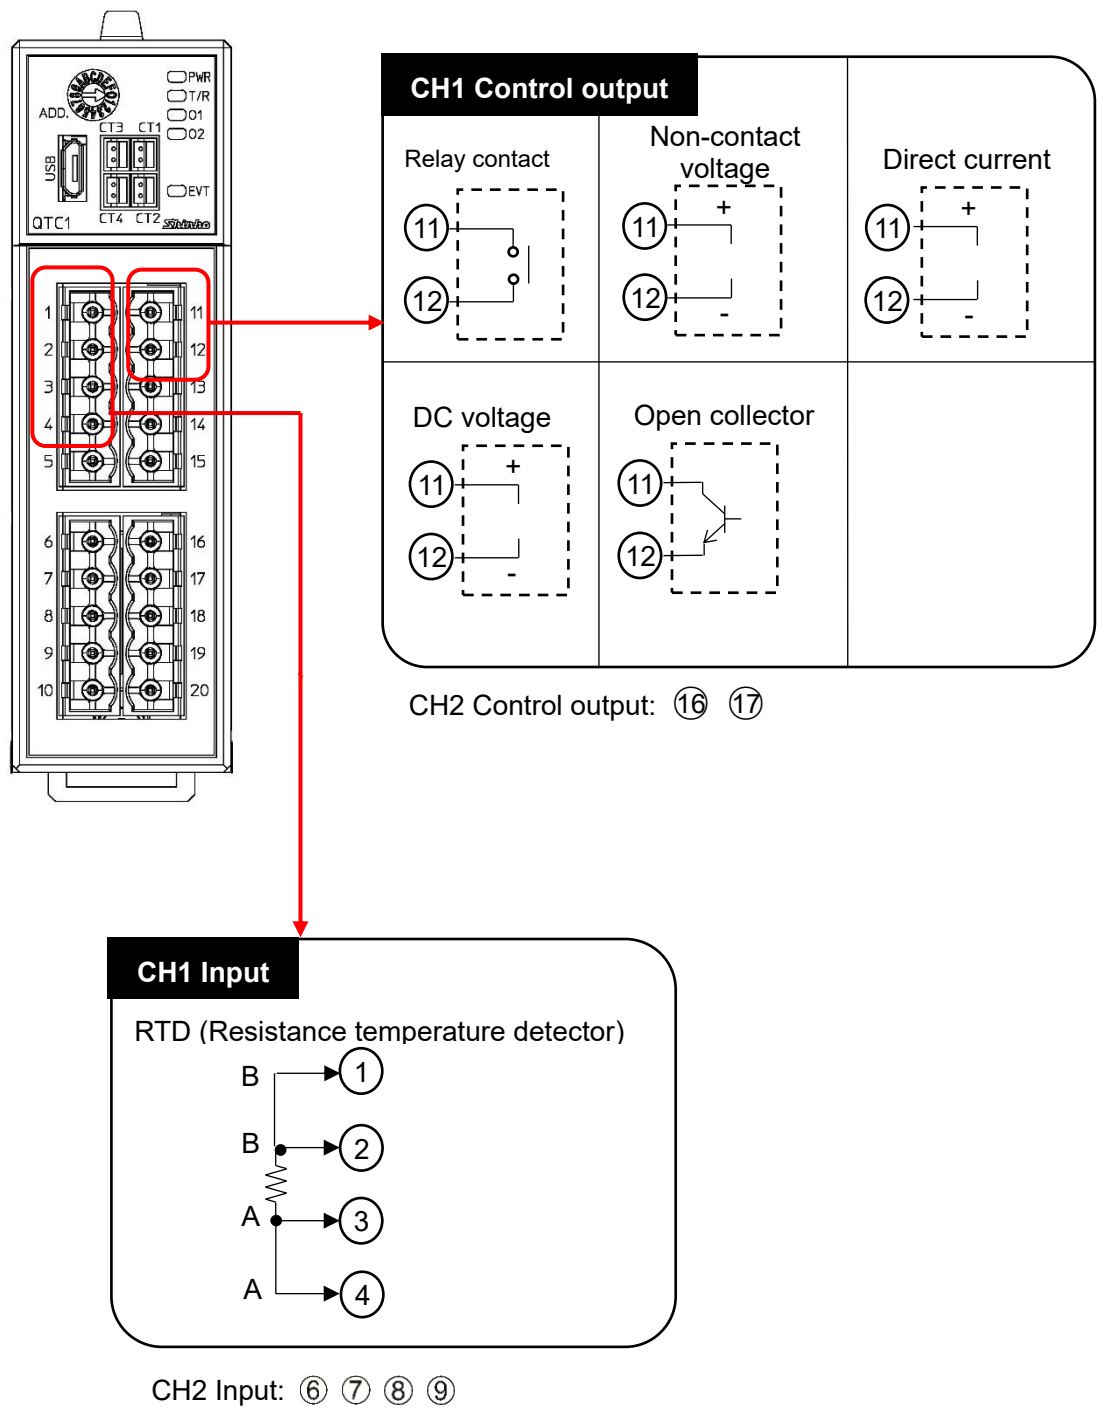

(Fig. 7.3.2-1)


7.3.3 Wiring for CT

For single-phase

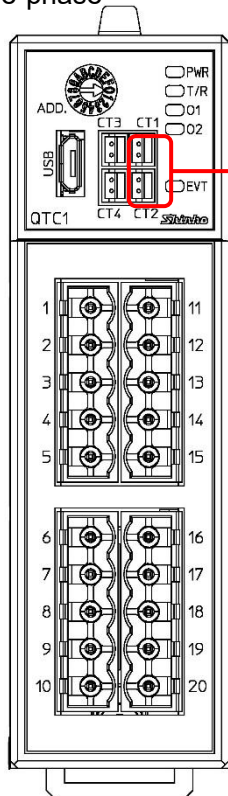


CT Input (Single-phase)

CH1 heater burnout alarm CT1 input: CT1 or CT3

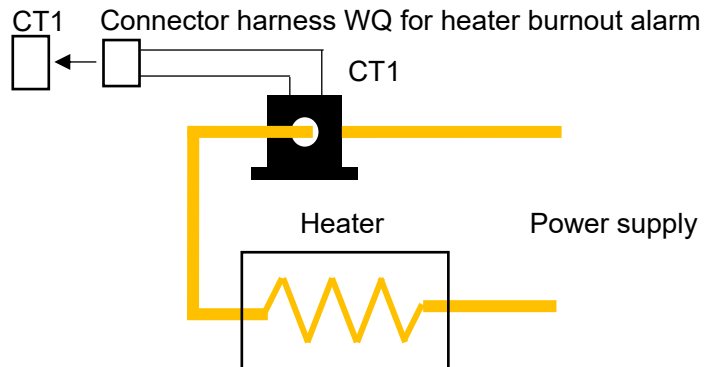


CH2 heater burnout alarm CT1 input: CT2 or CT4

For 3-phase

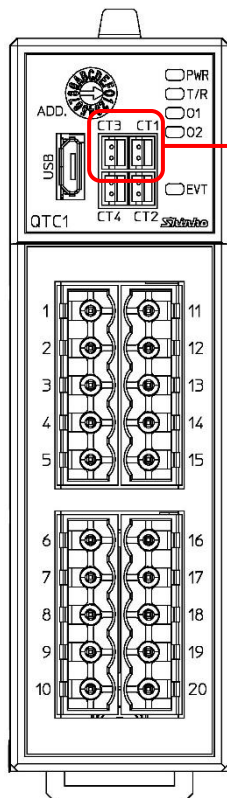

CT Input (3-phase)

CH1 heater burnout alarm CT1 input: CT1, CT2 input: CT3

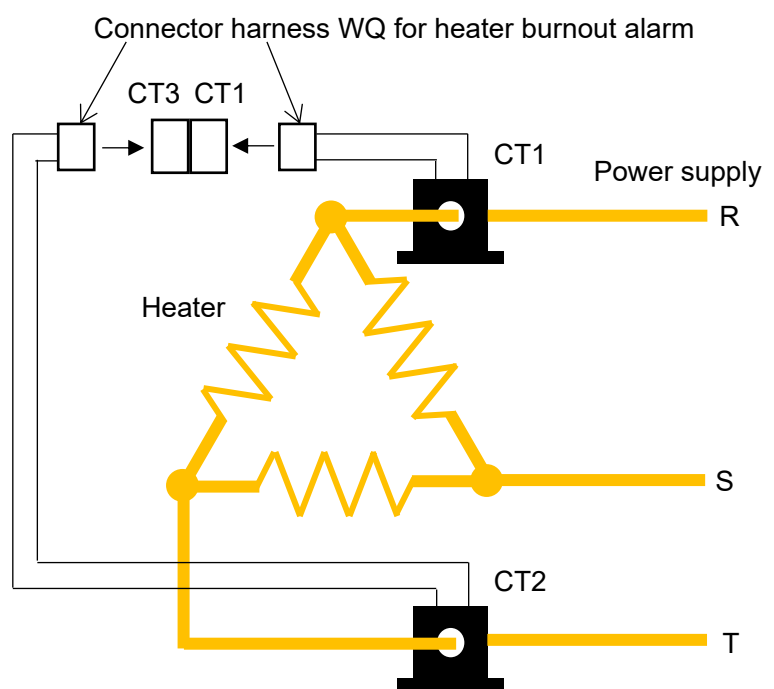


CH2 heater burnout alarm CT1 input: CT2, CT2 input: CT4

(Fig. 7.3.3-1)

7.3.4 Wiring for Event Input and Event Output


Using the connector harness EVQ for event input/output.

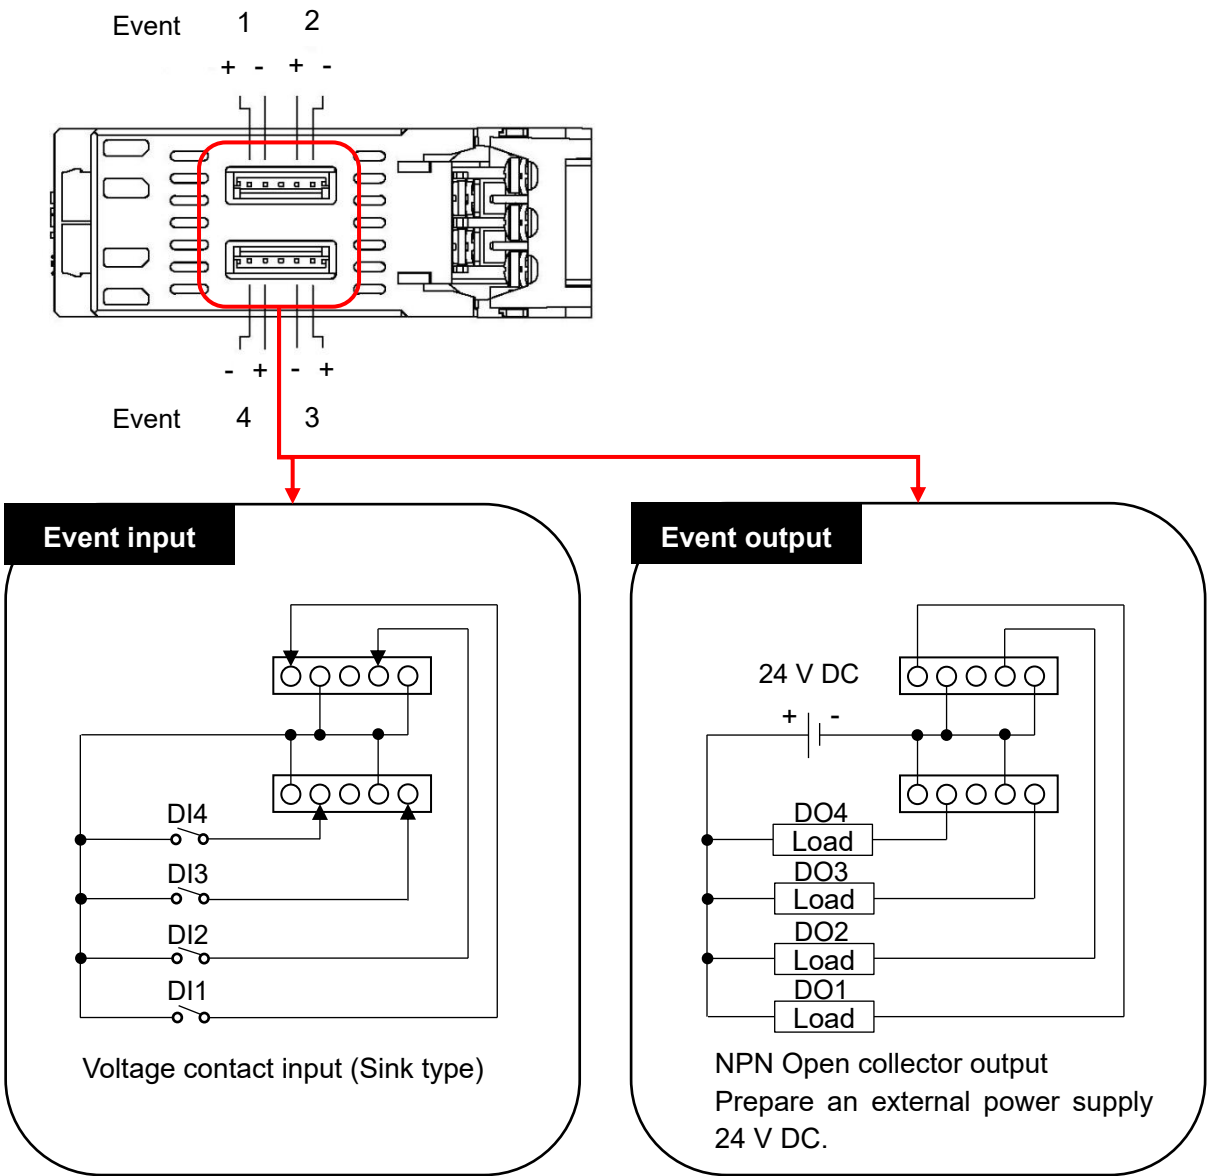

(Fig. 7.3.4-1)

7.4 Connection of Host Computer and Control Module QTC1-R


7.4.1 Wiring Example: When Using the USB Communication Cable CMC-001-1 (Sold separately)

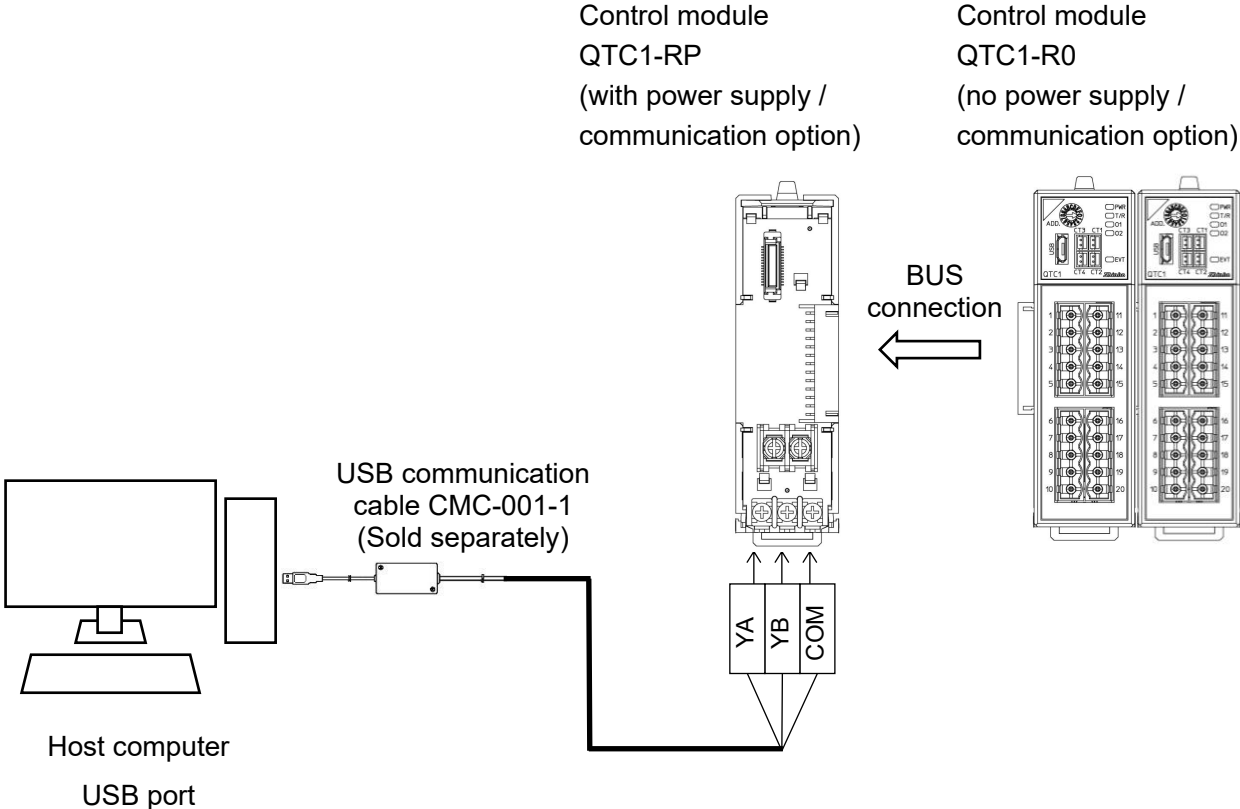

(Fig. 7.4.1-1)

7.4.2 Wiring Example When Using the Communication Converter IF-400 (Sold separately)

The communication converter IF-400 (sold separately) does not support communication speeds of 38400 bps and 57600 bps.

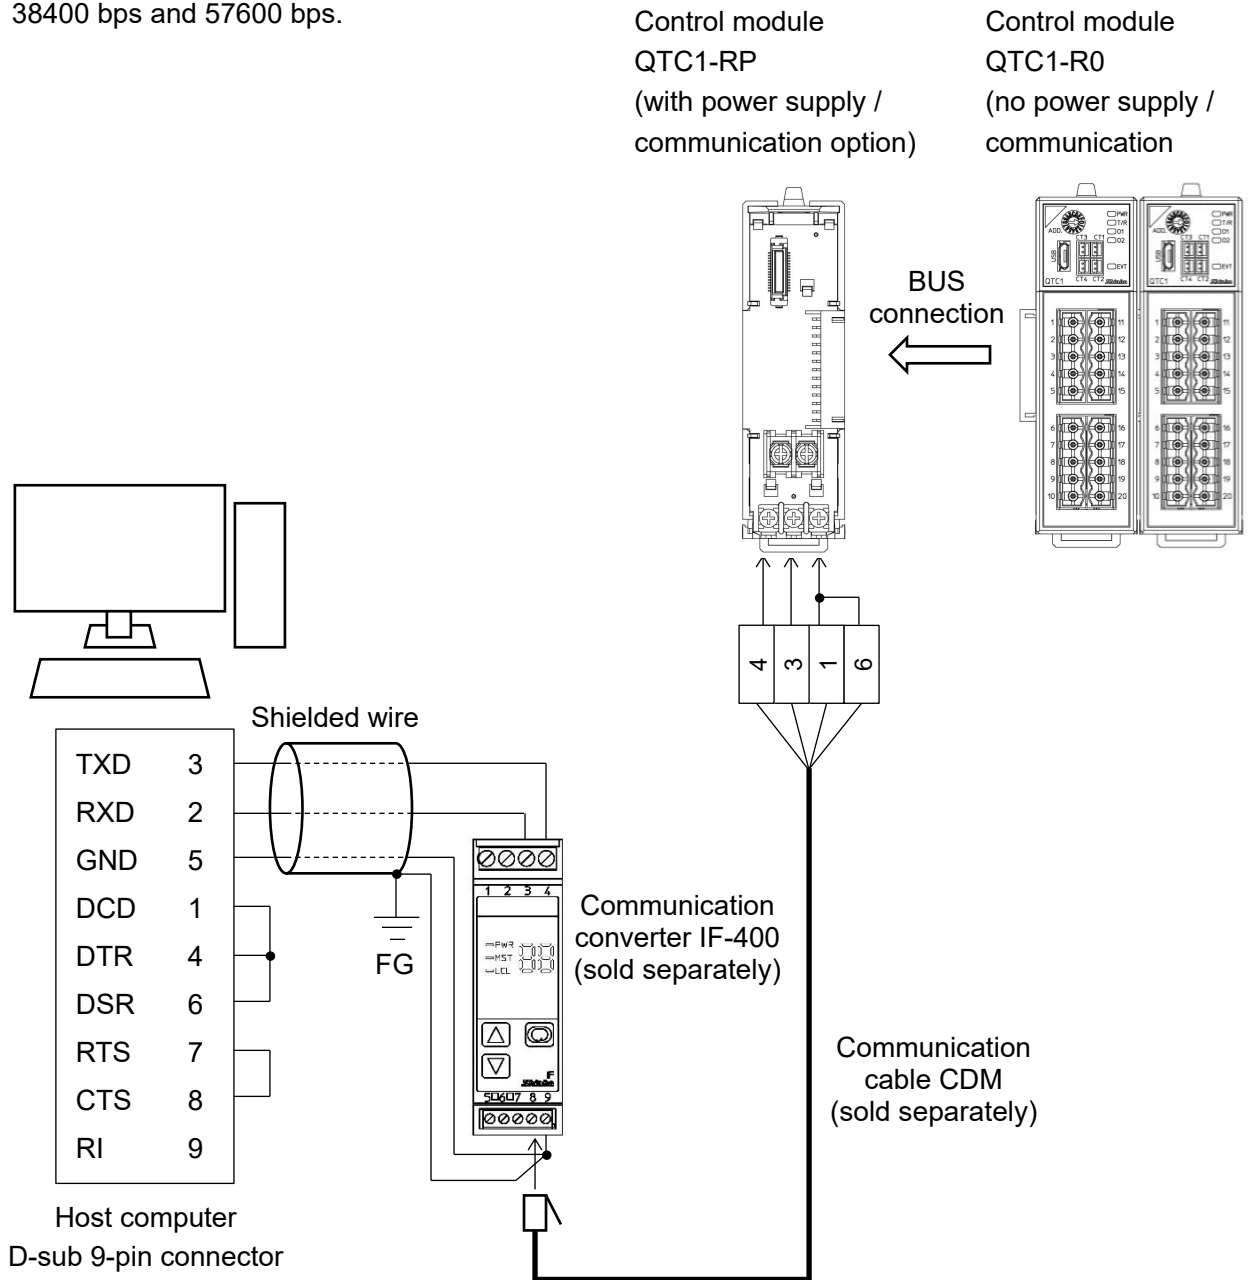

(Fig. 7.4.2-1)

Shielded wire

Connect only one side of the shielded wire to FG so that no current flows in the shield part. If both sides of the shield are connected to FG, a closed circuit will be created between the shielded wire and the ground, and a current will flow through the shielded wire, making it more susceptible to noise. Be sure to ground FG.

Recommended cable: OTSC-VB 2PX0.5SQ by Onamba Co., Ltd. or equivalent (use twisted pair shielded wire).

Termination resistor (terminator)

The communication converter IF-400 (sold separately) has a built-in termination resistor.

The termination resistor is also called a terminator. It is a resistor attached to the end of wiring when peripheral devices are connected to the host computer in a chain, and prevents signal reflection and signal disturbance at the end.

Since this instrument has a built-in pull-up resistor and pull-down resistor, no termination resistor is required on the communication line.

8 Setting of Specification



Caution

CH3 and CH4 of the setting items other than the heater burnout alarm setting do not work even if they are set.

Set the specifications.

This section describes how to set specifications using console software (SWC-QTC101M).

8.1 Preparation

8.1.1 Preparation of USB Communication Cable and Console Software

Please prepare the USB communication cable and the console software.

- USB communication cable
USB-micro USB Type-B (commercial item)
- Console software (SWC-QTC101M)
Please download from our website and install.

Click <https://shinko-technos.co.jp/e/> → Support/Download → Software


8.1.2 Connecting to Host Computer



Caution

Do not use the logging function of the console software when communicating by connecting the USB communication cable.

- (1) Connect the micro USB Type-B side of the USB communication cable to the console communication connector of this instrument.
- (2) Connect the USB plug of the USB communication cable to the USB port of the host computer.

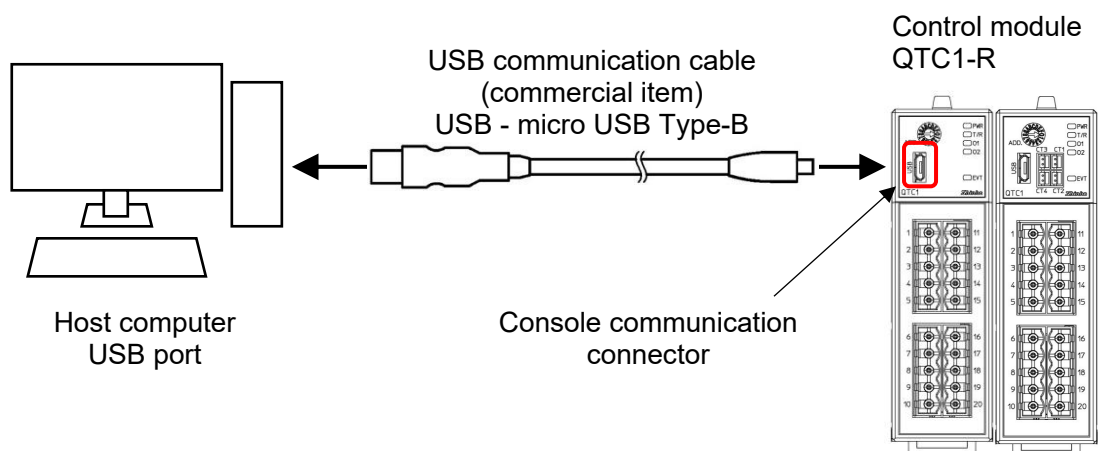

(Fig. 8.1.2-1)


(3) Checking the COM port number

Follow the procedure below to check the COM port number.


- ① Right-click "Start" → Click "Device manager" from menu.
- ② When "USB Serial Port (COM3)" is displayed in "Port (COM and LPT)", the COM port is assigned to No. 3.
Check the COM port number, and then close "Device Manager".

(4) Starting the console software (SWC-QTC101M)

- ① Start the console software (SWC-QTC101M).
Select "QTC1-R" in the Device selection.

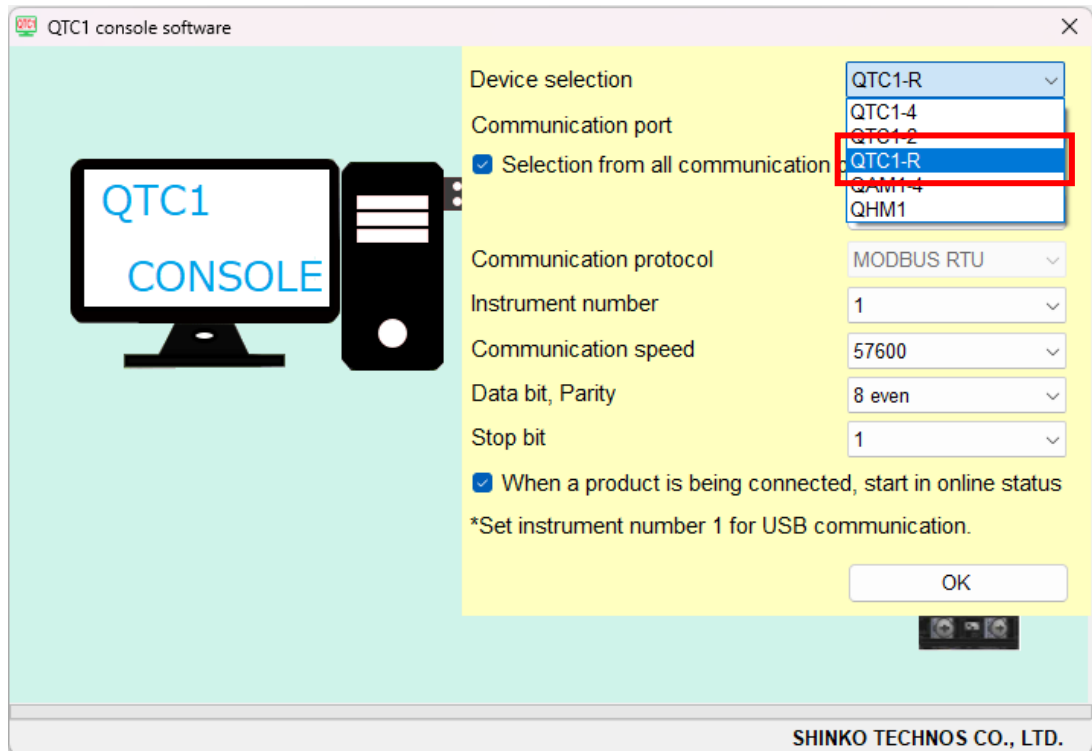


(Fig. 8.1.2-2)

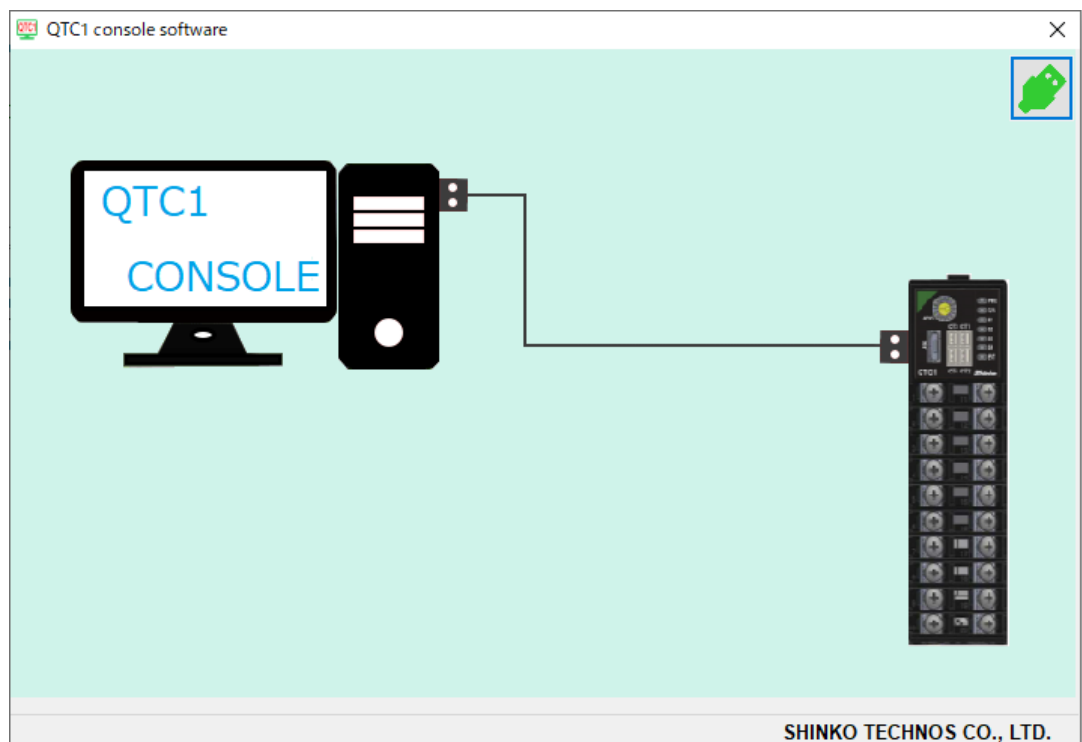


(Fig. 8.1.2-3)

- ② Click [User (U)] on the menu bar → [Communication condition (C)].
Display the communication condition setting screen.

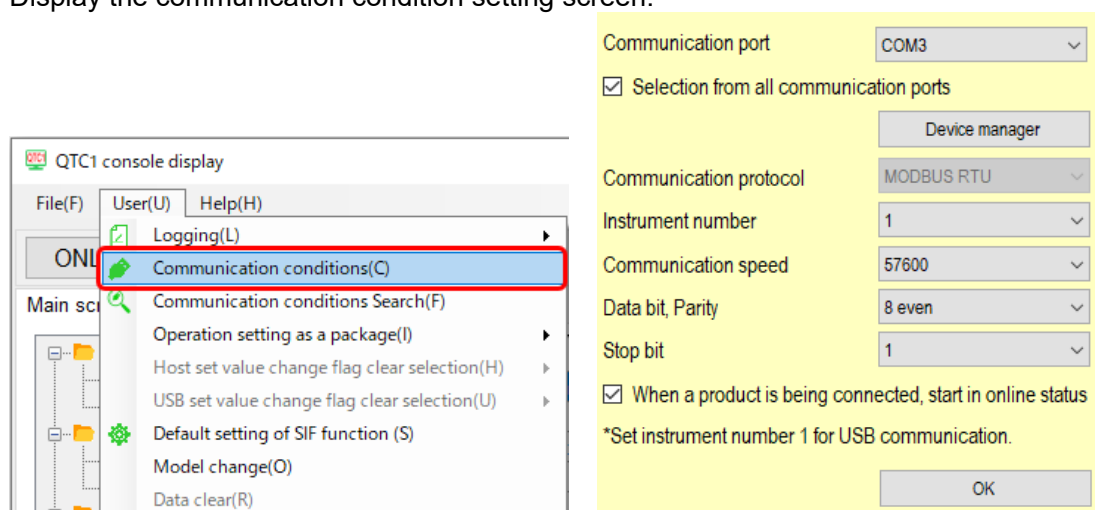

(Fig. 8.1.2-4)

*The model “QTC1-R” can also be selected from User (U) - Model change (o) in the menu bar.

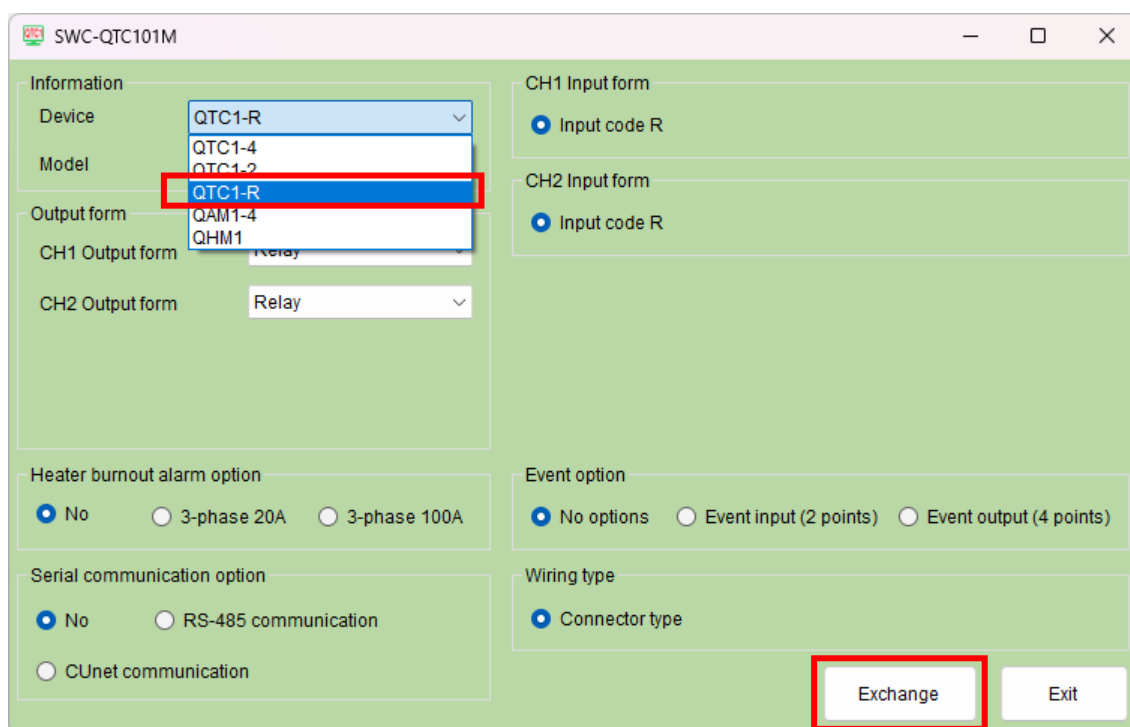


(Fig. 8.1.2-5)

- ③ Set the communication condition as shown below.


Setup Items	Setting Value
Communication port	Select the COM port number confirmed in ② of (3).
Communication protocol	MODBUS RTU

- ④ Click [OK]
 ⑤ Click [File (F)] on the menu bar → [Instrument to PC (U)].
 Read all the setting values of the connected control module QTC1-R.

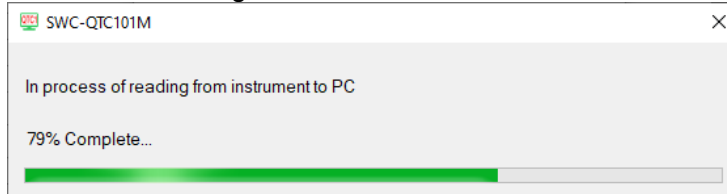

(Fig. 8.1.2-6)

- ⑥ Display the monitor value screen.

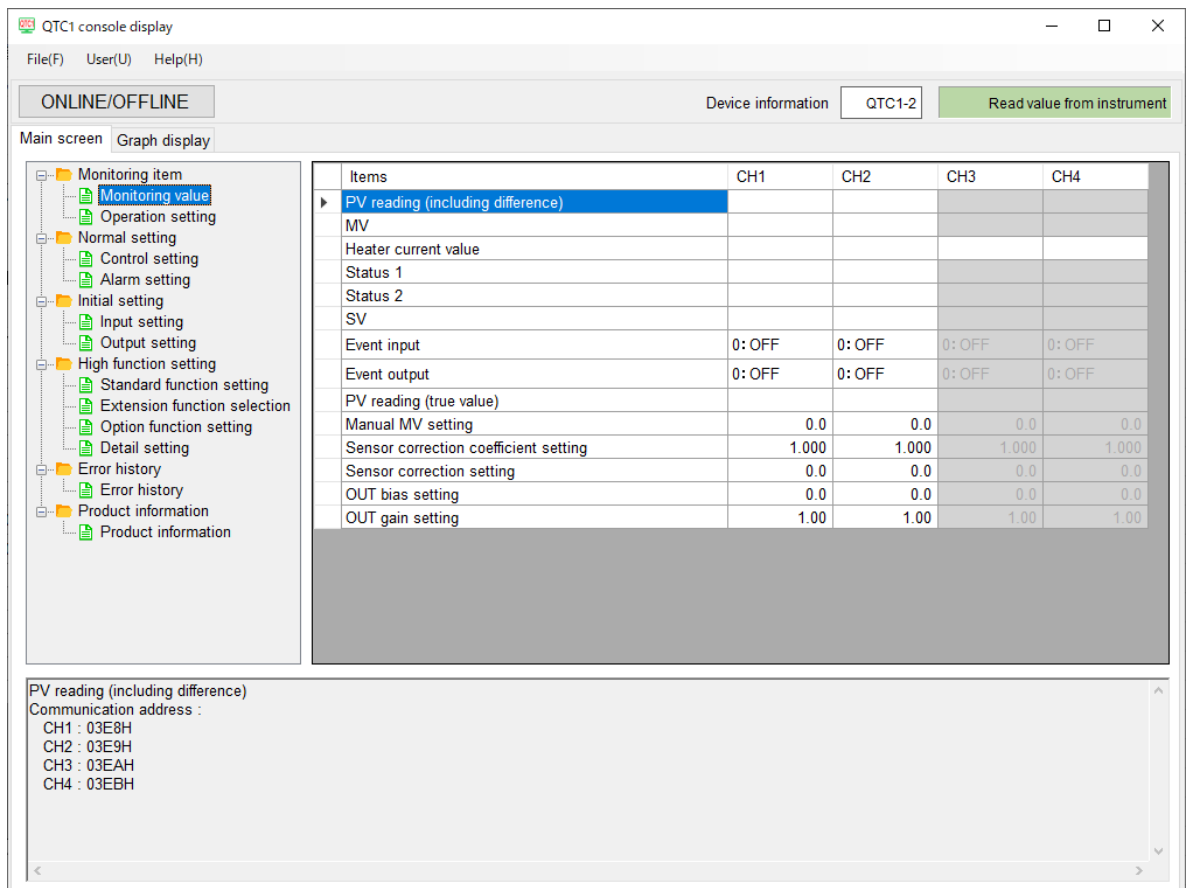

(Fig. 8.1.2-7)


The specifications are ready.

Please refer to "8.2 Specification Setting (P.8-5 to 8-40)" to set the specifications.

Setting the specifications for the second and subsequent modules


To set the specifications of the second and subsequent control modules QTC1-R, follow the procedure below.

- ① Connect the USB communication cable to the console communication connector of the second and subsequent control module QTC1-R.
- ② Click [File (F)] on the menu bar → [Instrument to PC (U)].
Read all the setting values of the connected control module QTC1-R.

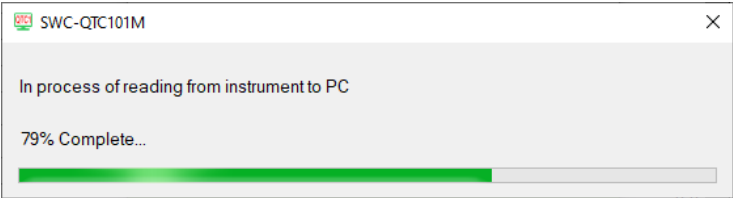

(Fig. 8.1.2-8)

- ③ Display the monitor value screen.

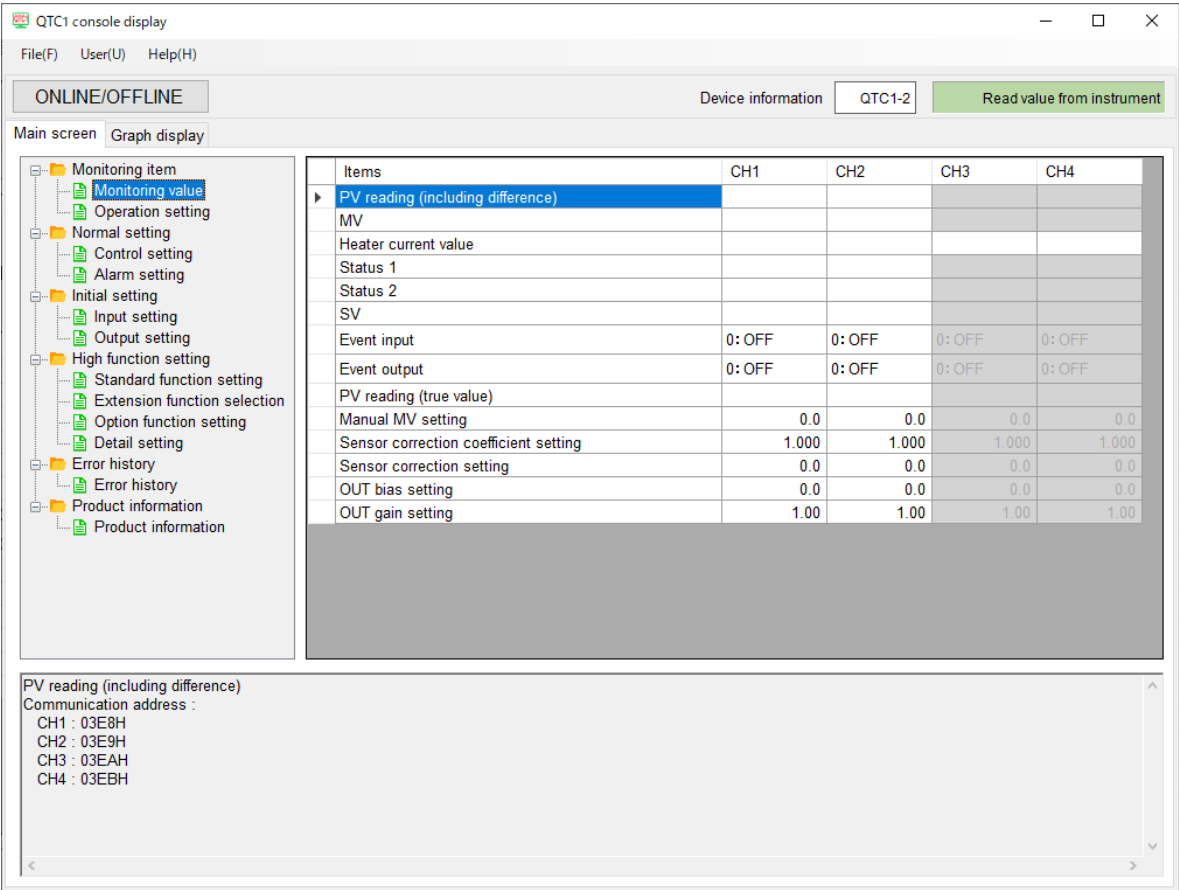

(Fig. 8.1.2-9)

Please refer to "8.2 Specification Setting (P.8-5 to 8-40)" to set the specifications.

8.2 Specification Setting


Basic operation of specification setting

Before setting the specifications, how to select the selection item and how to set the setting item are explained.

Select the selection item

This section explains how to select the selection item by using CH1 control enable/disable selection as an example.

Click on the selection item for the channel.

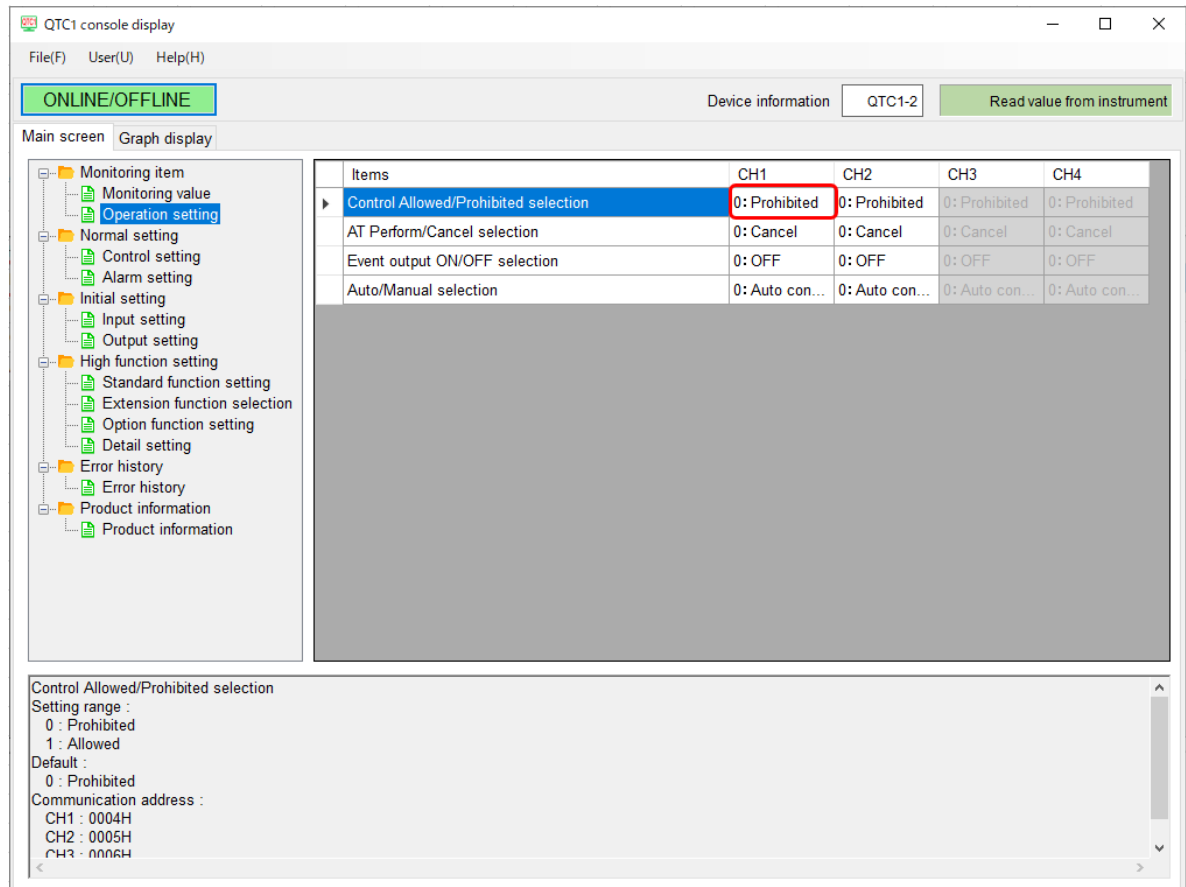


(Fig. 8.2-1)

Display the selection item list.

Click "0: Disable" or "1: Enable".


Transfer the selected contents to the control module QTC1-R.

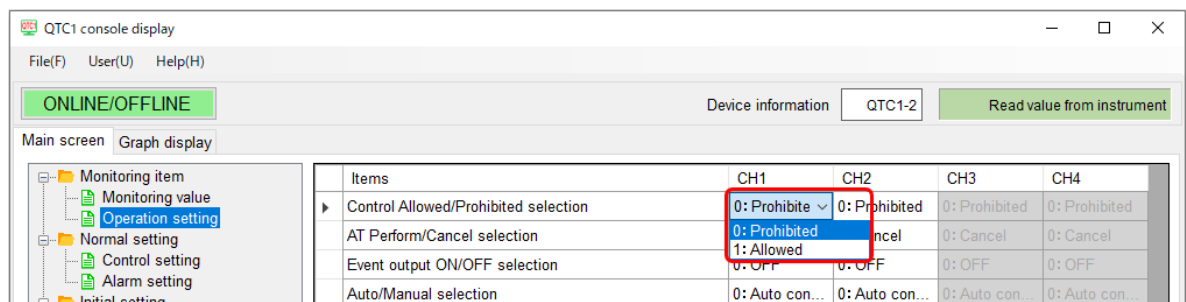

(Fig. 8.2-2)


Set the setting item

This section explains how to set the setting item by using CH1 SV setting as an example.
Click on the setting item for the channel.

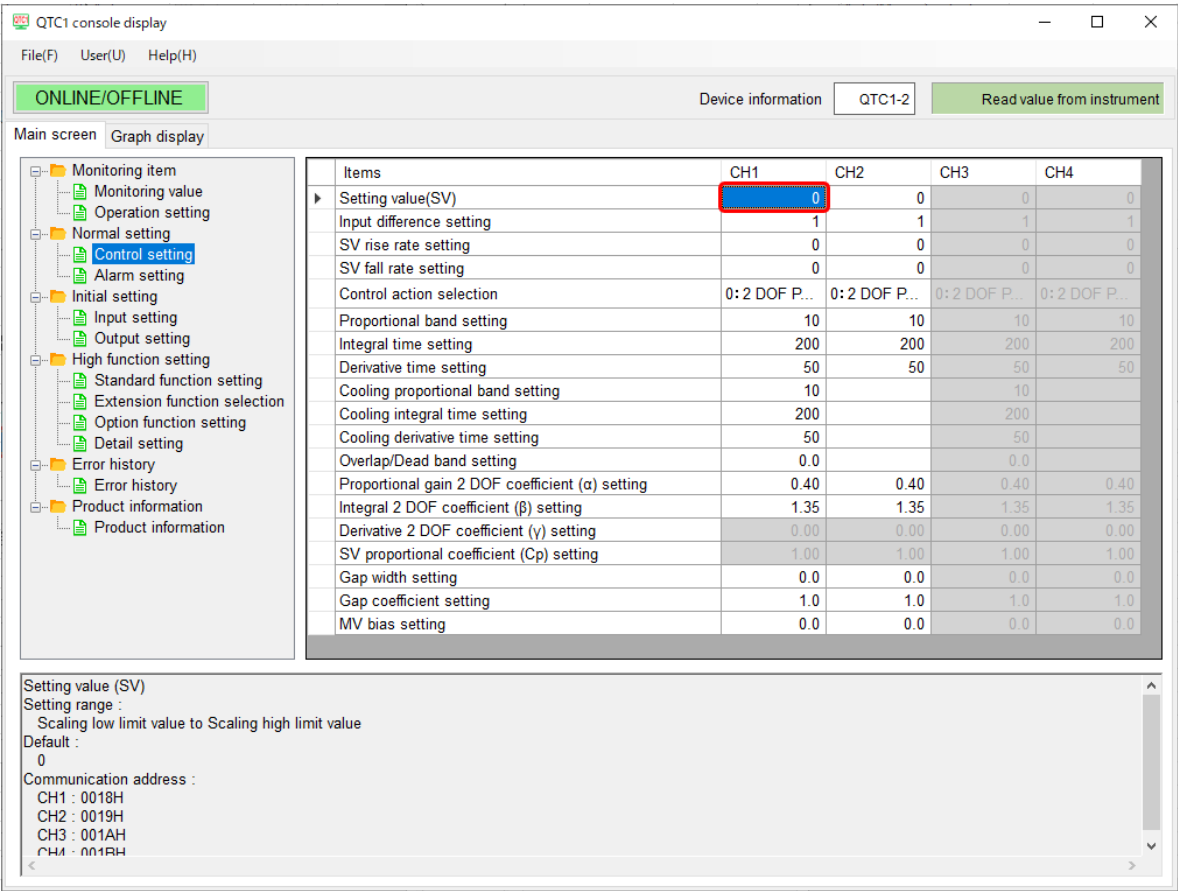

(Fig. 8.2-3)

Display the numeric keypad screen.
The current setting value and setting range are displayed on the numeric keypad screen.
Set within the setting range.
Input the setting value, and click [OK]. (*)
Transfer the setting value to the control module QTC1-R.
(*): The setting value can also be entered from the keyboard of the host computer.

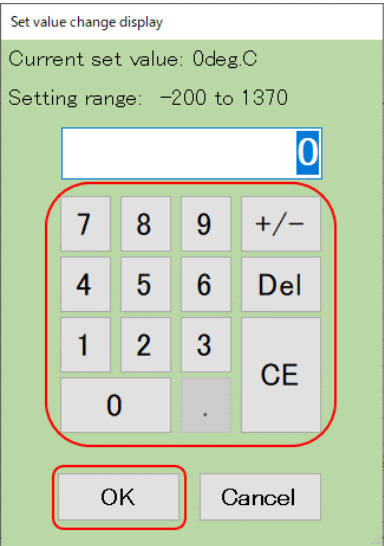


(Fig. 8.2-4)

8.2.1 Monitoring Value Setting

Display PV, output manipulated variable, state 1 reading value and state 2 reading value, and set monitor value parameters such as manual manipulated variable, sensor correction factor and sensor correction.

Click [Monitoring item] of [Main screen] tab → [Monitoring value].

Display the monitoring value screen.

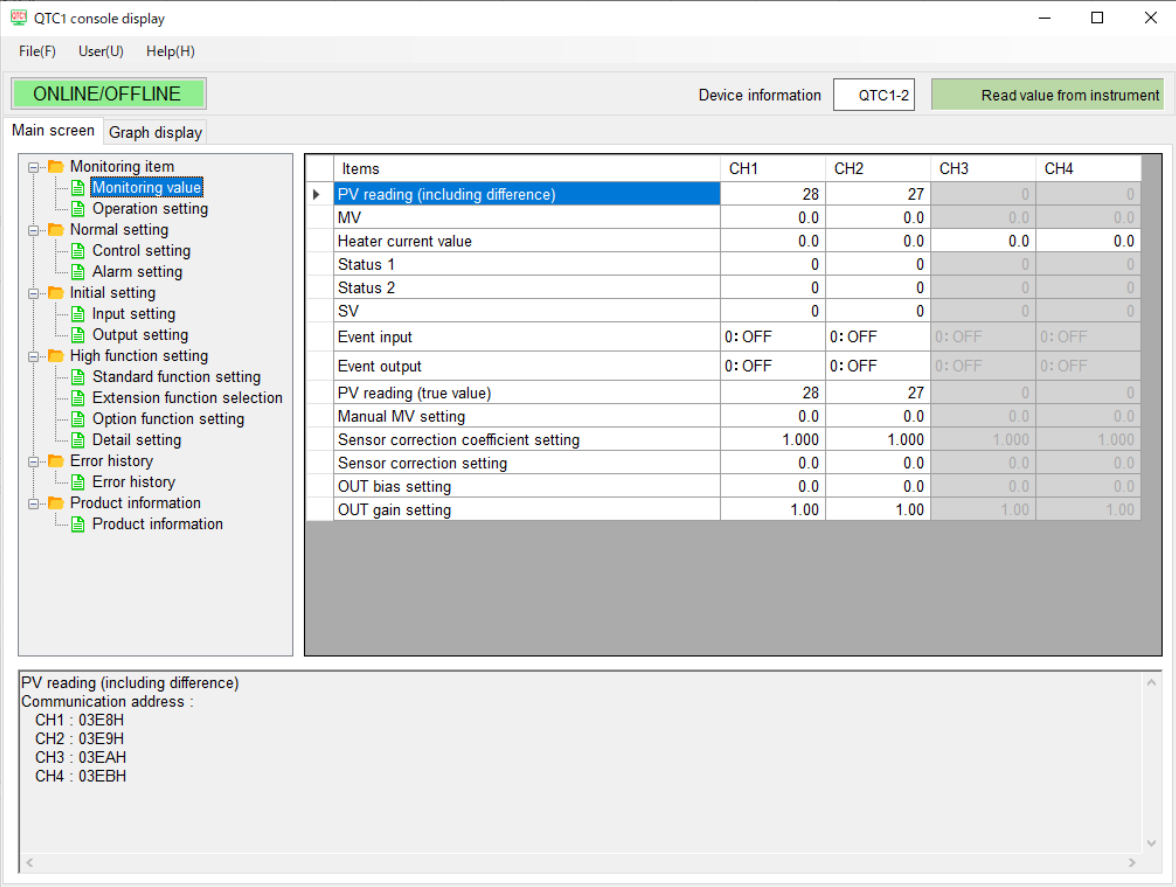

QTC1 console display

File(F) User(U) Help(H)

ONLINE/OFFLINE Device information QTC1-2 Read value from instrument

Main screen Graph display

- Monitoring item
 - Monitoring value**
 - Operation setting
- Normal setting
 - Control setting
 - Alarm setting
- Initial setting
 - Input setting
 - Output setting
- High function setting
 - Standard function setting
 - Extension function selection
 - Option function setting
 - Detail setting
- Error history
 - Error history
- Product information
 - Product information

Items	CH1	CH2	CH3	CH4
PV reading (including difference)	28	27	0	0
MV	0.0	0.0	0.0	0.0
Heater current value	0.0	0.0	0.0	0.0
Status 1	0	0	0	0
Status 2	0	0	0	0
SV	0	0	0	0
Event input	0: OFF	0: OFF	0: OFF	0: OFF
Event output	0: OFF	0: OFF	0: OFF	0: OFF
PV reading (true value)	28	27	0	0
Manual MV setting	0.0	0.0	0.0	0.0
Sensor correction coefficient setting	1.000	1.000	1.000	1.000
Sensor correction setting	0.0	0.0	0.0	0.0
OUT bias setting	0.0	0.0	0.0	0.0
OUT gain setting	1.00	1.00	1.00	1.00

PV reading (including difference)
Communication address :
CH1 : 03E8H
CH2 : 03E9H
CH3 : 03EAH
CH4 : 03EBH

(Fig. 8.2.1-1)

This section describes each setting item.

- Setting item
This is the setting item of control module QTC1-R.
- Channel
This is the channel number of control module QTC1-R.
- Address [HEX (Hexadecimal)]
This is the address of each channel of control module QTC1-R.
- Description, setting range and selection item
This is the description of setting item, the setting range and the selection item.
- Factory default
This is the factory shipment default value of the setting item.


Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
MV	CH1 CH2	0014 0015	Set the MV for manual control. Refer to "15.2.12 Auto/Manual Control Switching (P.15-9)". Setting range: -5.0 to 105.0%	MV when switching from automatic control to manual control
Sensor correction factor setting	CH1 CH2	0084 0085	Set the sensor correction factor. Set the slope of the sensor input value. Refer to "12.4 Correct PV (P.12-9, P.12-10)". Setting range: 0.000 to 10.000	1.000
Sensor correction setting	CH1 CH2	0088 0089	Set the sensor correction value. Refer to "12.4 Correct PV (P.12-9, P.12-10)". Setting range: -10.000 to 10.000°C	0.000°C
Output bias setting	CH1 CH2	01C0 01C1	When the output distribution of the controlled object is known in advance, set the bias value for the reference output. Setting range: 0.0 to 100.0%	0.0%
Output gain setting	CH1 CH2	01C4 01C5	When the output distribution of the controlled object is known in advance, set the gain (ratio) with respect to the reference output. Setting range: 0.00 to 10.00 times	1.00 times

8.2.2 Operation Parameters Setting

Set the operation parameters of Control Enable/Disable, AT Perform/Cancel, Event output ON/OFF, and Auto/Manual control.

Click [Monitoring item] of [Main screen] tab → [Operation setting].

Display the Operation setting screen.

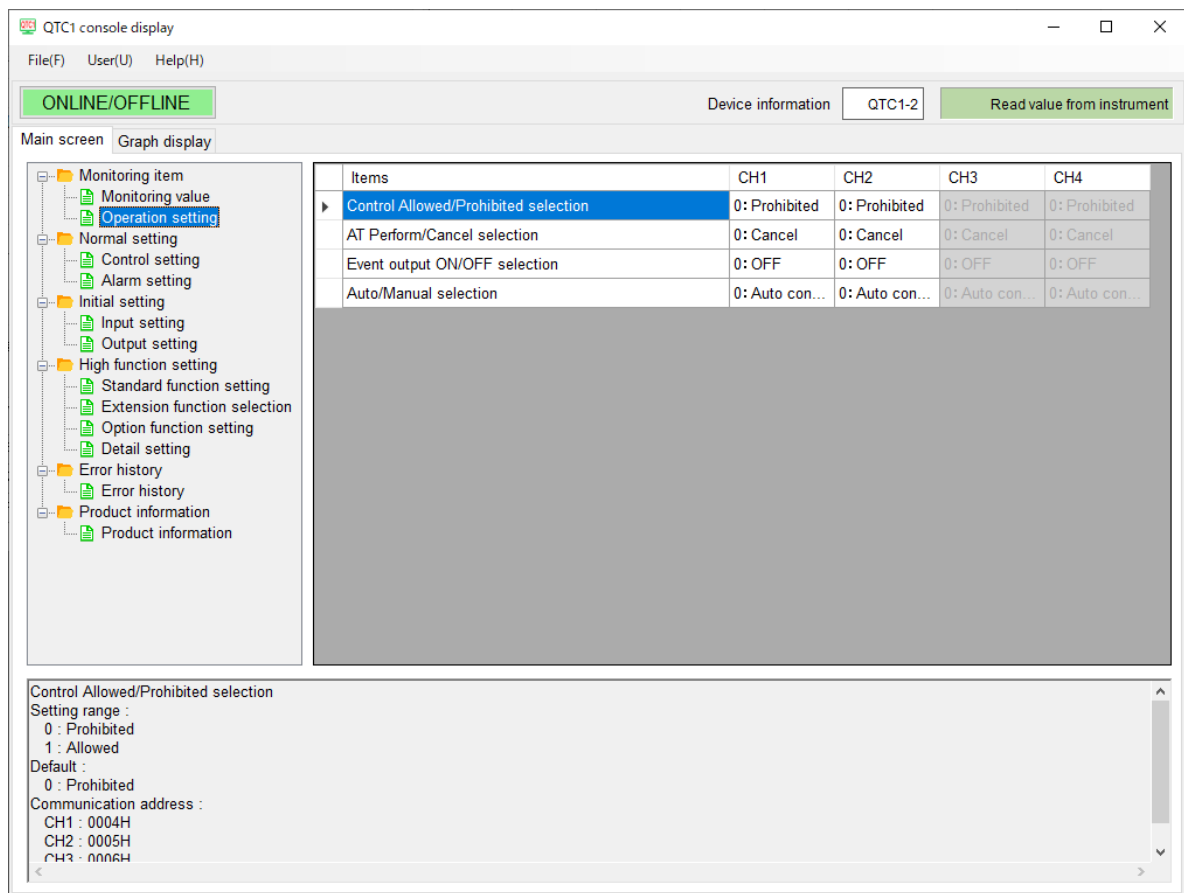

(Fig. 8.2.2-1)

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Control Allowed/ Prohibited selection	CH1 CH2	0004 0005	Select Control Allowed or Control Prohibited. Selection item: 0: Control Prohibited 1: Control Allowed	0: Prohibited
AT Perform/ Cancel selection	CH1 CH2	0008 0009	Select AT Perform or AT Cancel. Selection item: 0: Cancel 1: Perform	0: Cancel
Event output ON/OFF selection	CH1 CH2	000C 000D	Selects event output ON or event output OFF from the host. This setting is valid when 0 (No action) is selected in Event output allocation selection. Selection item: 0: OFF 1: ON	0: OFF
Auto/Manual control selection	CH1 CH2	0010 0011	Select Automatic control or Manual control. Refer to "15.2.12 Auto/Manual Control Switching (P.15-9)". Selection item: 0: Auto control 1: Manual control	0: Auto control

8.2.3 Control Setting

Set the control parameters such as SV, SV rise rate, SV fall rate, control action and PID.

Click [Monitoring item] of [Main screen] tab → [Control setting].

Display the Control setting screen.

The screenshot shows the QTC1 console display with the 'Control setting' screen active. The interface includes a menu tree on the left, a table of settings for four channels (CH1-CH4), and a detailed view of the 'Setting value (SV)' at the bottom.

Menu Tree (Left):

- Monitoring item
 - Monitoring value
 - Operation setting
- Normal setting
 - Control setting**
 - Alarm setting
- Initial setting
 - Input setting
 - Output setting
- High function setting
 - Standard function setting
 - Extension function selection
 - Option function setting
- Detail setting
- Error history
 - Error history
- Product information
 - Product information

Settings Table:

Items	CH1	CH2	CH3	CH4
Setting value(SV)	0	0	0	0
Input difference setting	1	1	1	1
SV rise rate setting	0	0	0	0
SV fall rate setting	0	0	0	0
Control action selection	0: 2 DOF P...	0: 2 DOF P...	0: 2 DOF P...	0: 2 DOF P...
Proportional band setting	10	10	10	10
Integral time setting	200	200	200	200
Derivative time setting	50	50	50	50
Cooling proportional band setting	10		10	
Cooling integral time setting	200		200	
Cooling derivative time setting	50		50	
Overlap/Dead band setting	0.0		0.0	
Proportional gain 2 DOF coefficient (α) setting	0.40	0.40	0.40	0.40
Integral 2 DOF coefficient (β) setting	1.35	1.35	1.35	1.35
Derivative 2 DOF coefficient (γ) setting	0.00	0.00	0.00	0.00
SV proportional coefficient (C_p) setting	1.00	1.00	1.00	1.00
Gap width setting	0.0	0.0	0.0	0.0
Gap coefficient setting	1.0	1.0	1.0	1.0
MV bias setting	0.0	0.0	0.0	0.0

Setting value (SV) Details:

Setting range :
Scaling low limit value to Scaling high limit value
Default :
0
Communication address :
CH1 : 0018H
CH2 : 0019H
CH3 : 001AH
CH4 : 001BH

(Fig. 8.2.3-1)

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
SV setting	CH1 CH2	0018 0019	Set the SV to be controlled. Setting range: Scaling lower limit to Scaling high limit	0.000°C
Input difference setting	CH1 CH2	0134 0135	Set the value of the input difference to be detected by the input difference detection function. Setting range: 0.001 to 10.000°C	1.000°C
SV rise rate setting	CH1 CH2	0090 0091	Set the rate of rise when changing SV by the set value ramp function. Refer to “15.2.9 Set Value Ramp Function (P.15-8)”. Setting range: 0.000 to 10.000 °C/min	0.000 °C/min
SV fall rate setting	CH1 CH2	0094 0095	Set the fall of increase when changing SV by the set value ramp function. Refer to “15.2.9 Set Value Ramp Function (P.15-8)”. Setting range: 0.000 to 10.000 °C/min	0.000 °C/min
Control action selection	CH1 CH2	0138 0139	Select the control action. This item can be selected only when Control Disable is set. Refer to “15.1 Control Action Explanation (P.15-1)”. Selection item: 0: 2 DOF PID control 1: Fast-PID control 2: Slow-PID control 3: ON-OFF control 4: Gap-PID control	0: 2 DOF PID control

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Proportional band setting	CH1 CH2	001C 001D	Set the proportional band setting. When "1: Heating/Cooling Control" is selected in control function selection, the heating side proportional band setting is set. Setting range: 0.001 to input span °C	10.000 °C/min
Integral time setting	CH1 CH2	0020 0021	Set the integral time. When "1: Heating/Cooling Control" is selected in control function selection, the the heating side integral time setting is set. The setting range varies depending on the selection of Integral/Derivative decimal point position selection. Setting range: 0 to 3600 seconds or 0.0 to 2000.0 seconds When select "2: Slow-PID control" of control action selection 1 to 3600 seconds or 0.1 to 2000.0 seconds	200 seconds
Derivative time setting	CH1 CH2	0024 0025	Set the derivative time. When "1: Heating/Cooling Control" is selected in control function selection, the heating side derivative time setting is set. The setting range varies depending on the selection of Integral/Derivative decimal point position selection. Setting range: 0 to 3600 seconds or 0.0 to 2000.0 seconds	50 seconds
Cooling P-band setting	CH1	0194	Set the cooling proportional band. This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. Setting range: 0.000 to input span °C	10.000 °C/min

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Cooling integral time setting	CH1	0198	Set the cooling integral time setting. This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. The setting range varies depending on the selection of Integral/Derivative decimal point position selection. Setting range: 0 to 3600 seconds or 0.0 to 2000.0 seconds when select "2: Slow-PID control" of control action selection 1 to 3600 seconds or 0.1 to 2000.0 seconds	200 seconds
Cooling derivative time setting	CH1	019C	Set the cooling derivative time setting This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. The setting range varies depending on the selection of Integral/Derivative decimal point position selection. Setting range: 0 to 3600 seconds or 0.0 to 2000.0 seconds	50 seconds
Overlap/Dead band setting	CH1	01A8	Set the overlap/dead band setting. Refer to "15.5.6 Heating/Cooling Control Operation D iagram (When Setting Dead Band) (P.15-36)" and "15.5.7 Heating/Cooling Control Operation Diagram (When Setting Overlap Band) (P.15-37)". This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. Setting range: -10.000 to 10.000°C	0.000°C


Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Proportional gain 2 DOF coefficient (α) setting	CH1 CH2	013C 013D	Set the proportional gain 2 DOF coefficient (α) setting. Refer to “15.1.1 2 DOF PID Control (P.15-2)”. When select “1: Fast-PID control”, “2: Slow-PID control”, “3: ON-OFF control”, or “4: Gap-PID control” in control action, do not change this setting item. Setting range: 0.00 to 1.00	0.40
Integral 2 DOF coefficient (β) setting	CH1 CH2	0140 0141	Set the integral 2 DOF coefficient (β) setting. Refer to “15.1.1 2 DOF PID Control (P.15-2)”. When select “1: Fast-PID control”, “2: Slow-PID control”, “3: ON-OFF control”, or “4: Gap-PID control” in control action, do not change this setting item. Setting range: 0.00 to 10.00	1.35
Derivative 2-DOF coefficient (γ , Cd) setting	CH1 CH2	0144 0145	Set the derivative 2-DOF coefficient (γ , Cd) setting. Do not change this setting item. Setting range: 0.00 to 1.00	0.00
Desired value proportional coefficient (C_p) setting	CH1 CH2	0148 0149	Set the desired value proportional coefficient (C_p) setting. Do not change this setting item. Setting range: 0.00 to 1.00	1.00
Gap width setting	CH1 CH2	014C 014D	Set the gap width setting. Proportional band $\times$ Gap width Setting range: 0.0 to 10.0%	0.0%
Gap coefficient setting	CH1 CH2	0150 0151	Set the gap coefficient setting. Setting range: 0.0 to 1.0	1.0
MV bias setting	CH1 CH2	0098 0099	Set the MV bias setting. Refer to “15.2.4 MV Bias (P.15-6)”. Setting range: 0.0 to 100.0%	0.0%

8.2.4 Alarm Parameters Setting

Set the alarm parameters such as Alarm 1 to 4 type selection, Alarm 1 to 4 setting and Alarm 1 to 4 hysteresis setting.

Click [Normal setting] of [Main screen] tab → [Alarm setting].

Display the Alarm setting screen.

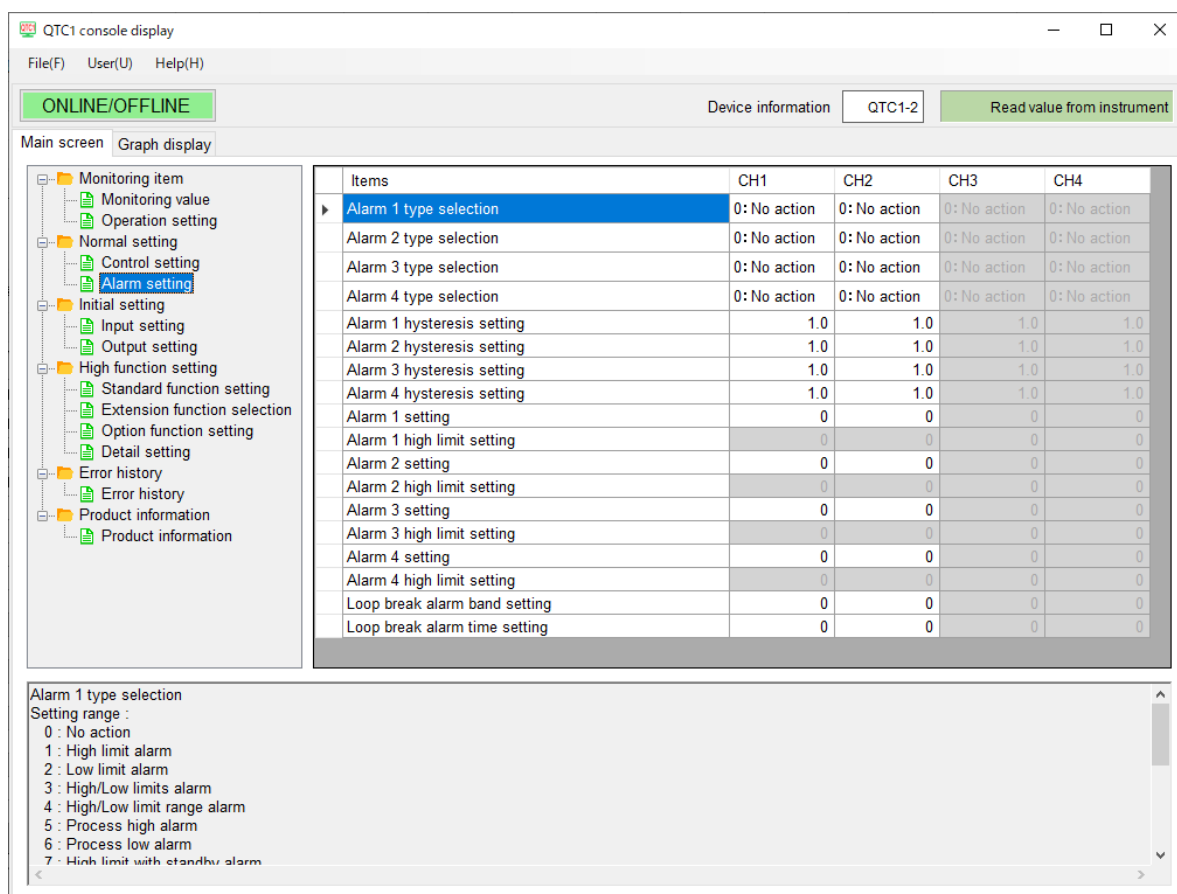

(Fig. 8.2.4-1)

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Alarm 1 action selection	CH1	0038	Select the alarm 1 action.	0: No action
	CH2	0039	Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”.	
	CH3	003A		
	CH4	003B	Selection item: 0: No action 1: High limit alarm 2: Low limit alarm 3: High/Low limits alarm 4: High/Low limit s range 5: Process High alarm 6: Process low alarm 7: High limit with standby 8: Low limit with standby 9: High/Low limits alarm with 10: High/Low limits alarm individually 11: High/Low limit s range alarm individually 12: High/Low limits alarm with standby individually	
Alarm 2 action selection	CH1	003C	Select the alarm 2 action.	0: No action
	CH2	003D	Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”.	
	CH3	003E		
	CH4	003F	Selection item: 0: No action 1: High limit alarm 2: Low limit alarm 3: High/Low limits alarm 4: High/Low limit s range 5: Process High alarm 6: Process low alarm 7: High limit with standby 8: Low limit with standby 9: High/Low limits alarm with 10: High/Low limits alarm individually 11: High/Low limit s range alarm individually 12: High/Low limits alarm with standby individually	

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Alarm 3 action selection	CH1	0040	Select the alarm 3 action.	0: No action
	CH2	0041	Refer to “15.5.3 Alarm Operation Diagram	
	CH3	0042	(P.15-33, P.15-34)”. Selection item:	
	CH4	0043	0: No action 1: High limit alarm 2: Low limit alarm 3: High/Low limits alarm 4: High/Low limit s range 5: Process High alarm 6: Process low alarm 7: High limit with standby 8: Low limit with standby 9: High/Low limits alarm with 10: High/Low limits alarm individually 11: High/Low limit s range alarm individually 12: High/Low limits alarm with standby individually	
Alarm 4 action selection	CH1	0044	Select the alarm 4 action.	0: No action
	CH2	0045	Refer to “15.5.3 Alarm Operation Diagram	
	CH3	0046	(P.15-33, P.15-34)”. Selection item:	
	CH4	0047	0: No action 1: High limit alarm 2: Low limit alarm 3: High/Low limits alarm 4: High/Low limit s range 5: Process High alarm 6: Process low alarm 7: High limit with standby 8: Low limit with standby 9: High/Low limits alarm with 10: High/Low limits alarm individually 11: High/Low limit s range alarm individually 12: High/Low limits alarm with standby individually	

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Alarm 1 hysteresis setting	CH1	0048	Set the alarm 1 hysteresis setting.	1.000°C
	CH2	0049	Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”.	
	CH3	004A	Setting range:	
	CH4	004B	0.001 to 10.000°C	
Alarm 2 hysteresis setting	CH1	004C	Set the alarm 2 hysteresis setting.	1.000°C
	CH2	004D	Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”.	
	CH3	004E	Setting range:	
	CH4	004F	0.001 to 10.000°C	
Alarm 3 hysteresis setting	CH1	0050	Set the alarm 3 hysteresis setting.	1.000°C
	CH2	0051	Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”.	
	CH3	0052	Setting range:	
	CH4	0053	0.001 to 10.000°C	
Alarm 4 hysteresis setting	CH1	0054	Set the alarm 4 hysteresis setting.	1.000°C
	CH2	0055	Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”.	
	CH3	0056	Setting range:	
	CH4	0057	0.001 to 10.000°C	
Alarm 1 value setting	CH1	0058	Set the alarm 1 value setting.	0.000°C
	CH2	0059	Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”.	
	CH3	005A	When High/Low limits alarm individually,	
	CH4	005B	High/Low limits s range alarm individually or High/Low limits alarm with standby individually is selected in Alarm 1 action selection, the lower limit value of alarm 1 is set. Setting range: Refer to “Alarm 1 to 4 value setting range table (P.8-22)”.	

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Alarm 1 high limit value setting	CH1 CH2 CH3 CH4	005C 005D 005E 005F	Set the alarm 1 high limit value setting. Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”. When High/Low limits alarm individually, High/Low limits s range alarm individually or High/Low limits alarm with standby individually is selected in Alarm 1 action selection, this setting is valid Setting range: Refer to “Alarm 1 to 4 value setting range table (P.8-22)”.	0.000°C
Alarm 2 value setting	CH1 CH2 CH3 CH4	0060 0061 0062 0063	Set the alarm 2 value setting. Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”. When High/Low limits alarm individually, High/Low limits s range alarm individually or High/Low limits alarm with standby individually is selected in Alarm 2 action selection, the lower limit value of alarm 2 is set. Setting range: Refer to “Alarm 1 to 4 value setting range table (P.8-22)”.	0.000°C
Alarm 2 high limit value setting	CH1 CH2 CH3 CH4	0064 0065 0066 0067	Set the alarm 2 high limit value setting. Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”. When High/Low limits alarm individually, High/Low limits s range alarm individually or High/Low limits alarm with standby individually is selected in Alarm 2 action selection, this setting is valid Setting range: Refer to “Alarm 1 to 4 value setting range table (P.8-22)”.	0.000°C
Alarm 3 value setting	CH1 CH2 CH3 CH4	0068 0069 006A 006B	Set the alarm 3 value setting. Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)”. When High/Low limits alarm individually, High/Low limits s range alarm individually or High/Low limits alarm with standby individually is selected in Alarm 3 action selection, the lower limit value of alarm 3 is set. Setting range: Refer to “Alarm 1 to 4 value setting range table (P.8-22)”.	0.000°C

Alarm 1 to 4 value setting range table

Alarm action	Setting range
No action	
High limit alarm	-(Input span) to Input span (*1)
Low limit alarm	-(Input span) to Input span (*1)
High/Low limits alarm	0 to Input span
High/Low limit s range	0 to Input span
Process High alarm	Input range lower limit to Input range high limit
Process low alarm	Input range lower limit to Input range high limit
High limit with standby	-(Input span) to Input span
Low limit with standby	-(Input span) to Input span
High/Low limits alarm with	0 to Input span
High/Low limits alarm individually	0 to Input span
High/Low limit s range alarm individually	0 to Input span
High/Low limits alarm with standby individually	0 to Input span

8.2.5 Input Setting

Set the input parameters such as input type, temperature unit and input sampling cycle.

Click [Initial setting] of [Main screen] tab → [Input setting].

Display the Input setting screen.

The screenshot shows the QTC1 console display interface. At the top, there's a status bar with 'ONLINE/OFFLINE', 'Device information', 'QTC1-2', and 'Read value from instrument'. Below this is a tab bar with 'Main screen' and 'Graph display'. The left sidebar contains a tree view with categories like 'Monitoring item', 'Normal setting', 'Initial setting', 'High function setting', 'Error history', and 'Product information'. The 'Initial setting' category is expanded, showing 'Input setting' as the selected item. The main area displays a table with settings for four channels (CH1, CH2, CH3, CH4). The bottom section provides detailed information for the selected 'Input type selection' setting.

Items	CH1	CH2	CH3	CH4
Input type selection	0: K -200 t...	0: K -200 t...	0: K -200 t...	0: K -200 t...
Input math function selection	0: Standard		0: Standard	
Input difference selection	0: Disabled	0: Disabled	0: Disabled	0: Disabled
Temperature unit selection	0: deg.C	0: deg.C	0: deg.C	0: deg.C
Scaling high limit setting	1370	1370	1370	1370
Scaling low limit setting	-200	-200	-200	-200
Input sampling selection	0: 125ms	0: 125ms	0: 125ms	0: 125ms
PV filter setting	0.0	0.0	0.0	0.0
Number of moving average setting	1	1	1	1

Input type selection
Setting range :
For input M :
For temperature unit selection = deg.C :
0 : K -200 to 1370 deg.C
1 : K -200.0 to 400.0 deg.C
2 : J -200 to 1000 deg.C
3 : R 0 to 1760 deg.C
4 : S 0 to 1760 deg.C
5 : R 0 to 1820 deg.C

(Fig. 8.2.5-1)


Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Input type selection	CH1 CH2	00C8 00C9	Select the input type. Selection item: 0: Pt100 4-wire type 0.000 to 32.000°C	0: Pt100 4-wire type 0.000 to 32.000°C
Input math function selection	CH1	012C	Select the input math function. Refer to “15.3.3 Input Math Function (P.15-25)”. Selection item: 0: Standard 1: Difference input 2: Addition input	0: Standard
Input difference selection	CH1 CH2	0130 0131	Select the Select the channel for which the input difference detection function detects the input difference from the local channel. Selection item: 0: Disable 1: CH1 2: CH2	0: Disable
Temperature unit selection	CH1 CH2	00CC 00CD	Select the temperature unit. Selection item: 0: deg. C	0: deg. C
Scaling high limit setting	CH1 CH2	00D0 00D1	Set the scaling high limit. Setting range: Scaling low limit to Rated high limit	Rated high limit
Scaling low limit setting	CH1 CH2	00D4 00D5	Set the scaling low limit. Setting range: Rated low limit to Scaling high limit	Rated low limit
PV filter time constant setting	CH1 CH2	008C 008D	Set the PV filter time constant. Refer to “15.4.4 PV Filter Time Constant (P.15-27)”. Setting range: 0.0 to 10.0 seconds	0.0 seconds
Number of moving average setting	CH1 CH2	0108 0109	Set the number of moving averages that average the input values. The input values are averaged the set number of times, and the input values are exchanged every input sampling cycle. If set 1 time, the moving average will not be performed. Setting range: 1 to 10 times	1 time

8.2.6 Output Setting

Set the output parameters such as direct/reverse action, proportional cycle and ON/OFF hysteresis.

Click [Monitoring item] of [Initial screen] tab → [Output setting].

Display the Output setting screen.

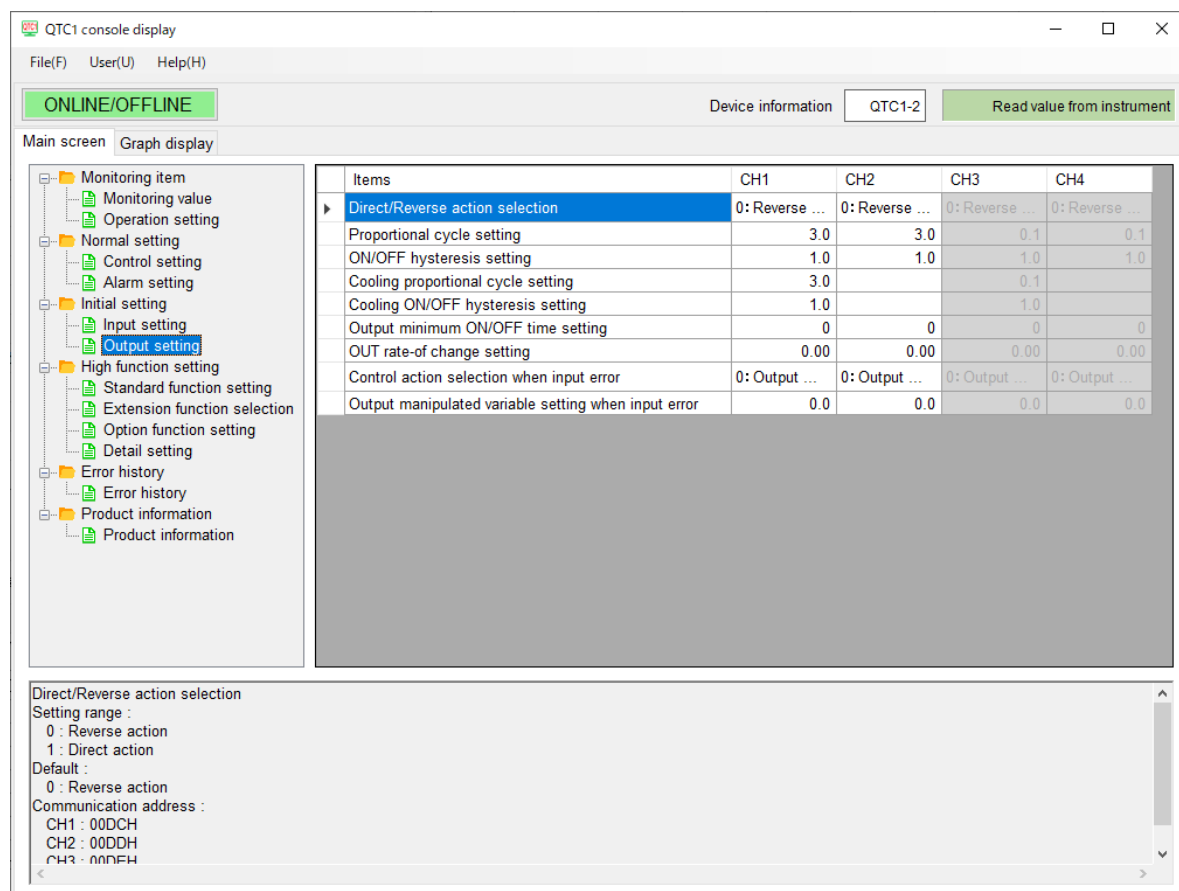

(Fig. 8.2.6-1)

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Direct/ reverse action selection	CH1 CH2	00DC 00DD	Select the direct action or reverse action. Selection item: 0: Reverse action 1: Direct action	0: Reverse action
Proportional cycle setting	CH1 CH2	0028 0029	Set the proportional cycle. When "1: Heating/Cooling Control" is selected in control function selection, the heating side proportional band setting is set. Setting range: 0.1 to 100.0 seconds	Relay contact output: 30.0 seconds Non-contact voltage output, open collector output: 3.0 seconds Direct current output: None
ON/OFF hysteresis setting	CH1 CH2	002C 002D	Set the ON/OFF hysteresis. When "1: Heating/Cooling Control" is selected in control function selection, the heating side ON/OFF hysteresis setting is set. Setting range: 0.001 to 10.000°C	1.000°C
Cooling proportional cycle setting	CH1	01A0	Set the cooling proportional cycle. This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. Setting range: 0.1 to 100.0 seconds	Relay contact output: 30.0 seconds Non-contact voltage output, open collector output: 3.0 seconds Direct current output: None


Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Cooling ON/OFF hysteresis setting	CH1	01A4	Set the cooling ON/OFF hysteresis. This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. Setting range: 0.001 to 10.000°C	1.000°C
Output minimum ON/OFF time setting	CH1 CH2	0154 0155	Set the time to turn the output on or off without depending on the MV. Refer to "15.2.5 Output Minimum ON/OFF Time (P.15-7)". Setting range: 0 to 1000 ms	0 ms
Out rate-of change setting	CH1 CH2	01CC 01CD	Set the output change rate limit. Refer to "15.2.14 Output Rate-of Change Limit (P.15-11)". Setting range: 0.00 to 100.00 %/seconds	0.00 %/seconds
Control action selection when input error	CH1 CH2	01D0 01D1	Selects the control action to be taken in the event of an input error. Refer to "15.2.4 Selection of Action at Input Error (P.15-6)". Selection item: 0: Operation amount set value at input error 1: Control operation continued	0: Operation amount set value at input error
Output manipulated variable setting when input error	CH1 CH2	01D4 01D5	Sets the output operation amount in the event of an input error. Refer to "15.2.4 Selection of Action at Input Error (P.15-6)". Setting range: -5.0 to 105.0 %	0.0 %

8.2.7 Standard Function Setting

Set the standard function parameters such as control function and cooling action mode.

Click [High function setting] of [Main screen] tab → [Standard function setting].

Display the Standard function setting screen.

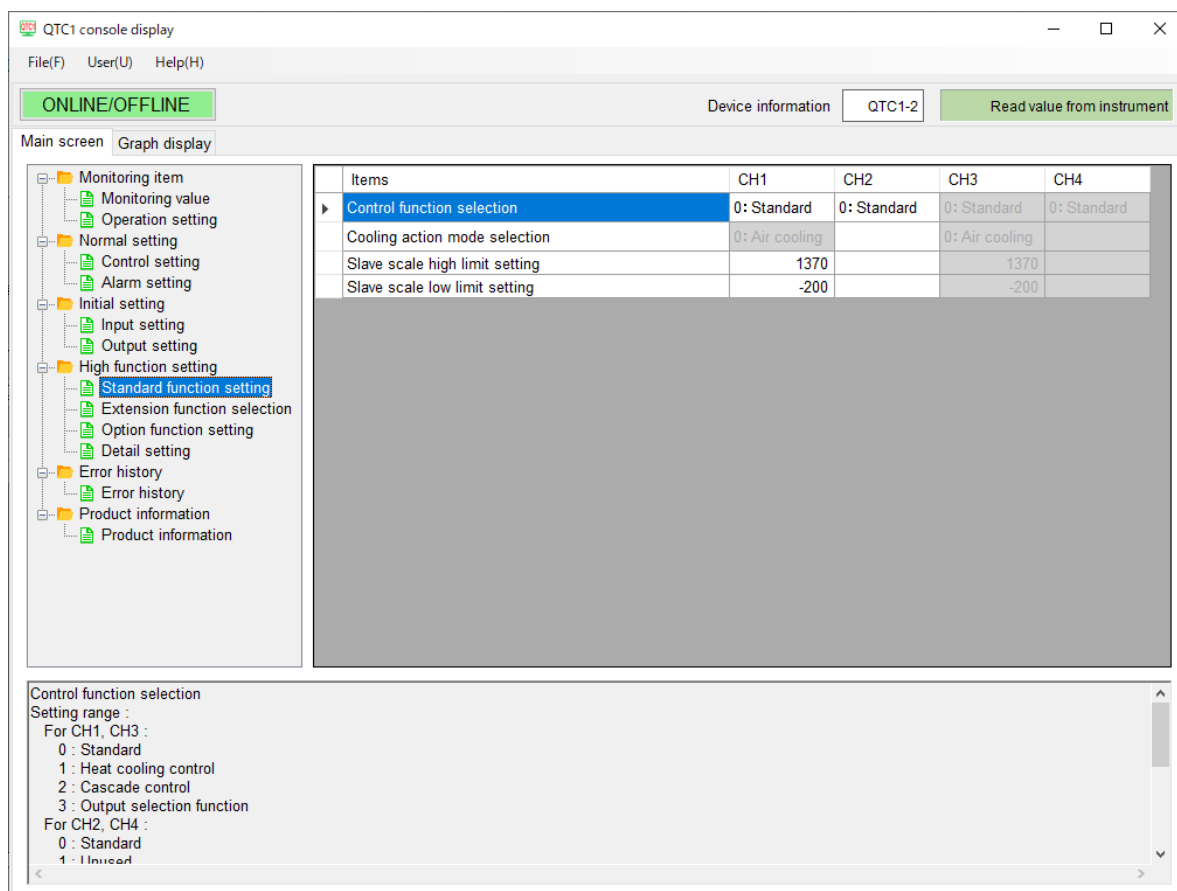

(Fig. 8.2.7-1)


Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Control function selection	CH1 CH2	0190 0191	Select the control function. This can be selected only when control is prohibited. Refer to “15.2.15 Control Function (P.15-12 to P.15-16)”. Selection item: 0: Standard 1: Heating/Cooling control (*) 2: Cascade control (*) 3: Output selection function (*): Select Heating/Cooling Control and Cascade control for CH1. It is invalid when CH2 is selected.	0: Standard
Cooling action mode selection	CH1	01B4	Select the cooling action mode. Refer to “Heating/Cooling control (P.15-12, P.15-13)”. This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. Selection item: 0: Air cooling (Linear characteristics) 1: Oil cooling (1.5th power of the linear characteristics) 2: Water cooling (2nd power of the linear characteristics)	0: Air cooling
Slave scale high limit setting	CH1	01B8	Set the slave scale high limit of cascade control. Refer to “Cascade control (P.15-14, P.15-15)”. Set with CH1. It is disabled when set with CH2. Setting range: Slave scale low limit to Slave input range high limit	Slave input range high limit
Slave scale low limit setting	CH1	01BC	Set the slave scale low limit of cascade control. Refer to “Cascade control (P.15-14, P.15-15)”. Set with CH1. It is disabled when set with CH2. Setting range: Slave input range low limit to Slave scale high limit	Slave input range low limit

8.2.8 Extension Function Selection

Select the extension function parameters such as extension function, auto balance control enabled/disabled and number of communication management module.

Click [High function setting] of [Main screen] tab → [Extension function selection].

Display the Extension function selection screen.

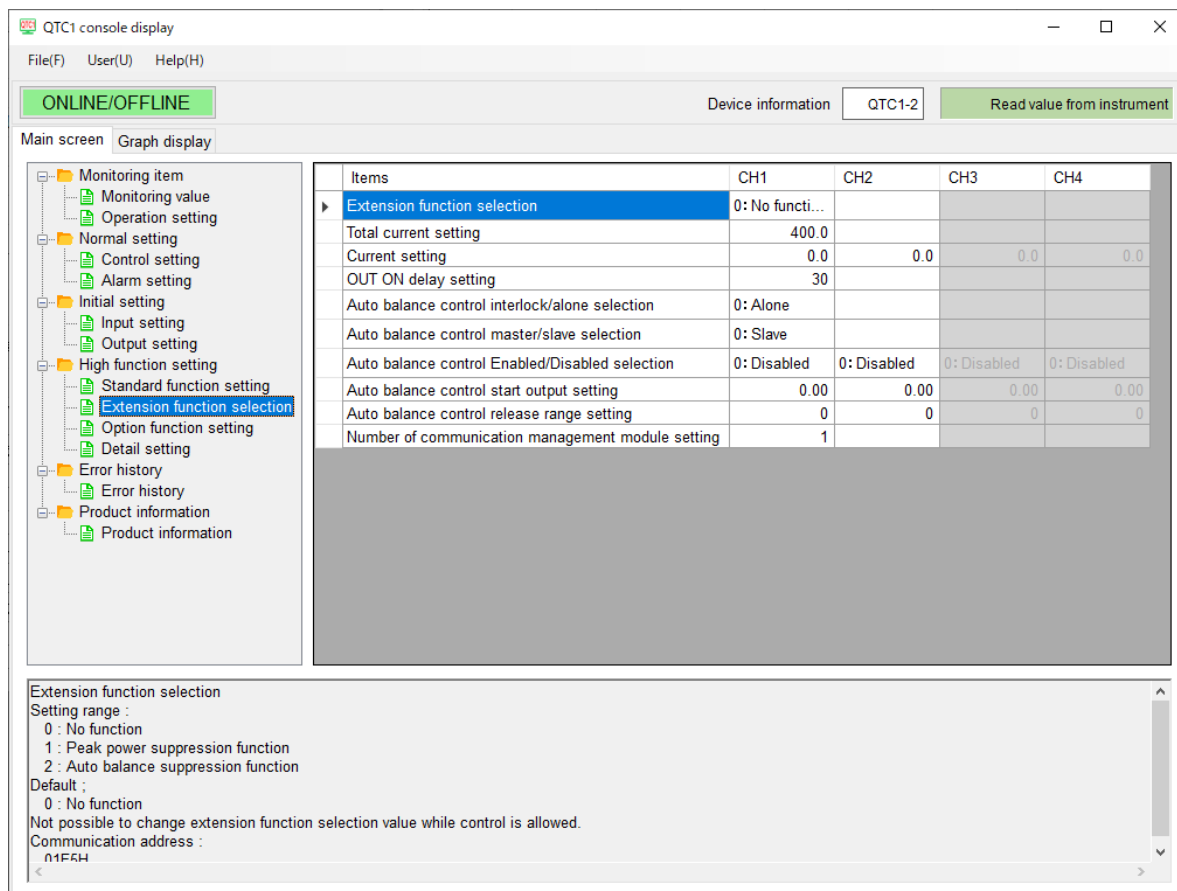

(Fig. 8.2.8-1)

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Extension function selection		01F5	Select the extension function. Refer to “15.3.1 Extension Function Selection (P.15-17 to P.15-24)”. Selection item: 0: No function 1: Peak power suppression function 2: Auto balance control function	0: No function
Total current setting		01F6	Set the total current. Refer to “Peak power suppression function (P.15-17, P.15-18)”. Setting range: 0.0 to 400.0 A	400.0 A
Current value setting	CH1 CH2	01F7 01F8	Set the current value for each channel. Refer to “Peak power suppression function (P.15-17, P.15-18)”. Setting range: 0.0 to 100.0 A	0.0 A
Output ON-delay setting		01FB	Set the output ON-delay. Refer to “Peak power suppression function (P.15-17, P.15-18)”. Setting range: 0 to 100 ms	30 ms
Auto balance control Interlock/ Single selection		01FC	Select whether to use the auto balance control function in conjunction with each other or individually. Refer to “Auto balance control function (P.15-18 to P.15-23)”. Selection item: 0: Single 1: Interlock	0: Single
Auto balance control Master/ Slave selection		01FD	Select whether to use the autobalance control function as a master or a slave. Refer to “Auto balance control function (P.15-18 to P.15-23)”. Selection item: 0: Slave channel 1: CH1 master channel 2: CH2 master channel 3: CH3 master channel(*) 4: CH4 master channel(*)	0: Slave


Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Auto balance control Enabled/ Disabled selection	CH1 CH2	01FE 01FF	Select whether to enable or disable the auto balance control function for each channel. Refer to "Auto balance control function (P.15-18 to P.15-23)". Selection item: 0: Disabled 1: Enabled	0: Disabled
Auto balance control start output setting	CH1 CH2	0202 0203	Set the MV when auto balance control starts. Refer to "Auto balance control function (P.15-18 to P.15-23)". Setting range: 0.00 to 1.00 (corresponds 0 to 100 %)	0.00 (0 %)
Auto balance control cancel area setting	CH1 CH2	0206 0207	Set the area to cancel the auto balance control function. When set to 0, the auto balance control cancel area is twice the proportional band of the master channel. Refer to "Auto balance control function (P.15-18 to P.15-23)". Setting range: 0.000 to Input span °C × 10 %	0.000°C
Number of communication management module setting		020A	Set the number of modules managed by the master module when using the SIF function or auto balance control function. Refer to "13 Communication with PLC Using SIF Function (P.13-1 to P.13-37)" or "Auto balance control function (P.15-18 to P.15-24)". Setting range: 1 to 16 modules Set the number of modules including the master module. (Example) If two slave modules are connected, set them to three.	1 module

8.2.9 Option Function Setting

Set the option function parameters such as heater burnout alarm and event input/output allocation.

Click [High function setting] of [Main screen] tab → [Option function setting].

Display the Option function setting screen.

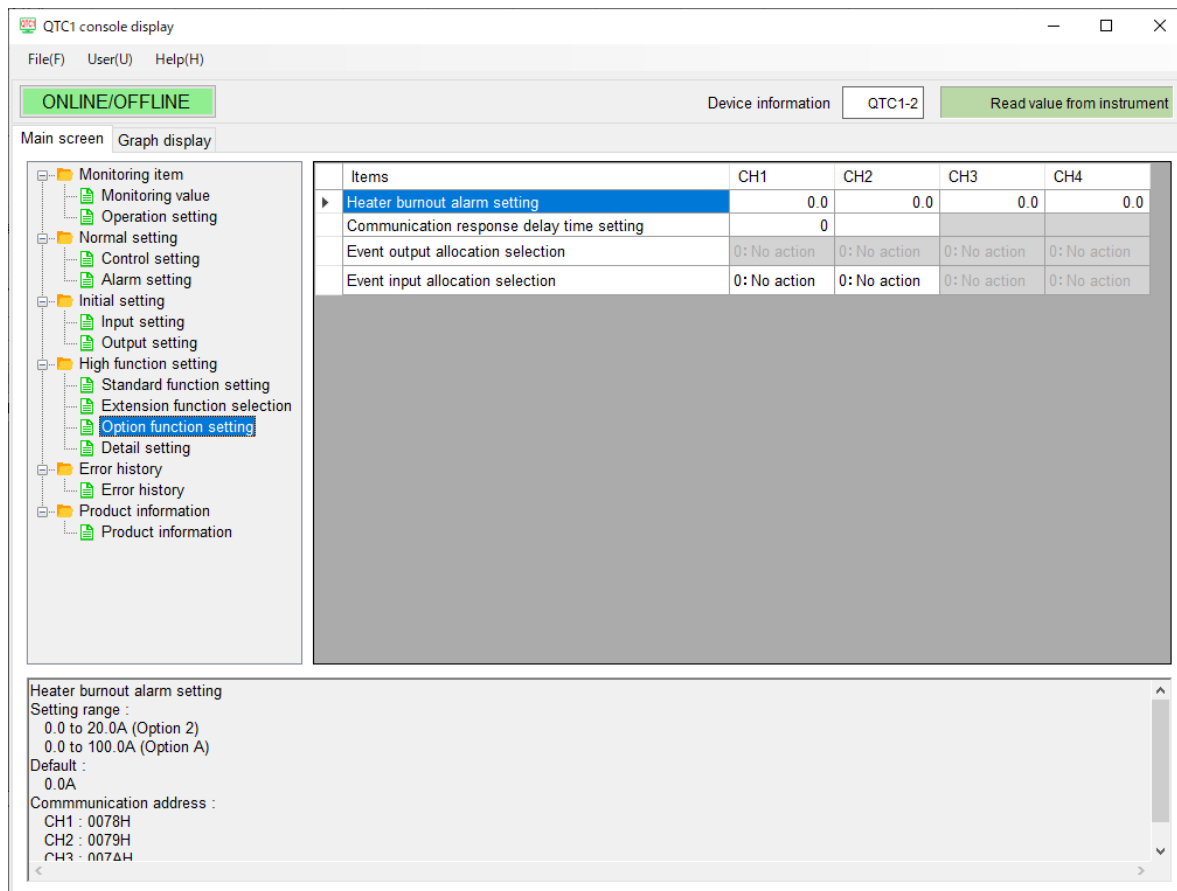

(Fig. 8.2.9-1)

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Heater burnout alarm setting (*)	CH1 CH2 CH3 CH4	0078 0079 007A 007B	Set the heater current value to judge the heater burnout. When the heater current value (CT input current) falls below the heater burnout alarm setting value, the heater burnout alarm is activated, and when it exceeds the heater burnout alarm setting value, the heater burnout alarm is released. The heater current value is updated when the control output is ON. When the control output is OFF, the heater current value when the previous control output was ON is stored. Set a value that is approximately 80% of the heater current value in consideration of fluctuations in the power supply voltage. If 0.0 is set, the heater burnout alarm will not be done. Refer to “15.5.4 Heater Burnout Alarm Operation Diagram (P.15-35)”. Setting range: when select 20 A: 0.0 to 20.0 A when select 100 A: 0.0 to 100.0 A	0.0 A
Communication response delay time setting		01F4	Set the delay time for returning a response after receiving a command from the host. When connecting to the communication expansion module QMC1-C□, set the communication response delay time to 0 ms (initial value). Setting range: 0 to 1000 ms	0 ms

(*) CH1 to CH4 correspond to the CT input connectors CT1 to CT4 respectively.

When the CT is connected to CT3 in single-phase, set to CH3.

When the CT is connected to CT1 and CT3 in 3-phase, set to CH1 and CH3 respectively.

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Event output allocation selection	CH1	00FC	Select the event output allocation.	0: No action
	CH2	00FD	Selection item:	
	CH3	00FE	0: No action	
	CH4	00FF	By selecting the event output ON/OFF selection from the host, the event output can be output. When the event output ON/OFF selection is set to 0 (event output OFF), the event output is turned off, and when it is set to 1 (event output ON), the event output is turned on. 1: Event output (CH alone) The event output turns ON when any of the selected channel's alarm, heater burnout alarm, or loop error alarm is activated. 2: Event output (CH interlock) The event output turns on when an alarm, heater burnout alarm, or loop error alarm occurs on all channels.	
Event input allocation selection	CH1	0100	Select the event input allocation.	0: No action
	CH2	0101	Selection item: 0: No action It can be used for any operation by reading the event input status flag. When the event input is turned off, the event input status flag is set to 0, and when the event input is turned on, the event input status flag is set to 1. 1: Control start/stop (CH alone) For the selected channel only, control will start when the event input turns ON, and control will stop when the event input turns OFF. 2: Control start/stop (CH interlock) For all channels, turning on the event input starts the control, and turning off the event input stops the control.	

8.2.10 Detail Setting

Set the detail parameters such as out high limit, out low limit, AT action mode, AT bias and restore action selection when power is turn on.

Click [High function setting] of [Main screen] tab → [Detail setting].

Display the detail setting screen.

QTC1 console display

File(F) User(U) Help(H)

ONLINE/OFFLINE Device information QTC1-2 Read value from instrument

Main screen Graph display

Monitoring item

- Monitoring value
- Operation setting

Normal setting

- Control setting
- Alarm setting

Initial setting

- Input setting
- Output setting

High function setting

- Standard function setting
- Extension function selection
- Option function setting
- Detail setting**

Error history

- Error history

Product information

- Product information

Items	CH1	CH2	CH3	CH4
OUT high limit setting	100.0	100.0	100.0	100.0
OUT low limit setting	0.0	0.0	0.0	0.0
Cooling OUT high limit setting	100.0		100.0	
Cooling OUT low limit setting	0.0		0.0	
AT action mode selection	0: Standard...	0: Standard...	0: Standard...	0: Standard...
AT bias setting	20	20	20	20
AT gain setting	1.0	1.0	1.0	1.0
Alarm 1 value 0 Enabled/Disabled selection	0: Disabled	0: Disabled	0: Disabled	0: Disabled
Alarm 2 value 0 Enabled/Disabled selection	0: Disabled	0: Disabled	0: Disabled	0: Disabled
Alarm 3 value 0 Enabled/Disabled selection	0: Disabled	0: Disabled	0: Disabled	0: Disabled
Alarm 4 value 0 Enabled/Disabled selection	0: Disabled	0: Disabled	0: Disabled	0: Disabled
Proportional band decimal point position selection	0: Second ...	0: Second ...	0: Second ...	0: Second ...
Integral/Derivative decimal point position selection	0: Without ...	0: Without ...	0: Without ...	0: Without ...
Restore action selection when power is turn on	0: Stop	0: Stop	0: Stop	0: Stop
Ch Enabled/Disabled selection	1: Enabled	1: Enabled	1: Enabled	1: Enabled
OUT channel selection	1: CH1	2: CH2	1: CH1	1: CH1
Non-volatile IC memory save selection	0: Save			

Output high limit setting

Setting range :
Output low limit setting value to 100.0 % (105.0 % for DC current output, DC voltage output)

Default :
100.0%

Communication address :
CH1 : 0030H
CH2 : 0031H
CH3 : 0032H
CH4 : 0033H

(Fig. 8.2.10-1)

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
OUT high limit setting	CH1 CH2	0030 0031	Set the output high limit. Setting range: OUT low limit setting to 100.0% when current output OUT low limit setting to 105.0%	100.0%
OUT low limit setting	CH1 CH2	0034 0035	Set the output low limit. Setting range: 0.0% to OUT high limit setting when current output -5.0% to OUT high limit setting	0.0%
Cooling OUT high limit setting	CH1	01AC	Set the cooling output high limit. This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. Setting range: Cooling OUT low limit setting to 100.0% when current output Cooling OUT low limit setting to 105.0%	100.0%
Cooling OUT low limit setting	CH1	01B0	Set the cooling output low limit. This is valid when "1: Heating/Cooling Control" is selected in control function selection. Set with CH1. It is disabled when set with CH2. Setting range: 0.0% to Cooling OUT high limit setting when current output -5.0% to Cooling OUT high limit setting	0.0%
AT action mode selection	CH1 CH2	00E0 00E1	Select the AT action mode. Refer to "12.2.1 Normal AT (P.12-4)" and "12.2.2 Start-up AT (P.12-5)". Selection item: 0: Normal AT 1: Start-up AT	0: Normal AT

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
AT bias setting	CH1 CH2	00E4 00E5	Set the bias for normal AT. The AT point is automatically determined based on the deviation between PV and SV. The AT bias setting is invalid for direct current input and DC voltage input. Refer to “12.2.1 Normal AT (P.12-4)”. Setting range: 0.000 to 10.000°C	2.000°C
AT gain setting	CH1 CH2	00E8 00E9	Set the ratio of the proportional band calculated by executing normal AT or Start-up AT. Setting range: 0.1 to 10.0 times	1.0 times
Alarm 1 value 0 Enabled/ Disabled selection	CH1 CH2 CH3 CH4	00EC 00ED 00EE 00EF	Select whether to enable or disable the alarm action when Alarm 1 setting value is 0. Refer to “15.2.6 Alarm Output (P.15-8)”. Selection item: 0: Disabled 1: Enabled	0: Disabled
Alarm 2 value 0 Enabled/ Disabled selection	CH1 CH2 CH3 CH4	00F0 00F1 00F2 00F3	Select whether to enable or disable the alarm action when Alarm 2 setting value is 0. Refer to “15.2.6 Alarm Output (P.15-8)”. Selection item: 0: Disabled 1: Enabled	0: Disabled
Alarm 3 value 0 Enabled/ Disabled selection	CH1 CH2 CH3 CH4	00F4 00F5 00F6 00F7	Select whether to enable or disable the alarm action when Alarm 3 setting value is 0. Refer to “15.2.6 Alarm Output (P.15-8)”. Selection item: 0: Disabled 1: Enabled	0: Disabled


Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
Alarm 4 value 0 Enabled/ Disabled selection	CH1 CH2 CH3 CH4	00F8 00F9 00FA 00FB	Select whether to enable or disable the alarm action when Alarm 4 setting value is 0. Refer to “15.2.6 Alarm Output (P.15-8)”. Selection item: 0: Disabled 1: Enabled	0: Disabled
Integral/ Derivative decimal point position selection	CH1 CH2	0158 0159	Select whether the integration time or the derivative time has no decimal point or has a decimal point. Refer to “15.2.2 Integral/Derivative Decimal Point Position (P.15-6)”. Selection item: 0: Without decimal point 1: With decimal point	0: Without decimal point
Power-on restore action selection	CH1 CH2	015C 015D	Select whether to resume in the continuous state (state before turning off the power) or in the stopped state when the power is turned on. Selection item: 0: Stopped state (Return to automatic control) 1: Continuous state (Return to automatic control) 2: Stopped state (Return to previous state) 3: Continuous state (Return to previous state)	0: Stopped state
CH Enabled/ Disabled selection	CH1 CH2	0104 0105	Select enable or disable for each channel. If select Disabled, all operations will be disabled for the selected channel. Also, PV becomes 0. Selection item: 0: Disabled 1: Enabled	1: Enabled

Setting item	Channel	Address [HEX]	Description, setting range and selection item	Factory default
OUT channel selection	CH1 CH2	01C8 01C9	Select the input channel for the output of each channel. Refer to “Output selection function (P.15-16)”. This is valid when output selection function is selected in control function selection (P.8-29). Selection item: 1: CH1 2: CH2	Input channel same as output channel
Non-volatile IC memory save selection		020B	Select whether to allow or prohibit saving data to the non-volatile IC memory. Refer to “15.2.10 Non-volatile IC Memory Data Save (P.15-9)”. Selection item: 0: Save 1: Not save	0: Save

(*) For QTC1-R, do not select this setting item.

9 Communication Procedure

Communication starts with command transmission from the host computer (hereafter Master), and ends with the response of this instrument (hereafter Slave).

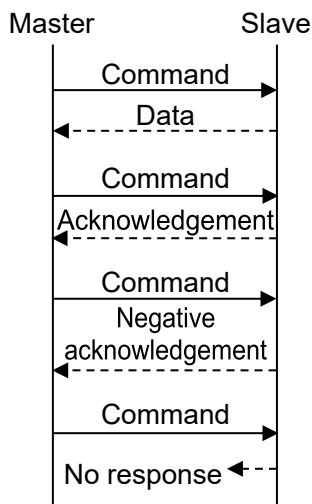

(Fig. 9-1)

- Response with data
When the master sends the Read command, the slave responds with the corresponding set value or current status.
- Acknowledgement
When the master sends the Write command, the slave responds by sending the acknowledgement after the processing is terminated.
- Negative acknowledgement
When the master sends a non-existent command or value out of the setting range, the slave returns a negative acknowledgement.
- No response
The slave will not respond to the master in the following cases:
 - Broadcast address is set.
 - Communication error (framing error, parity error)
 - CRC-16 discrepancy

Communication timing of the RS-485

Master Side (Take note while programming)

When the master starts transmission through the RS-485 communication line, the master is arranged so as to provide an idle status (mark status) transmission period of 1 or more characters before sending the command to ensure synchronization on the receiving side.

Set the program so that the master can disconnect the transmitter from the communication line within a 1 character transmission period after sending the command in preparation for reception of the response from the slave.

To avoid collision of transmissions between the master and the slave, send the next command after carefully checking that the master has received the response.

If a response to the command is not returned due to communication errors, set the Retry Processing to send the command again. (It is recommended to execute Retry twice or more.)

Slave Side

When the slave starts transmission through the RS-485 communication line, the slave is arranged so as to provide an idle status (mark status) transmission period of 1 ms or more (*) before sending the response to ensure synchronization on the receiving side.

The slave is arranged so as to disconnect the transmitter from the communication line within a 1 character transmission period after sending the response.

(*): Can be set in "Response delay time (P.8-35)" within a range of 0 to 1000 ms.

10 MODBUS Protocol

10.1 Transmission Mode

It becomes the RTU mode, and 8-bit binary data in command is transmitted as it is.

Data format	Start bit:	1 bit
	Data bit:	8 bits
	Parity:	Even (Odd, No parity) (Selectable)
	Stop bit:	1 bit (2 bits) (Selectable)
Error detection:		CRC-16 (Cyclic Redundancy Check)

10.2 Data Communication Interval

1.5 character transmission times or less

(Communication speed 9600 bps, 19200 bps: 1.5 character transmission times,

Communication speed 38400 bps, 57600 bps: 750 μ s)

To transmit continuously, an interval between characters which consist of one message, must be within 1.5 character transmission times.

If an interval lasts longer than 1.5 character transmission times, the PCA1 assumes that transmission from the master is finished, which results in a communication error, and will not return a response.

10.3 Message Configuration

Message is configured to start after idle time is processed for more than 3.5 character transmissions, and end after idle time is processed for more than 3.5 character transmissions.

(Communication speed 9600 bps, 19200 bps: 3.5 character transmission times,

Communication speed 38400 bps, 57600 bps: 1.75 ms)

The data part has a maximum of 252 bytes.

3.5 idle characters	Slave address	Function code	Data	Error check CRC-16	3.5 idle characters
---------------------	---------------	---------------	------	--------------------	---------------------

(1) Slave Address

Slave address is an individual instrument number on the slave side, and is set within the range 1 to 16 (01H to 10H). The master identifies slaves by the slave address of the requested message.

The slave informs the master which slave is responding to the master by placing its own address in the response message.

Slave address 0 (00H, Broadcast address) can identify all the slaves connected. However, slaves do not respond.

(2) Function Code

The function code is the command code for the slave to undertake one of the following actions.

Type	Function Code	Sub Function Code	Contents
Data access	03(03H)		Reads a single or multiple piece(s) of data from slave(s) (Amount of data: Max. 100).
	06(06H)		Writes a single piece of data to slave(s).
	16(10H)		Writes multiple pieces of data to slave(s) (Amount of data: Max. 20).

The function code is used to discern whether the response is normal (acknowledgement) or if any error (negative acknowledgement) has occurred when the slave returns the response message to the master.

When acknowledgement is returned, the slave simply returns the original function code.

When negative acknowledgement is returned, the MSB of the original function code is set as 1 for the response.

For example, if the master sends request message setting 13H to the function code by mistake, slave returns 93H by setting the MSB to 1, because the former is an illegal function.

For negative acknowledgement, the exception codes below are set to the data of the response message, and returned to the master in order to inform it of what kind of error has occurred.

Exception Code	Contents
1(01H)	Illegal function (Non-existent function)
2(02H)	Illegal data address (Non-existent data address)
3(03H)	Illegal data value (Value out of the setting range)
17(11H)	Status unable to be written. (AT is performing.)

(3) Data

Data differs depending on the function code.

A request message from the master is composed of a data item, amount of data and setting data.

A response message from the slave is composed of the byte count , data and exception codes in negative acknowledgements, corresponding to the request message.

The effective range of data is -32768 to 32767 (8000H to 7FFFH).

Refer to “11.1 Communication Command List (P.11-1 to P.11-20)”.

(4) Error Check

After calculating CRC-16 (Cyclic Redundancy Check) from the slave address to the end of the data, the calculated 16-bit data is appended to the end of message in sequence from low order to high order.

[How to calculate CRC-16]

In the CRC-16 system, the information is divided by the polynomial series. The remainder is added to the end of the information and transmitted. The generation of a polynomial series is as follows.

(Generation of polynomial series: $X^{16} + X^{15} + X^2 + 1$)

- ① Initialize the CRC-16 data (assumed as X) (FFFFH).
- ② Calculate exclusive OR (XOR) with the 1st data and X. This is assumed as X.
- ③ Shift X one bit to the right. This is assumed as X.
- ④ When a carry is generated as a result of the shift, XOR is calculated by X of ③ and the fixed value (A001H). This is assumed as X. If a carry is not generated, go to step ⑤.
- ⑤ Repeat steps ③ and ④ until shifting 8 times.
- ⑥ XOR is calculated with the next data and X. This is assumed as X.
- ⑦ Repeat steps ③ to ⑤.
- ⑧ Repeat steps ③ to ⑤ up to the final data.
- ⑨ Set X as CRC-16 to the end of message in sequence from low order to high order.

10.4 Message Example

Numerals written below the command represent the number of characters.

(1) Read [Slave address 1, CH1 PV (03E8H)]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (03H)	Data item (03E8H)	Amount of data (0001H)	Error check CRC-16 (047AH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status [When PV=600°C (0258H)]

Idle 3.5 characters	Slave address (01H)	Function code (03H)	Response byte count (02H)	Data (59D8H)	Error check CRC-16 (824EH)	Idle 3.5 characters
	1	1	1	2	2	

(2) Write [Slave address 1, CH1 SV (0018H)]

- A request message from the master [When SV 23.000°C (59D8H)]

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0018H)	Data (59D8H)	Error check CRC-16 (33C7H)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0018H)	Data (59D8H)	Error check CRC-16 (33C7H)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in exception (error) status (When a value out of the setting range is set)

The function code MSB is set to 1 for the response message in exception (error) status, and 86H is returned.

The exception code 03H (Value out of the setting range) is returned (error).

Idle 3.5 characters	Slave address (01H)	Function code (86H)	Exception code (03H)	Error check CRC-16 (0261H)	Idle 3.5 characters
	1	1	1	2	

(3) Read [Slave address 1, CH1 SV(0018H)]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (03H)	Data item (0018H)	Amount of data (0001H)	Error check CRC-16 (040DH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status [When SV 23.000°C (59D8H)]

Idle 3.5 characters	Slave address (01H)	Function code (03H)	Response byte count (02H)	Data (59D8H)	Error check CRC-16 (824EH)	Idle 3.5 characters
	1	1	1	2	2	

- Response message from the slave in exception (error) status (When data item is incorrect)

The function code MSB is set to 1 for the response message in exception (error) status, and 83H is returned.

The exception code 02H (Non-existent data address) is returned (error).

Idle 3.5 characters	Slave address (01H)	Function code (83H)	Exception code (02H)	Error check CRC-16 (C0F1H)	Idle 3.5 characters
	1	1	1	2	

(4) Write 4 commands [Slave address 1, CH1 SV (0018H) to CH4 SV (001BH)]

(Writing multiple pieces of data)

The configuration of the data is as follows.

Amount of data : 4(0004H)

Byte count : 8(08H)

Data : Data is converted to Hexadecimal.

Data Item		Data	Data (Converted to Hexadecimal)
0018H	CH1 SV setting	23.000°C	59D8H
0019H	CH2 SV setting	23.000°C	6D60H
001AH	CH3 SV setting (*)	0°C	0000H
001BH	CH4 SV setting (*)	0°C	0000H

(*) Set 0 for CH3 and CH4.

- A request message from the master (When writing the above data)

Idle 3.5 characters	Slave address (01H)	Function code (10H)	Data item (0018H)	Data (00040859D86D6000000000H)
	1	1	2	11

Error check CRC-16 (83B4H)	Idle 3.5 characters
2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (10H)	Data item (0018H)	Data (0004H)	Error check CRC-16 (41CDH)	Idle 3.5 characters
	1	1	2	2	2	

(5) Read 4 commands [Slave address 1, CH1 SV (0018H) to CH4 SV (001BH)]

(Reading multiple pieces of data)

- A request message from the master (When reading the above data)

Idle 3.5 characters	Slave address (01H)	Function code (03H)	Data item (0018H)	Amount of data (0004H)	Error check CRC-16 (C40EH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (03H)	Response byte count (08H)	Data (59D86D600000000000H)	
	1	1	1	8	

	Error check CRC-16 (8039H)	Idle 3.5 characters
	2	

The data the response message is as follows.

Data Item		Data	Data (Converted to Hexadecimal)
0018H	CH1 SV setting	23.000°C	59D8H
0019H	CH2 SV setting	23.000°C	6D60H
001AH	CH3 SV setting	0°C	0000H
001BH	CH4 SV setting	0°C	0000H

11 Communication Command List



CAUTION

Note the following when communicating.

- When writing to CH3 and CH4, the command returns acknowledgement. When writing to CH3 and CH4, it returns an acknowledgement. However, the setting items other than the heater burnout alarm setting will not work.

When writing multiple data, write 0 to CH3 and CH4.

- When CH3 and CH4 are read by the read and write commands, the data of the setting items other than the heater burnout alarm setting is indefinite.

When reading CH3 and CH4 with the read command, the data of the setting items other than the heater current value reading always returns 0.

11.1 Communication Command List

This section explains each item of communication command.

- Data Item
This is a setting item for the control module QTC1- R.
- Amount of data
The amount of data that can be handled by each data item.
The amount of setting items for each channel is 4.
The amount of setting items for each module is 1.
- Channel
This is a channel number of the control module QTC1- R.
- Address [HEX (Hexadecimal), DEC (Decimal)]
This is an each channel address of the control module QTC1- R.
- Attribute
R/W: Read and write (Host ↔ Control module QTC1- R)
RO: Read only (Host ← Control module QTC1- R)
- Data
This is an explanation of the setting range and setting conditions for each data.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
System	4	CH1 CH2 CH3 CH4	0000 0001 0002 0003	0 1 2 3		This is a system item for internal processing. Please do not use.
Control Allowed/ Prohibited selection	2	CH1 CH2	0004 0005	4 5	R/W	0000H: Control Prohibited 0001H: Control Allowed
AT Perform/Cancel selection	2	CH1 CH2	0008 0009	8 9	R/W	0000H: AT cancel 0001H: AT perform
Event output ON/OFF selection (*1)	4	CH1 CH2 CH3 CH4	000C 000D 000E 000F	12 13 14 15	R/W	0000H: Event output OFF 0001H: Event output ON
Auto/Manual control selection	2	CH1 CH2	0010 0011	16 17	R/W	0000H: Automatic control 0001H: Manual control
Manual MV setting (*2)	2	CH1 CH2	0014 0015	20 21	R/W	-5.0 to 105.0%
SV setting	2	CH1 CH2	0018 0019	24 25	R/W	Scaling low limit to Scaling high limit
Proportional band setting	2	CH1 CH2	001C 001D	28 29	R/W	0.001 to Input span °C
Integral time setting	2	CH1 CH2	0020 0021	32 33	R/W	0 to 3600 seconds or 0.0 to 2000.0 seconds For "2: Slow-PID control" is selected in control action: 1 to 3600 seconds or 0.1 to 2000.0 seconds
Derivative time setting	2	CH1 CH2	0024 0025	36 37	R/W	0 to 3600 seconds or 0.0 to 2000.0 seconds
Proportional cycle setting	2	CH1 CH2	0028 0029	40 41	R/W	0.1 to 100.0 seconds

(*1): For event output 4-point specification, CH3 and CH4 of the following data item are valid (Y:1 to 4).

Event output ON/OFF selection
Alarm Y action selection
Alarm Y hysteresis setting
Alarm Y value setting
Alarm Y high limit value setting
Alarm Y value 0 Enable/Disable selection
Event output allocation selection

(*2): This is valid when the manual control is selected in "Auto/Manual control".
When automatic control is selected, negative acknowledgment is returned.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
ON/OFF hysteresis setting	2	CH1 CH2	002C 002D	44 45	R/W	0.001 to 10.000°C
Output high limit setting	2	CH1 CH2	0030 0031	48 49	R/W	Output low limit to 100.0% For current output: Output low limit to 105.0%
Output low limit setting	2	CH1 CH2	0034 0035	52 53	R/W	0.0% to output high limit For current output: -5.0% to output high limit
Alarm 1 action selection	4	CH1 CH2 CH3 (*1) CH4 (*2)	0038 0039 003A 003B	56 57 58 59	R/W	0000H: No event 0001H: High limit alarm 0002H: Low limit alarm 0003H: High/Low limits alarm 0004H: High/Low limits range alarm
Alarm 2 action selection	4	CH1 CH2 CH3 (*1) CH4 (*2)	003C 003D 003E 003F	60 61 62 63	R/W	0005H: Process high alarm 0006H: Process low alarm 0007H: High limit with standby
Alarm 3 action selection	4	CH1 CH2 CH3 (*1) CH4 (*2)	0040 0041 0042 0043	64 65 66 67	R/W	0008H: Low limit with standby 0009H: High/Low limits alarm with standby 000AH: High/Low limits alarm individually
Alarm 4 action selection	4	CH1 CH2 CH3 (*1) CH4 (*2)	0044 0045 0046 0047	68 69 70 71	R/W	000BH: High/Low limits range alarm individually 000CH: High/Low limits alarm with standby individually
Alarm 1 hysteresis setting	4	CH1 CH2 CH3 CH4	0048 0049 004A 004B	72 73 74 75	R/W	0.1 to 1000.0°C (0.1 to 1800.0°F) For direct current input and DC voltage input: 1 to 10000
Alarm 2 hysteresis setting	4	CH1 CH2 CH3 CH4	004C 004D 004E 004F	76 77 78 79	R/W	
Alarm 3 hysteresis setting	4	CH1 CH2 CH3 CH4	0050 0051 0052 0053	80 81 82 83	R/W	
Alarm 4 hysteresis setting	4	CH1 CH2 CH3 CH4	0054 0055 0056 0057	84 85 86 87	R/W	

(*1): Operates on CH1 input.

The same applies to CH3 as described in alarm hysteresis setting, alarm value setting, alarm high limit value setting, and alarm value 0 Enable/Disable selection; therefore, the annotation is omitted.

(*2): Operates on CH2 input.

The same applies to CH4 as described in alarm hysteresis setting, alarm value setting, alarm high limit value setting, and alarm value 0 Enable/Disable selection; therefore, the annotation is omitted.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Alarm 1 value setting	4	CH1	0058	88	R/W	Refer to “Alarm 1 to 4 value setting range table (P.11-5)”.
		CH2	0059	89		
		CH3	005A	90		
		CH4	005B	91		
Alarm 1 high limit value setting	4	CH1	005C	92	R/W	
		CH2	005D	93		
		CH3	005E	94		
		CH4	005F	95		
Alarm 2 value setting	4	CH1	0060	96	R/W	
		CH2	0061	97		
		CH3	0062	98		
		CH4	0063	99		
Alarm 2 high limit value setting	4	CH1	0064	100	R/W	
		CH2	0065	101		
		CH3	0066	102		
		CH4	0067	103		
Alarm 3 value setting	4	CH1	0068	104	R/W	
		CH2	0069	105		
		CH3	006A	106		
		CH4	006B	107		
Alarm 3 high limit value setting	4	CH1	006C	108	R/W	
		CH2	006D	109		
		CH3	006E	110		
		CH4	006F	111		
Alarm 4 value setting	4	CH1	0070	112	R/W	
		CH2	0071	113		
		CH3	0072	114		
		CH4	0073	115		
Alarm 4 high limit value setting	4	CH1	0074	116	R/W	
		CH2	0075	117		
		CH3	0076	118		
		CH4	0077	119		
Heater burnout alarm setting(*)	4	CH1	0078	120	R/W	For 20 A is selected: 0.0 to 20.0 A For 100 A is selected: 0.0 to 100.0 A
		CH2	0079	121		
		CH3	007A	122		
		CH4	007B	123		
Loop break alarm band setting	2	CH1	007C	124	R/W	0.000 to 15.000℃
		CH2	007D	125		
Loop break alarm time setting	2	CH1	0080	128	R/W	0 to 200 minutes
		CH2	0081	129		

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Sensor correction factor setting	2	CH1 CH2	0084 0085	132 133	R/W	0.000 to 10.000
Sensor correction setting	2	CH1 CH2	0088 0089	136 137	R/W	-10.000 to 10.000°C
PV filter time constant setting	2	CH1 CH2	008C 008D	140 141	R/W	0.0 to 10.0 seconds
SV rise rate setting	2	CH1 CH2	0090 0091	144 145	R/W	0.000 to 10.000 °C/min
SV fall rate setting	2	CH1 CH2	0094 0095	148 149	R/W	0.000 to 10.000 °C/min
MV bias setting	2	CH1 CH2	0098 0099	152 153	R/W	0.0 to 100.0%

Alarm 1 to 4 value setting range table

Alarm action	Setting range
No event	
High limit alarm	-(Input span) to Input span
Low limit alarm	-(Input span) to Input span
High/Low limits alarm	0 to Input span
High/Low limits range alarm	0 to Input span
Process high alarm	Input range low limit to Input range high limit
Process low alarm	Input range low limit to Input range high limit
High limit with standby	-(Input span) to Input span
Low limit with standby	-(Input span) to Input span
High/Low limits alarm with standby	0 to Input span
High/Low limits alarm individually	0 to Input span
High/Low limits range alarm individually	0 to Input span
High/Low limits alarm with standby individually	0 to Input span

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Reservation (*)			009C to 00C7			
Input type selection	2	CH1 CH2	00C8 00C9	200 201	R/W	0: Pt100 4-wire type 0.000 to 32.000°C
Temperature unit selection	2	CH1 CH2	00CC 00CD	204 205	R/W	0000H: °C (Celsius)
Scaling high limit setting	2	CH1 CH2	00D0 00D1	208 209	R/W	Scaling low limit value to Rated high limit value
Scaling low limit setting	2	CH1 CH2	00D4 00D5	212 213	R/W	Rated low limit value to Scaling high limit value
Reservation (*)			00D6 to 00DB			

(*): A single or multiple data are read, the reserved item returns the initial value (0) in acknowledgment.
When writing single or multiple, Acknowledgement is returned and the data is discarded.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Direct/Reverse action selection	2	CH1	00DC	220	R/W	0000H: Reverse action
		CH2	00DD	221		0001H: Direct action
AT action mode selection	2	CH1	00E0	224	R/W	0000H: Normal AT
		CH2	00E1	225		0001H: Start-up AT
AT bias setting	2	CH1	00E4	228	R/W	0.000 to 10.000°C
		CH2	00E5	229		
AT gain setting	2	CH1	00E8	232	R/W	0.1 to 10.0 times
		CH2	00E9	233		
Alarm 1 value 0 Enabled/ Disabled selection	4	CH1	00EC	236	R/W	0000H: Disabled 0001H: Enabled
		CH2	00ED	237		
		CH3	00EE	238		
		CH4	00EF	239		
Alarm 2 value 0 Enabled/ Disabled selection	4	CH1	00F0	240	R/W	
		CH2	00F1	241		
		CH3	00F2	242		
		CH4	00F3	243		
Alarm 3 value 0 Enabled/ Disabled selection	4	CH1	00F4	244	R/W	
		CH2	00F5	245		
		CH3	00F6	246		
		CH4	00F7	247		
Alarm 4 value 0 Enabled/ Disabled selection	4	CH1	00F8	248	R/W	
		CH2	00F9	249		
		CH3	00FA	250		
		CH4	00FB	251		

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Event output allocation selection	4	CH1 CH2 CH3 CH4	00FC 00FD 00FE 00FF	252 253 254 255	R/W	0000H: No action By selecting the event output ON/OFF selection from the host, the event output can be output. When the event output ON/OFF selection is set to 0 (event output OFF), the event output is turned off, and when it is set to 1 (event output ON), the event output is turned on. 0001H: Event output (CH alone) The event output turns ON when any of the alarm, heater burnout alarm or loop break alarm of the selected channel is activated. 0002H: Event output (CH interlocking) The event output turns ON when any of the alarm, heater burnout alarm or loop break alarm is activated in all channels.
Event input allocation selection	2	CH1 CH2	0100 0101	256 257	R/W	0000H: No action It can be used for any operation by reading the event input status flag. 0 is set to the event input status flag when the event input is turned OFF, and 1 is set to it when the event input is turned ON. 0001H: Control start/stop (CH alone) For only selected channels, control is started when the event input is turned ON, and control is stop when the event input is turned OFF. 0002H: Control start/stop (CH interlocking) For all channels, control is started when the event input is turned ON, and control is stop when the event input is turned OFF.
CH Enabled/ Disabled selection	2	CH1 CH2	0104 0105	260 261	R/W	0000H: Disabled 0001H: Enabled
Number of moving average setting	2	CH1 CH2	0108 0109	264 265	R/W	1 to 10 times

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Reservation (*1)			010A to 012B			
Input math function selection	2	CH1 CH2	012C 012D	300 301	R/W	0000H: Standard 0001H: Difference input 0002H: Addition input
Input difference selection	2	CH1 CH2	0130 0131	304 305	R/W	0000H: Disable 0001H: CH1 0002H: CH2
Input difference setting	2	CH1 CH2	0134 0135	308 309	R/W	0.001 to 10.000°C
Control action selection (*2)	2	CH1 CH2	0138 0139	312 313	R/W	0000H: 2 DOF PID control 0001H: Fast-PID control 0002H: Slow-PID control 0003H: ON-OFF control 0004H: Gap-PID control Selectable only when control is prohibited.
Proportional gain 2 DOF coefficient (α) setting	2	CH1 CH2	013C 013D	316 317	R/W	0.00 to 1.00 When select “1: Fast-PID control”, “2: Slow-PID control”, “3: ON-OFF control”, or “4: Gap-PID control” in control action, do not change this setting item.
Integral 2 DOF coefficient (β) setting	2	CH1 CH2	0140 0141	320 321	R/W	0.00 to 10.00 When select “1: Fast-PID control”, “2: Slow-PID control”, “3: ON-OFF control”, or “4: Gap-PID control” in control action, do not change this setting item.
Derivative 2 DOF coefficient (γ) setting	2	CH1 CH2	0144 0145	324 325	R/W	0.00 to 1.00 Do not change this setting item.

(*1): A single or multiple data are read, the reserved item returns the initial value (0) in acknowledgment.

When writing single or multiple, acknowledgement is returned and the data is discarded.

(*2): When integral time is 0 or 0.0, if Slow-PID control is selected or control action is selected when control is enabled (during control execution), error code 17 (11H) is returned with negative acknowledgement.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Desired value proportional coefficient (Cp) setting	2	CH1 CH2	0148 0149	328 329	R/W	0.00 to 1.00 Do not change this setting item.
Gap width setting	2	CH1 CH2	014C 014D	332 333	R/W	0.0 to 10.0% Proportional band × Gap width
Gap coefficient setting	2	CH1 CH2	0150 0151	336 337	R/W	0.0 to 1.0
Output minimum ON/OFF time setting	2	CH1 CH2	0154 0155	340 341	R/W	0 to 1000 ms
Integral/ Derivative decimal point position selection	2	CH1 CH2	0158 0159	344 345	R/W	0000H: Without decimal point 0001H: With decimal point
Power-on restore action selection	2	CH1 CH2	015C 015D	348 349	R/W	0000H: Stopped state (Return to automatic control) 0001H: Continuous state (Return to automatic control) 0002H: Stopped state (Return to previous state) 0003H: Continuous state (Return to previous state)
Reservation (*1)			015E to 018F			
Control function selection	2	CH1 CH2	0190 0191	400 401	R/W	0000H: Standard 0001H: Heating/cooling control (*2) 0002H: Cascade control (*2) 0003H: Output selection function Selectable only when control is prohibited.
Cooling P-band setting (*3)	1	CH1	0194	404	R/W	0.000 to linput span °C

(*1): A single or multiple data are read, the reserved item returns the initial value (0) in acknowledgment.

When writing single or multiple, Acknowledgement is returned and the data is discarded.

(*2): Select CH1 for heating/cooling control and cascade control.

It is disabled when CH2 is selected.

(*3): Set with CH1.

It is disabled when set with CH2.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Cooling Integral time setting (*)	1	CH1	0198	408	R/W	0 to 3600 seconds
Cooling Derivative time setting (*)	1	CH1	019C	412	R/W	0 to 3600 seconds
Cooling proportional cycle setting (*)	1	CH1	01A0	416	R/W	0.1 to 100.0 seconds
Cooling ON/OFF hysteresis setting (*)	1	CH1	01A4	420	R/W	0.001 to 10.000°C
Overlap/Dead band setting (*)	1	CH1	01A8	424	R/W	-10.000 to 10.000°C
Cooling output high limit setting (*)	1	CH1	01AC	428	R/W	Cooling output low limit to 100.0% For current output: Cooling output low limit to 105.0%
Cooling output low limit setting (*)	1	CH1	01B0	432	R/W	0.0% to Cooling output high limit For current output: -5.0% to Cooling output high limit
Cooling action mode selection (*)	1	CH1	01B4	436	R/W	0000H: Air cooling (Linear characteristics) 0001H: Oil cooling (1.5th power of the linear characteristics) 0002H: Water cooling (2nd power of the linear characteristics)
Slave scale high limit setting (*)	1	CH1	01B8	440	R/W	Slave scale low limit to Slave input range high limit
Slave scale low limit setting (*)	1	CH1	01BC	444	R/W	Slave input range low limit to Slave scale high limit
Output bias setting	2	CH1 CH2	01C0 01C1	448 449	R/W	0.0 to 100.0%

(*): Set with CH1.

It is disabled when set with CH2.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Output gain setting	2	CH1 CH2	01C4 01C5	452 453	R/W	0.00 to 10.00 times
Output channel selection	2	CH1 CH2	01C8 01C9	456 457	R/W	0001H: CH1 0002H: CH2
Output rate-of-change setting	2	CH1 CH2	01CC 01CD	460 461	R/W	0.00 to 100.00 %/sec
Control action selection when input error	2	CH1 CH2	01D0 01D1	464 465	R/W	0000H: Operation amount set value at input error 0001H: Control operation continued
Output manipulated variable setting when input error	2	CH1 CH2	01D4 01D5	468 469	R/W	-5.0 to 105.0 %
Reservation (*1)			01D6 to 01F3			
Communication response delay time setting (*2)	1		01F4	500	R/W	0 to 1000 ms
Extension function selection	1		01F5	501	R/W	0000H: Without expanded function 0001H: Peak power suppression function 0002H: Auto balance control function
Total current setting	1		01F6	502	R/W	0.0 to 400.0 A
Current value setting	2	CH1 CH2	01F7 01F8	503 504	R/W	0.0 to 100.0 A
OUT ON delay setting	1		01FB	507		0 to 100 ms

(*1): A single or multiple data are read, the reserved item returns the initial value (0) in acknowledgment.

When writing single or multiple, Acknowledgement is returned and the data is discarded.

(*2) When connecting to the communication expansion module QMC1-C□, set the communication response delay time to 0 ms (initial value).

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Auto balance control Interlock/Single selection	1		01FC	508	R/W	0000H: Single 0001H: Interlock
Auto balance control Master/Slave selection	1		01FD	509	R/W	0000H: Slave channel 0001H: CH1 master channel 0002H: CH2 master channel
Auto balance control Enabled/ Disabled selection	2	CH1 CH2	01FE 01FF	510 511	R/W	0000H: Disabled 0001H: Enabled
Auto balance control start output setting	2	CH1 CH2	0202 0203	514 515	R/W	0.00 to 1.00 (corresponds to 0 to 100%)
Auto balance control cancel area setting (*)	2	CH1 CH2	0206 0207	518 519	R/W	0.000 to Input span °C
Number of communication management module setting	1		020A	522	R/W	1 to 16 modules
Non-volatile IC memory save selection	1		020B	523	R/W	0000H: Save permission 0001H: Save prohibited
Host setting value change flag clearing selection	1		020C	524	R/W	0000H: Clear 0001H: Do not clear (Change setting value)
USB setting value change flag clearing selection	1		020D	525	R/W	0000H: Clear 0001H: Do not clear (Change setting value)

(*): When set to 0, the auto balance control cancel area is twice the proportional band of the master channel.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
PV reading (including difference)	2	CH1 CH2	03E8 03E9	1000 1001	RO	Value of "15.2.1 Control Range (P.15-6)" Corresponding to Input calculation function (Difference input, Addition input) and Input difference detection. (*1)
MV reading	2	CH1 CH2	03EC 03ED	1004 1005	RO	Output low limit to Output high limit
SV reading	2	CH1 CH2	03F0 03F1	1008 1009	RO	Scaling low limit to Scaling high limit
Status flag 1 reading	4	CH1 CH2 CH3 (*2) CH4 (*2)	03F4 03F5 03F6 03F7	1012 1013 1014 1015	RO	B0: Control Enable/Disable 0: Disable 1: Enable B1: AT Perform/Cancel 0: Cancel 1: Perform B2: Auto/Manual control 0: Automatic 1: Manual B3: Control output 0: OFF 1: ON B4: Input error (Overscale) 0: Normal 1: Error B5: Input Error (Underscale) 0: Normal 1: Error B6: Alarm 1 output 0: OFF 1: ON B7: Alarm 2 output 0: OFF 1: ON B8: Alarm 3 output 0: OFF 1: ON B9: Alarm 4 output 0: OFF 1: ON B10: Loop break alarm output 0: OFF 1: ON B11: Heater burnout alarm output 0: OFF 1: ON B12: Input difference 0: Within range 1: Without range B13: Not used (indefinite) B14: Power supply identification (*3) 0: 24 V DC 1: USB bus power B15: Non-volatile IC memory error 0: Normal 1: Error

(*1): When power is supplied from the host computer by USB bus power, 0 is returned.

(*2): Only B6 to B9 will be set.

(*3) When power is supplied from 24 V DC and USB bus power, 0: 24 V DC is returned.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Status flag 2 reading	2	CH1 CH2	03F8 03F9	1016 1017	RO	B0: Auto balance control 0: None 1: During auto balance control B1 to B3: Not used (indefinite) B4: Cold junction error 0: Normal 1: Error B5: Sensor error 0: Normal 1: Error B6: ADC error 0: Normal 1: Error B7: Host setting value change flag (*1) 0: Without flag 1: With flag B8: USB setting value change flag (*2) 0: Without flag 1: With flag B9 to B15: Not used (indefinite)
Heater current value reading	4	CH1 CH2 CH3 CH4	03FC 03FD 03FE 03FF	1020 1021 1022 1023	RO	0.0 to 20.0 A or 0.0 to 100.0 A
Event input reading	2	CH1 CH2	0400 0401	1024 1025	RO	0000H: OFF 0001H: ON
Event output reading	4	CH1 CH2 CH3 CH4	0404 0405 0406 0407	1028 1029 1030 1031	RO	0000H: OFF 0001H: ON

(*1): When the host setting value change flag is changed from the host communication side, "1: With flag" is set in B7: Host setting value change flag.

When clear (0000H) is received by the USB setting value change flag clear selection (020CH), "0: Without flag" is set in B7: Host setting value change flag.

(*2): When the USB setting value change flag is changed from the USB communication side, "1: With flag" is set in B8: USB setting value change flag.

When clear (0000H) is received by the USB setting value change flag clear selection (020DH), "0: Without flag" is set in B8: USB setting value change flag.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
PV reading (true value)	2	CH1 CH2	0408 0409	1032 1033	RO	Value of "15.2.1 Control Range (P.15-6)" The input value of each channel is read regardless of the calculation function (Difference input, Addition input) and input difference detection. (*)

(*): When power is supplied from the host computer by USB bus power, 0 is returned.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Alarm history 1 Error No.	4	CH1	044C	1100	RO	B0: Alarm 1 0: Normal 1: Error
		CH2	044D	1101		B1: Alarm 2 0: Normal 1: Error
		CH3 (*)	044E	1102		
		CH4 (*)	044F	1103		
Alarm history 2 Error No.	4	CH1	0450	1104	RO	B2: Alarm 3 0: Normal 1: Error
		CH2	0451	1105		B3: Alarm 4 0: Normal 1: Error
		CH3 (*)	0452	1106		
		CH4 (*)	0453	1107		
Alarm history 3 Error No.	4	CH1	0454	1108	RO	B4: Heater burnout alarm 0: Normal 1: Error
		CH2	0455	1109		B5: Not used (indefinite)
		CH3 (*)	0456	1110		B6: Loop break alarm 0: Normal 1: Error
		CH4 (*)	0457	1111		B7: Sensor error 0: Normal 1: Error
Alarm history 4 Error No.	4	CH1	0458	1112	RO	B8: Input error (Overscale) 0: Normal 1: Error
		CH2	0459	1113		B9: Input error (Underscale) 0: Normal 1: Error
		CH3 (*)	045A	1114		B10: Cold junction error 0: Normal 1: Error
		CH4 (*)	045B	1115		B11: Non-volatile IC memory error 0: Normal 1: Error
Alarm history 5 Error No.	4	CH1	045C	1116	RO	B12: ADC error 0: Normal 1: Error
		CH2	045D	1117		B13: Not used (indefinite)
		CH3 (*)	045E	1118		B14: Not used (indefinite)
		CH4 (*)	045F	1119		B15: Not used (indefinite)
Alarm history 6 Error No.	4	CH1	0460	1120	RO	
		CH2	0461	1121		
		CH3 (*)	0462	1122		
		CH4 (*)	0463	1123		
Alarm history 7 Error No.	4	CH1	0464	1124	RO	
		CH2	0465	1125		
		CH3 (*)	0466	1126		
		CH4 (*)	0467	1127		
Alarm history 8 Error No.	4	CH1	0468	1128	RO	
		CH2	0469	1129		
		CH3 (*)	046A	1130		
		CH4 (*)	046B	1131		
Alarm history 9 Error No.	4	CH1	046C	1132	RO	
		CH2	046D	1133		
		CH3 (*)	046E	1134		
		CH4 (*)	046F	1135		
Alarm history 10 Error No.	4	CH1	0470	1136	RO	
		CH2	0471	1137		
		CH3 (*)	0472	1138		
		CH4 (*)	0473	1139		

(*): Only B0 to B4 will be set.

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Alarm history 1 Total energizing time	4	CH1 CH2 CH3 CH4	0474 0475 0476 0477	1140 1141 1142 1143	RO	Total energizing time when an error occurs
Alarm history 2 Total energizing time	4	CH1 CH2 CH3 CH4	0478 0479 047A 047B	1144 1145 1146 1147	RO	
Alarm history 3 Total energizing time	4	CH1 CH2 CH3 CH4	047C 047D 047E 047F	1148 1149 1150 1151	RO	
Alarm history 4 Total energizing time	4	CH1 CH2 CH3 CH4	0480 0481 0482 0483	1152 1153 1154 1155	RO	
Alarm history 5 Total energizing time	4	CH1 CH2 CH3 CH4	0484 0485 0486 0487	1156 1157 1158 1159	RO	
Alarm history 6 Total energizing time	4	CH1 CH2 CH3 CH4	0488 0489 048A 048B	1160 1161 1162 1163	RO	
Alarm history 7 Total energizing time	4	CH1 CH2 CH3 CH4	048C 048D 048E 048F	1164 1165 1166 1167	RO	
Alarm history 8 Total energizing time	4	CH1 CH2 CH3 CH4	0490 0491 0492 0493	1168 1169 1170 1171	RO	
Alarm history 9 Total energizing time	4	CH1 CH2 CH3 CH4	0494 0495 0496 0497	1172 1173 1174 1175	RO	
Alarm history 10 Total energizing time	4	CH1 CH2 CH3 CH4	0498 0499 049A 049B	1176 1177 1178 1179	RO	

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Contact switching total number of times (High)	2	CH1 CH2	049C 049D	1180 1181	RO	Contact switching total number of times (High)
Contact switching total number of times (Low)	2	CH1 CH2	04A0 04A1	1184 1185	RO	Contact switching total number of times (Low)
Total energizing time (High, Low)	2	(High) (Low)	04A4 04A5	1188 1189	RO	Total energizing time 1 count/10 min
Heater accumulated energizing time (High)	2	CH1 CH2	04A8 04A9	1192 1193	RO	Heater accumulated energizing time (High) 1 count/1 min
Heater accumulated energizing time (Low)	2	CH1 CH2	04AC 04AD	1196 1197	RO	Heater accumulated energizing time (Low) 1 count/1 min
Output form	2	CH1 CH2	04B0 04B1	1200 1201	RO	0000H: Relay contact output 0001H: Non-contact voltage (for SSR drive) output 0002H: Open collector output 0003H: Not used (indefinite) 0004H: Direct current output 4 to 20 mA DC 0005H: Direct current output 0 to 20 mA DC 0006H: DC voltage output 0 to 1 V DC 0007H: DC voltage output 0 to 5 V DC 0008H: DC voltage output 1 to 5 V DC 0009H: DC voltage output 0 to 10 V DC
Input form	2	CH1 CH2	04B4 04B5	1204 1205	RO	0003H: Input code R
Product code	1		04B8	1208	RO	Product code
Presence of communication option	1		04B9	1209	RO	0000H: No option 0001H: With power supply/upper communication function 0002H: With power supply/CUnet communication function
Wiring type	1		04BA	1210	RO	0000H: Terminal type 0001H: Connector type
Presence of heater burnout alarm option	1		04BB	1211	RO	0000H: No option 0001H: Rated 20 A 0002H: Rated 100 A

Data Item	Amount of data:	Channel	Address		Attribute	Data
			HEX	DEC		
Presence of event option	1		04BC	1212	RO	0000H: No option 0001H: Event input (2 points) 0002H: Event output (2 points)
Software version	1		04BD	1213	RO	Software version
Manufacturing date	1		04BE	1214	RO	Manufacturing date (e.g. 2009: September 2020)
Hardware version	1		04BF	1215	RO	Hardware version
Reservation (*)			04C0 to 0513			
Maintenance mode selection	1		0514	1300	R/W	0000H: Normal mode 0001H: Maintenance mode
Control output forced ON/OFF selection	2	CH1 CH2	0515 0516	1301 1302	R/W	0000H: Control output OFF 0001H: Control output ON
Event output forced ON/OFF selection	4	CH1 CH2 CH3 CH4	0519 051A 051B 051C	1305 1306 1307 1308	R/W	0000H: Event output OFF 0001H: Event output ON
Contact switching total number of times setting (High)	2	CH1 CH2	051D 051E	1309 1310	R/W	Contact switching total number of times (High)
Contact switching total number of times setting (Low)	2	CH1 CH2	0521 0522	1313 1314	R/W	Contact switching total number of times (Low)
Heater accumulated energizing time setting (High)	2	CH1 CH2	0525 0526	1317 1318	R/W	Heater accumulated energizing time (High) 1 count/1 min
Heater accumulated energizing time setting (Low)	2	CH1 CH2	0529 052A	1321 1322	R/W	Heater accumulated energizing time (Low) 1 count/1 min

(*): A single or multiple data are read, the reserved item returns the initial value (0) in acknowledgment.
When writing single or multiple, Acknowledgement is returned and the data is discarded.

11.2 Data

11.2.1 Notes About Write/Read Command

- The data (set value, decimal) is converted to a hexadecimal number.
Negative numbers are represented in 2's complement.
- Do not use undefined Data items. If they are used, negative acknowledgement will be returned or a random value will be written or read, resulting in malfunction.
- MODBUS protocol uses Holding Register addresses. The Holding Register addresses are created as follows.

A data item is converted to decimal number, and the offset of 40001 is added. The result is the Holding Register address.

Using CH1 SV (0018H) as an example: Data item in the sending message is 0018H, however, MODBUS protocol Holding Register address is 40025 (24+40001).

11.2.2 Write Command

- The lifetime of the non-volatile IC memory is about 1 trillion writes.
Do not change the set value frequently by communication, as the set value storage retention time may be shortened if the number of times is exceeded. (If the set value is the same as the value before setting, it is not written to the non-volatile IC memory.)
- When data (set value) has a decimal point, a whole number (hexadecimal) without a decimal point is used.
- If the operation is changed with Alarm 1 action to Alarm 4 action (0038H to 0047H), Alarm 1 value to Alarm 4 value (0058H to 0077H) will return to the factory default values.
For the items to be initialized, refer to "11.5 Initialization Items by Changing Settings (P.11-23)".
- Even if options are not ordered, writing via software communication will be possible. However, their command contents will not function.
- Communication parameters such as module address and communication speed of this instrument cannot be written by software communication. Set it with the rotary switch for module address selection and the dip switch for selecting communication specifications.
- When Write is executed using the Broadcast address [(00H) MODBUS protocol] command, the command is sent to all the connected slaves. However, a response is not returned.

11.2.3 Read Command

- When the data (set value) has a decimal point, a whole number (hexadecimal) without a decimal point is used for a response.

11.3 Negative Acknowledgement

11.3.1 Error Code 2 (02H)

The slave will return Error code 2 (02H) in the following case.

- When non-existent data item is read or written.

11.3.2 Error Code 3 (03H)

The slave will return Error code 3 (03H) in the following case.

- When a value out of the setting range is written.

11.3.3 Error Code 17 (11H)

The slave will return Error code 17 (11H) in the following case.

- When AT execution (0001H) is written with AT execution/stop selection (0008H to 000BH) during PI operation or ON/OFF operation.
- When AT execution (0001H) is written with AT execution/stop selection (0008H to 000BH) during AT execution.

When the control enable/disable selection (0004H to 0007H) is written during AT execution.

- When manual control MV setting (0014H to 0017H) is written during automatic control.

11.4 Notes on Programming Monitoring Software

11.4.1 How to Speed up the Scan Time

When monitoring multiple this instrument, set the program so that the requisite minimum pieces of data such as PV (03E8H to 03E9H), MV (03ECH to 03EDH), Status flag 1 (03F4H to 03F7H) can be read.

For other data, set the program so that they can be read only when their set value has changed.

This will speed up the scan time.

11.4.2 How to Read PID Parameters after AT or Start-up AT Finishes

While AT or Start-up AT is performing, this instrument sets "B1: AT Perform/Cancel" of "Status flag 1 (03F4H to 03F7H)" to "1: AT Perform".

After AT or Start-up AT is finished, PID parameters are updated.

On the monitoring software side, check that "B1: AT Perform/Cancel" of "Status flag 1 (03F4H to 03F7H)" has been set to "0: AT Cancel", then read parameters such as P, I, D.

11.4.3 Notes on Batch Transmission of All Setting Values

- If the operation is changed with Alarm 1 action to Alarm 4 action (0038H to 0047H), Alarm 1 value to Alarm 4 value (0058H to 0077H) will return to the factory default values.

Send the Alarm action and then the Alarm value.

For the items to be initialized, refer to "11.5 Items to be Initialized by Changing Settings (P.11-23)".

- If the input type is changed with Input type (00C8H to 00C9H), the setting values such as SV, Proportional band, and Alarm 1 value are initialized.

Send the Input type and then the other setting values.

For the items to be initialized, refer to "11.5 Initialization Items by Changing Settings (P.11-23)".

11.5 Initialization Items by Changing Settings

The items that are initialized by changing the settings are shown below.

○: Initialize

—: Not initialize

Setting change item Initialized item	Input type (00C8H to 00C9H)	Temperature unit (00CCH to 00CDH)	Alarm 1 action (0038H to 003BH)	Alarm 2 action (003CH to 003FH)	Alarm 3 action (0040H to 0043H)	Alarm 4 action (0044H to 0047H)
SV (0018H to 0019H)	○	○	—	—	—	—
Proportional band (001CH to 001DH)	○	○	—	—	—	—
ON/OFF hysteresis (002CH to 002DH)	○	○	—	—	—	—
Alarm 1 hysteresis (0048H to 004BH)	○	○	○	—	—	—
Alarm 2 hysteresis (004CH to 004FH)	○	○	—	○	—	—
Alarm 3 hysteresis (0050H to 0053H)	○	○	—	—	○	—
Alarm 4 hysteresis (0054H to 0057H)	○	○	—	—	—	○
Alarm 1 value (0058H to 005BH)	○	○	○	—	—	—
Alarm 1 high limit value (005CH to 005FH)	○	○	○	—	—	—
Alarm 2 value (0060H to 0063H)	○	○	—	○	—	—
Alarm 2 high limit value (0064H to 0067H)	○	○	—	○	—	—
Alarm 3 value (0068H to 006BH)	○	○	—	—	○	—
Alarm 3 high limit value (006CH to 006FH)	○	○	—	—	○	—
Alarm 4 value (0070H to 0073H)	○	○	—	—	—	○
Alarm 4 high limit value (0074H to 0077H)	○	○	—	—	—	○
Loop break alarm band (007CH to 007DH)	○	○	—	—	—	—
Loop break alarm time (0080H to 0081H)	○	○	—	—	—	—
Sensor correction factor (0084H to 0085H)	○	○	—	—	—	—
Sensor correction (0088H to 0089H)	○	○	—	—	—	—
SV rise rate (0090H to 0091H)	○	○	—	—	—	—
SV fall rate (0094H to 0095H)	○	○	—	—	—	—
Scaling high limit (00D0H to 00D1H)	○	○	—	—	—	—
Scaling low limit (00D4H to 00D5H)	○	○	—	—	—	—
AT bias (00E4H to 00E5H)	○	○	—	—	—	—
Input difference detection setting (0134H to 0135H)	○	○	—	—	—	—
Cooling P-band (0194H)	○	○	—	—	—	—
Slave scale high limit (01B8H)	○	○	—	—	—	—
Slave scale low limit (01BCH)	○	○	—	—	—	—
Auto balance control cancel area (0206H to 0207H)	○	○	—	—	—	—

12 Operation

This section describes the operation when operating by communicating with the host computer.

Refer to “11.1 Communication Command List (P.11-1 to P.11-20)” for setting the control parameters such as SV and alarm required for operation.

12.1 Control Permission

(1) Before turning the power ON

Check the following contents before turning the power ON to this instrument.

- Preparation of communication program
A communication program is required to connect and use the host computer.
Refer to “10 MODBUS Protocol (P.10-1 to P.10-5)” to create the communication program.
- Select communication specifications
Select the communication specifications such as communication speed, data bit, and parity.
Refer to “5.1.1 Selection of Communication Specifications (P.5-1, P.5-2)”.
- Select module address
Select the module address.
Refer to “5.1.2 Selection of Module Address (P.5-3)”.
- Mounting
Mount the control module QTC1-R to the DIN rail.
Refer to “6 Mounting (P.6-1 to P.6-7)”.
- Wiring
Wire the control module QTC1-R.
Refer to “7 Wiring (P.7-1 to P.7-8)”.
- Connection of host computer and control module QTC1-R
Connect the host computer and control module QTC1-R.
Refer to “7.5 Connection of Host Computer and Control Module QTC1-R (P.7-9, P.7-10)”.

(2) After turning the power ON

Check the following contents after turning the power ON to this instrument.

- Specification setting
Set specifications such as input parameters and output parameters.
Refer to “8 Setting of Specification (P.8-1 to P.8-40)”.
- Control parameters setting
Set the control parameters such as SV and alarm.
Refer to “11.1 Setting of Specification (P.11-1 to P.11-20)”.

(3) Turn OFF → ON the QTC1-R power

Turn OFF → ON the power of QTC1-R. The set value becomes effective.

(4) Turn ON the load circuit power

(5) Permission of control

Select "Control enabled" in "Control enable/disable".

The control operation starts so that the controlled object keeps CH1 SV.

Control enabled [Slave address 1, Control enable/disable of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0004H)	Data (0001H)	Error check CRC-16 (09CBH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0004H)	Data (0001H)	Error check CRC-16 (09CBH)	Idle 3.5 characters
	1	1	2	2	2	

12.2 Set PID Constants (Execute AT)



Caution

- Perform the AT during the trial run.
- During AT, the all setting items can not be set.
- If a power failure occurs during AT execution, AT will be stopped.
- If AT is cancelled during the process, each setting values of P, I, D will revert to the values before AT was performed.
- If AT does not end about 4 hours after starting AT, AT is automatically stopped.
- If AT is executed near normal temperature, the temperature may not change and AT may not end normally.
- When AT is executed under Gap-PID control, D is calculated in 0 seconds.

Execute AT to set the PID constant.

There are two types of AT for this instrument, Normal AT and Start-up AT.

Refer to “AT action (00E0H to 00E1H) (P.11-7)” for AT action selection.

Start-up AT [Slave address 1, AT action of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (00E0H)	Data (0001H)	Error check CRC-16 (49FCH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (00E0H)	Data (0001H)	Error check CRC-16 (49FCH)	Idle 3.5 characters
	1	1	2	2	2	

12.2.1 Normal AT

In order to set each value of P, I, D and ARW automatically, the AT process should be made to fluctuate to obtain an optimal value.


For DC voltage, direct current inputs, the AT process will fluctuate around the SV for conditions of [A], [B] and [C] below. One of 3 types of fluctuation below is automatically selected depending on the deviation between SV and PV.

When AT is executed under Gap-PID control, D is calculated in 0 seconds.

[A] If there is a large difference between the SV and PV as the temperature is rising

When AT bias is set to 2.000°C, AT process will fluctuate at the temperature 2.000°C lower than the SV.


(Abbreviation: Temp.: Temperature)

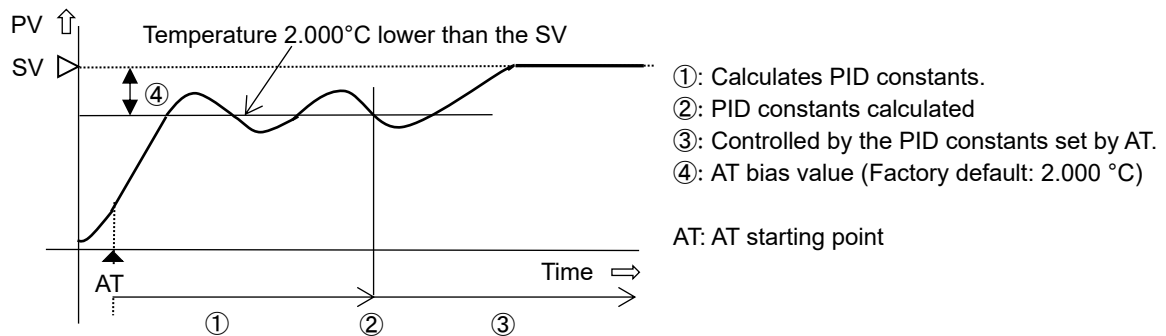

(Fig. 12.2.1-1)

[B] When the control is stable


The AT process will fluctuate around the SV.

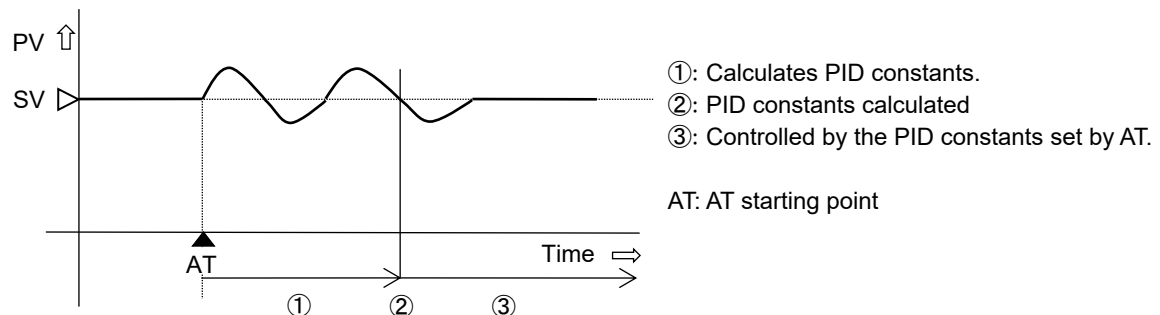

(Fig. 12.2.1-2)

[C] If there is a large difference between the SV and PV as the temperature is falling

When AT bias is set to 2.000°C, AT process will fluctuate at the temperature 2.000°C higher than the SV.

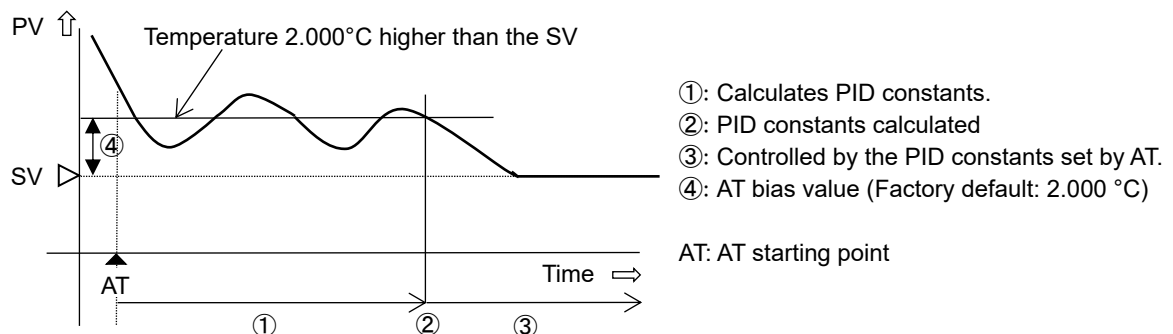

(Fig. 12.2.1-3)

12.2.2 Start-up AT


Start-up AT calculates each set value of P, I, D only in the temperature rising state when normal AT is not performed due to temperature interference.

When AT is executed under Gap-PID control, D is calculated in 0 seconds.

The Start-up AT is not executed for "Heating/Cooling Control" or "Direct action". Select "Normal AT" in "AT Action" and execute.

The start-up AT execution selection value is stored inside this instrument. Therefore, if "Control enable/disable" is selected for "Control enable", Start-up AT is executed every time.

If you want to stop the Start-up AT, select "Normal AT" in "AT Action".

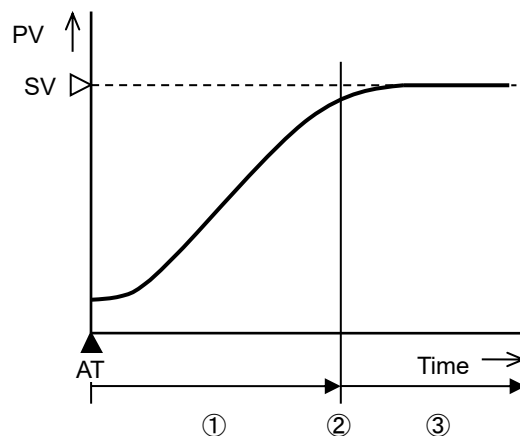

- ①: AT measurement in progress (time from startup to steady state)
- ②: PID constants calculated
- ③: Controlled by PID constant set by startup AT

(Fig. 12.2.2-1)

[Start-up AT execution conditions]

- At the start of Start-up AT, if the deviation between SV and PV is more than twice the proportional band, select Start-up AT with "AT Action" and select "AT Perform (Start-up with AT Perform/Cancel)". If you select "Run AT", Start-up AT is executed. However, if the PV slope and delay time cannot be measured normally to calculate P, I, and D, Start-up AT is stopped. Even after Start-up AT is completed normally, "AT Perform/Cancel" remains "AT Perform". Under the above execution conditions, if "Control enable" is selected in "Control enable/disable", Start-up AT is executed again. If you want to stop Start-up AT, select "Normal AT" in "AT Action".

[Start-up AT stop conditions]

- When "Control disable" is selected in "Control enable/disable"
- When the derivative time is set to 0
- When the input burned out

12.2.3 AT Gain Setting

Set the ratio of the proportional band calculated by Normal AT and Start-up AT.

Please set if necessary.

Setting range: 0.1 to 10.0 times (factory default: 1.0 times)

12.2.4 Executing AT

Refer to "AT Perform/Cancel (0008H to 0009H) (P.11-2)" and select "AT Perform".

AT Perform [Slave address 1, AT Perform/Cancel of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0008H)	Data (0001H)	Error check CRC-16 (C9C8H)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0008H)	Data (0001H)	Error check CRC-16 (C9C8H)	Idle 3.5 characters
	1	1	2	2	2	

During AT execution, set "AT Perform (1)" in B1: AT Perform/Cancel of Status flag 1 (03F4H to 03F7H).

When AT ends, B1: AT Perform/Cancel of Status flag 1 (03F4H to 03F7H) is set to "AT Cancel (0)", and control is performed with the PID constant set in AT.

In addition, the data written by "AT Perform/Cancel (0008H to 0009H)" is automatically cleared [AT Cancel (0000H)].

If AT does not end about 4 hours after starting AT, AT is automatically stopped.

12.3 Set Alarm

For Alarm output, the alarm value is set by deviation from the SV (excluding Process alarm), and if the PV goes outside the range, the Alarm output is turned ON (turned OFF for High/Low limit range alarm). It can select from High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limit range alarm, Process high alarm, Process low alarm, High limit with standby alarm, Low limit with standby alarm, High/Low limits with standby alarm, High/Low limits alarm individually, High/Low limit range alarm individually, High/Low limits with standby alarm individually or no operation. Refer to “15.5.3 Alarm Action (P.15-33, P.15-34)” for detail of alarm action.

Alarm settings are made using Alarm action and Alarm value.

If the operation is changed with Alarm 1 action to Alarm 4 action (0038H to 0047H), Alarm 1 value to Alarm 4 value (0058H to 0077H) will return to the factory default values.

Send the Alarm action and then the Alarm value.

This section describes the CH1 alarm 1 setting example and alarm operation.


[Setting example]

Setting item	Setting value
SV	23.000°C
Alarm 1 action	Hogh limit alarm
Alarm 1 value	5.000°C
Alarm 1 hysteresis	1.000°C

[Alarm action]

When PV will be more than 28.000°C, Alarm 1 output turns ON.

When PV will be less than 27.000°C, Alarm 1 output turns OFF.

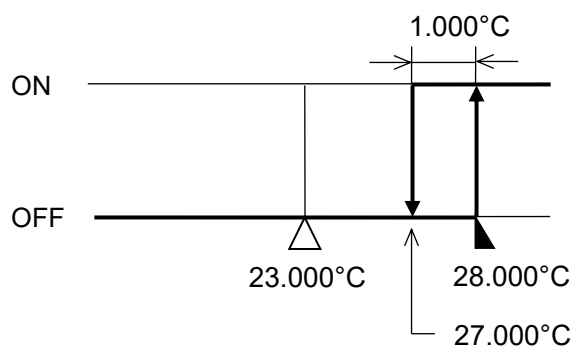

(Fig. 12.3-1)

High limit alarm [Slave address 1, Alarm 1 action of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0038H)	Data (0001H)	Error check CRC-16 (C9C7H)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0038H)	Data (0001H)	Error check CRC-16 (C9C7H)	Idle 3.5 characters
	1	1	2	2	2	

5.000°C (1388H) [Slave address 1, Alarm 1 value of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0058H)	Data (1388H)	Error check CRC-16 (054FH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0058H)	Data (1388H)	Error check CRC-16 (054FH)	Idle 3.5 characters
	1	1	2	2	2	

12.4 Correct Process Variable

When a sensor cannot be set at the exact location where control is desired, the sensor-measured temperature may deviate from the temperature in the controlled location. When using multiple indicating controllers, sometimes the measured temperatures do not concur due to differences in sensor accuracy or dispersion of load capacities. In such a case, the control can be set at the desired temperature by adjusting the input value of sensors. However, it is effective within the input rated range regardless of the sensor correction value.

The input value is corrected by the sensor correction factor and the sensor correction.


The sensor correction factor sets the slope, and the sensor correction sets the difference between before and after correction.

PV after input correction is expressed by the following formula.

PV after input correction =

$$\text{Current PV} \times \text{Sensor correction factor setting value} + (\text{Sensor correction setting value})$$

An example of input value correction using a combination of Sensor correction factor and Sensor correction is shown below.

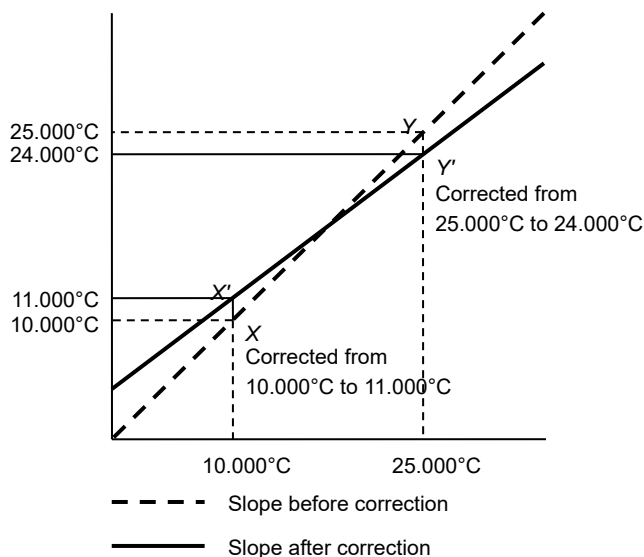

(Fig. 12.4-1)

- (1) Extract two points to be corrected and determine the PV after correction.
Before correction: 10.000°C → After correction: 11.000°C
Before correction: 25.000°C → After correction: 24.000°C
- (2) Find the sensor correction factor setting value from (1).
 $(Y' - X') / (Y - X) = (24.000 - 11.000) / (25.000 - 10.000) = 0.750$
- (3) It is input so that PV will be 300°C using a mV generator and dial resistor.
- (4) Set the value of (2) to the sensor correction factor.
- (5) Read PV.
It is displayed as 7.500°C.
- (6) Find the sensor correction setting value.
Find the difference between the PV after input correction and the PV read in (5).
 $10.000^\circ\text{C} - 7.500^\circ\text{C} = 2.500^\circ\text{C}$
- (7) Set the value of (6) to the sensor correction.
- (8) Input an electromotive force or resistance value equivalent to 25.000°C using a mV generator or dial resistor.
- (9) Read PV and check that the display is 24.000°C.

[Setting Example] When set Sensor correction factor: 0.750, Sensor correction: 2.500°C

0.750(02EEH) [Slave address 1, Sensor correction factor of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0084H)	Data (02EEH)	Error check CRC-16 (48CFH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0084H)	Data (02EEH)	Error check CRC-16 (48CFH)	Idle 3.5 characters
	1	1	2	2	2	

2.500°C (09C4H) [Slave address 1, Sensor correction of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0088H)	Data (09C4H)	Error check CRC-16 (0E23H)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0084H)	Data (09C4H)	Error check CRC-16 (0E23H)	Idle 3.5 characters
	1	1	2	2	2	

12.5 Auto/Manual Control Switch

Switching between Automatic control and Manual control is done by Auto/Manual control.

If control action is switched from automatic to manual and vice versa, balanceless-bumpless function works to prevent a sudden change in MV.

With Manual control, MV can be set arbitrarily. (*)

Set MV with Manual MV.

Manual control MV setting range: -5.0 to 105.0 %.

When the instrument power supply is turned ON from OFF, it is restored with the control action selected by the power-on restoration action selection.

(*): If the sensor fails in manual control, the MV will be 0%.

[Setting Example] When set Auto/Manual control: Manual control, Manual MV: 20.0%

Manual control [Slave address 1, Auto/Manual control of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0010H)	Data (0001H)	Error check CRC-16 (49CFH)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0010H)	Data (0001H)	Error check CRC-16 (49CFH)	Idle 3.5 characters
	1	1	2	2	2	

20.0% (00C8H) [Slave address 1, Manual MV of CH1]

- A request message from the master

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0014H)	Data (00C8H)	Error check CRC-16 (C858H)	Idle 3.5 characters
	1	1	2	2	2	

- Response message from the slave in normal status

Idle 3.5 characters	Slave address (01H)	Function code (06H)	Data item (0014H)	Data (00C8H)	Error check CRC-16 (C858H)	Idle 3.5 characters
	1	1	2	2	2	

13 Communication with PLC Using SIF Function

The SIF function (Smart InterFace, programless communication function) is a function that serially connects the PLC Q series (manufactured by Mitsubishi Electric Corp.) and this instrument, and reads and writes various data to and from PLC registers using the communication protocol of the PLC.

The following communication protocols and commands are supported.

Communication protocol	Format 4
Communication command	A compatible 1C frame AnA/AnU common command (QR/QW)


Using the console software (SWC-QTC101M), select the PLC register start number, PLC register address, the monitoring items and setting items to be linked, and set the specifications.

The control module QTC1-RP (with power supply / communication option) becomes the master, and the selected monitor item is periodically written to the PLC register by using the QW command, and the value of the PLC register is constantly updated.

In addition, the selected setting items are read from the PLC register in response to a setting request using the QR command.

When the read data is changed, the set value of control module QTC1-RP (with power supply / communication option), control module QTC1-R0 (no power supply / communication option) is updated.


Configuration example of PLC and QTC1-RP, QTC1-R0

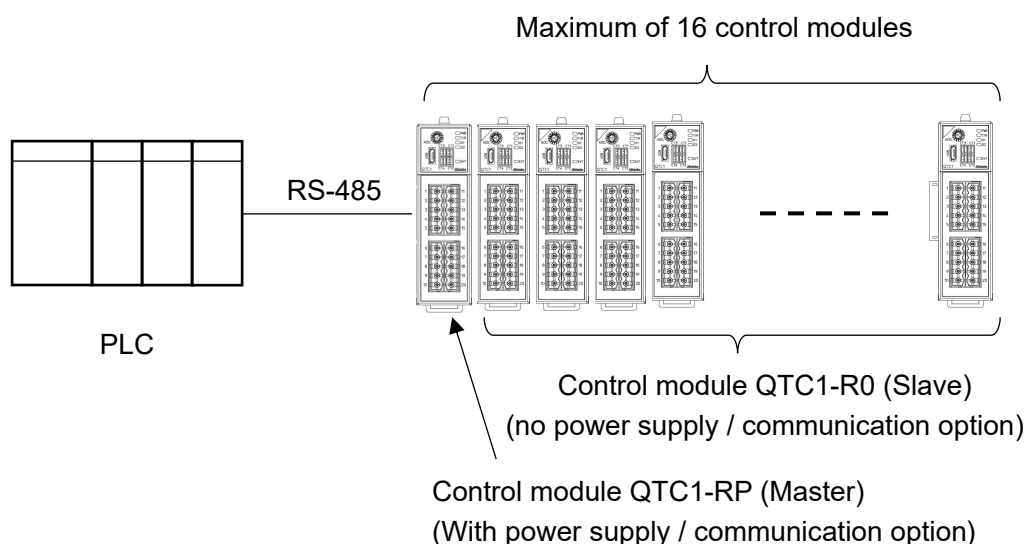

(Fig. 13-1)

13.1 Flow of Before Operation

The flow of operation when the QTC1-RP or QTC1-R0 is connected to the PLC is shown below.

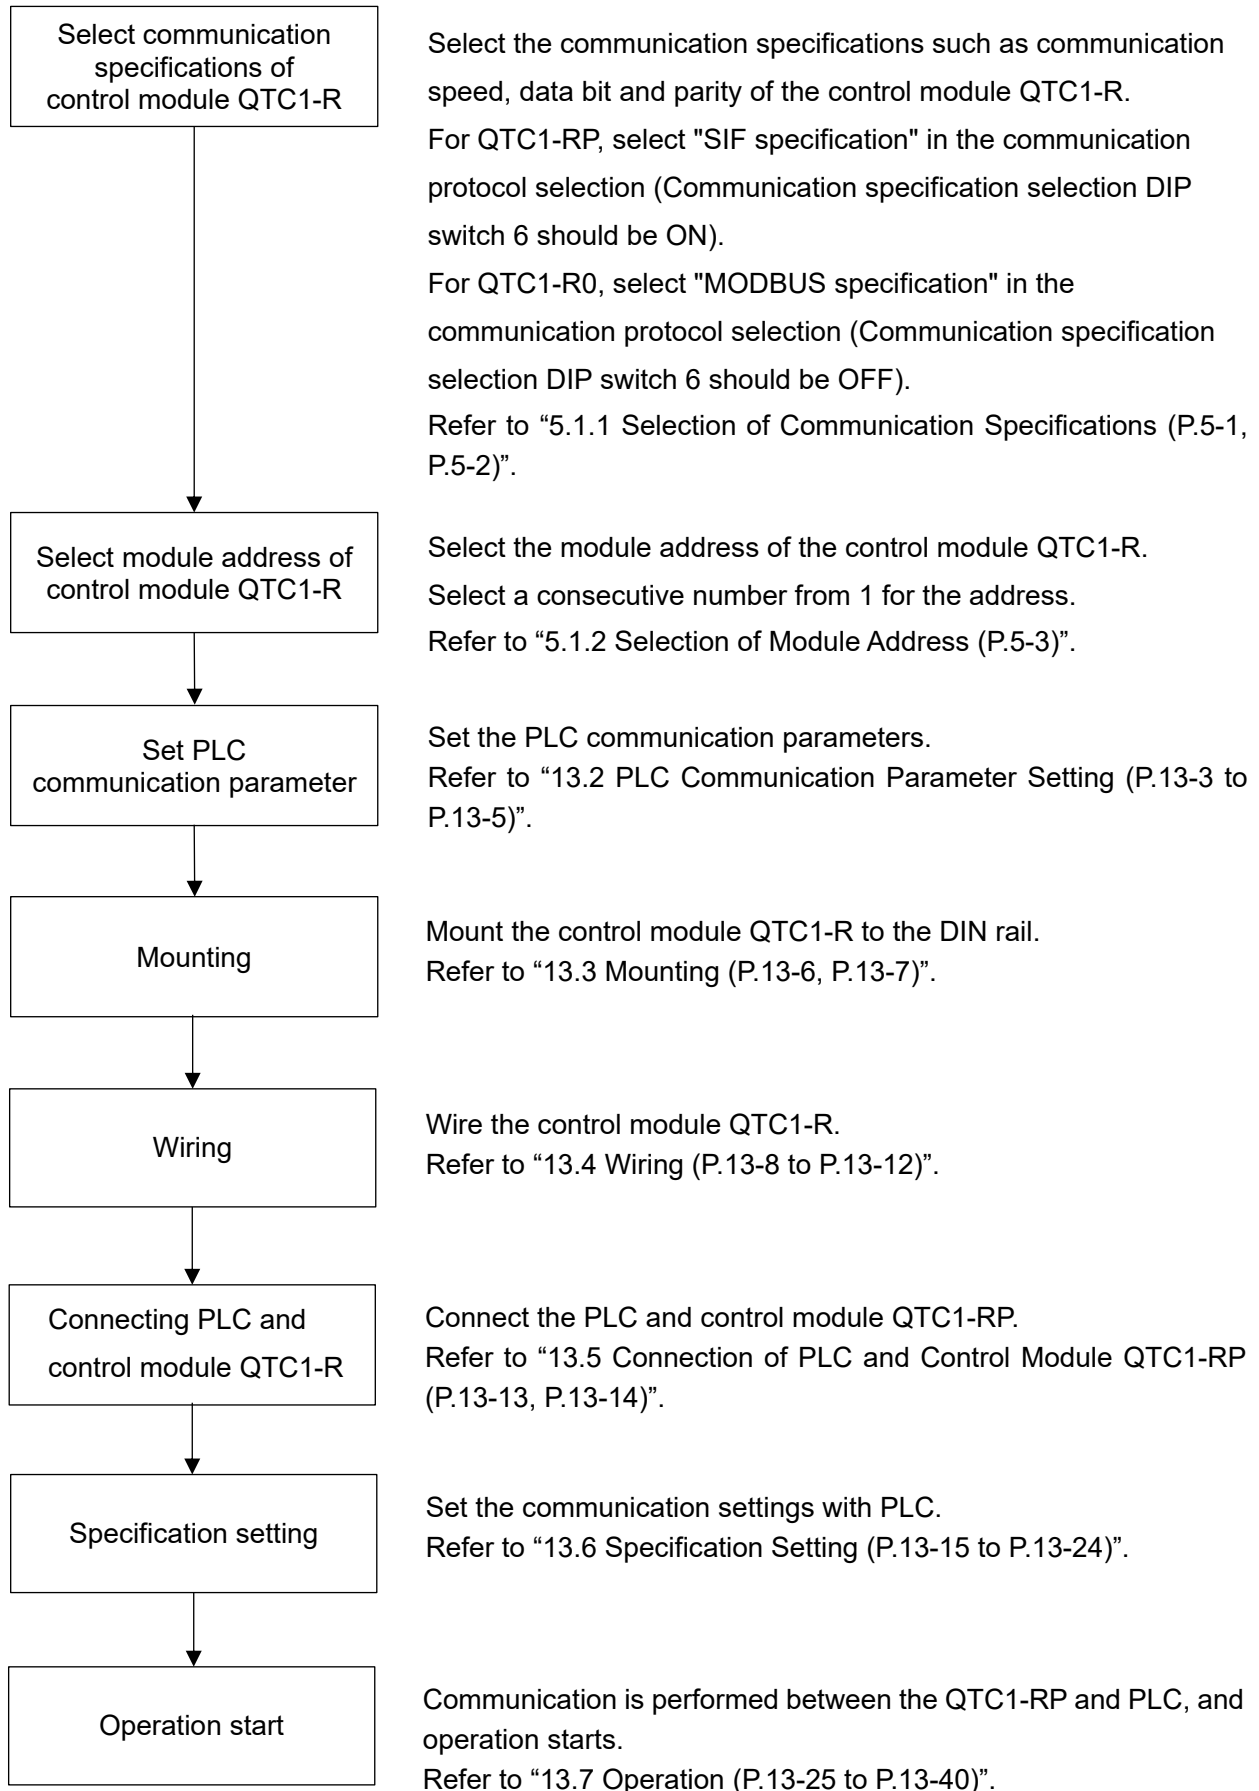

(Fig. 13.1-1)

13.2 PLC Communication Parameter Setting

Set the PLC communication parameters.

The setting method using GX Works3 is explained.

Connect the GX Works3 installed PC, set the communication speed, transmission specifications, communication protocol, etc., and then set the communication parameters using the PC write function. Refer to “Serial Communication Module User's Manual (Basic)” for detail.

(1) I/O assignment setting

Double-click [PLC parameter] on Project data list -> Parameter.

Display the parameter setting screen.

Click “I/O assignment setting” tab, and set “Type”, “Model Name” and “Point”.

Q Parameter Setting

PLC Name | PLC System | PLC File | PLC RAS | Program | SFC | Device | **I/O Assignment** | Multiple CPU Setting | Serial Communication

I/O Assignment(*1)

No.	Slot	Type	Model Name	Points	Start XY
0	PLC	PLC			
1	0(0-0)	Intelligent	QJ71C24N	32Points	
2	1(0-1)				
3	2(0-2)				
4	3(0-3)				
5	4(0-4)				
6	5(0-5)				
7	6(0-6)				

Assigning the I/O address is not necessary as the CPU does it automatically.
Leaving this setting blank will not cause an error to occur.

Base Setting(*1)

	Base Model Name	Power Model Name	Extension Cable	Slots
Main				8
Ext.Base1				
Ext.Base2				
Ext.Base3				
Ext.Base4				

Base Mode
☐ Auto
☒ Detail
 8 Slot Default
 12 Slot Default
 Select module name

Export to CSV File | Import Multiple CPU Parameter | Read PLC Data

(*1)Setting should be set as same when using multiple CPU.

Print Window... | Print Window Preview | Acknowledge XY Assignment | Default | Check | End | Cancel


(Fig. 13.2-1)

[Setting Example]

Setting item	Setting contents
Type	Intelligent
Model Name	Model name of mounted unit (Example: QJ71C24N)
Point	32 points

(2) Switch setting

Click [Switch setting] button to the right of the I/O assignment setting.

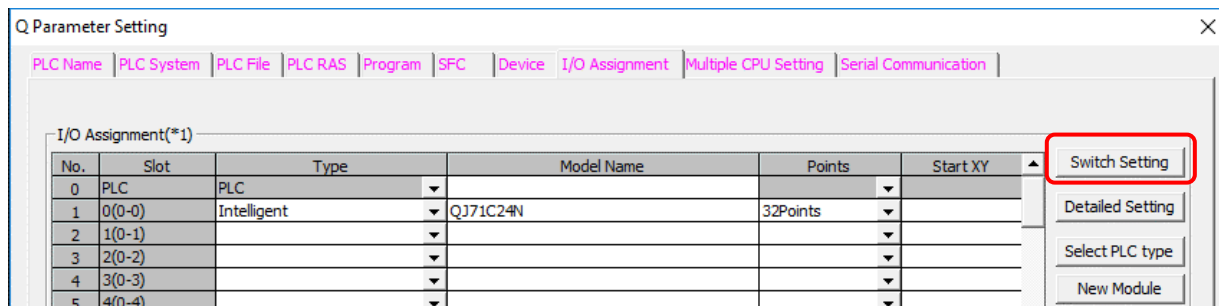


(Fig. 13.2-2)

Displays the Switch setting for I/O and intelligent function module screen.

Set the data bit, parity bit, stop bit, communication speed and communication protocol settings.

After setting, click [Finish] button.

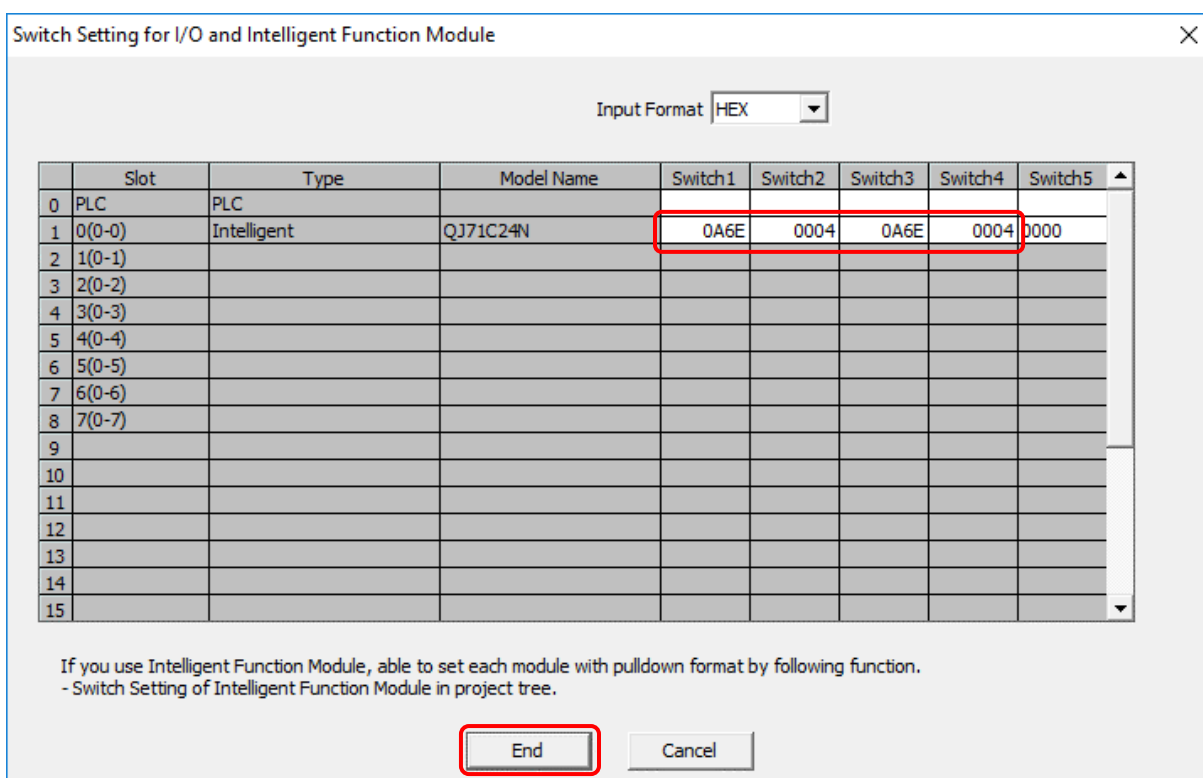

(Fig. 13.2-3)


[Setting Example]

Setting item	Setting contents
Action setting	Independent
Data bit	8 bits
Parity bit	Even
Stop bit	1 bit
Sum check code	Yes
Write during RUN	Enable
Setting change	Disable
Communication speed setting	Set the same communication speed as the control module QTC1-R (Setting example: 57600 bps)
Communication protocol setting	Format 4

(3) PC writing


Click [Write to PC (W)] on Menu bar -> Online.

Display the PC writing screen.

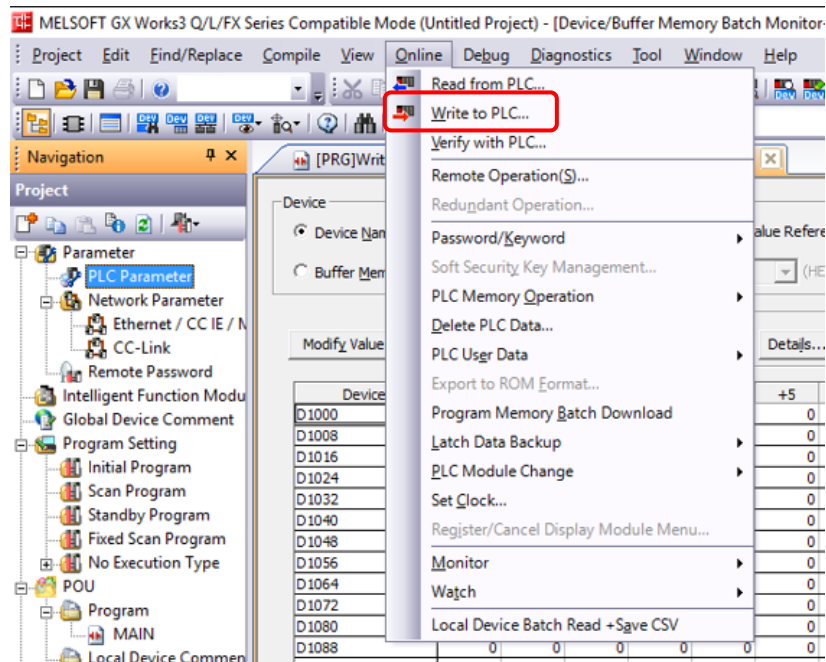

(Fig. 13.2-4)

Click [Select all] button -> [Execute] button.

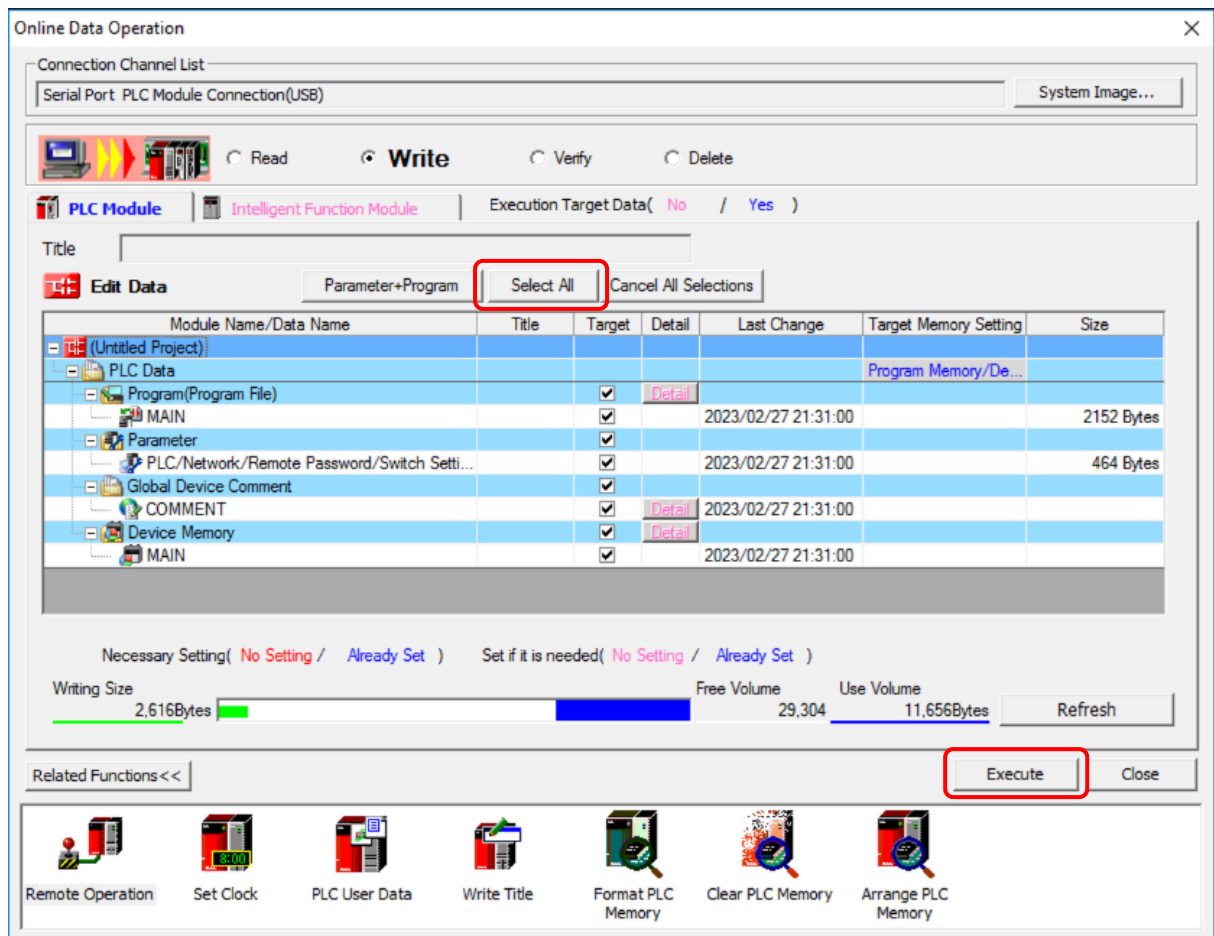


(Fig. 13.2-5)

This completes the PLC communication parameter settings.


13.3 Mounting

Mounting to the DIN rail

- ① Lower the lock lever of this instrument. (The lock lever of this instrument has a spring structure, but if lower it in the direction of the arrow until it stops, it will be locked in that position.)
- ② Hook the part ② of this instrument onto the top of the DIN rail.
- ③ Insert the lower part of this instrument with the part ② as a fulcrum.
- ④ Raise the lock lever of this instrument.
Make sure it is fixed to the DIN rail.

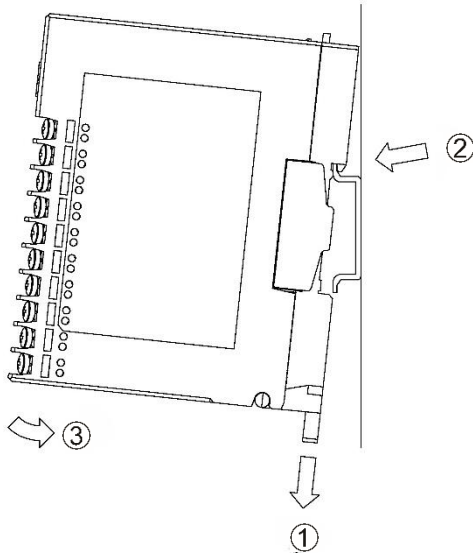


(Fig. 13.3-1)

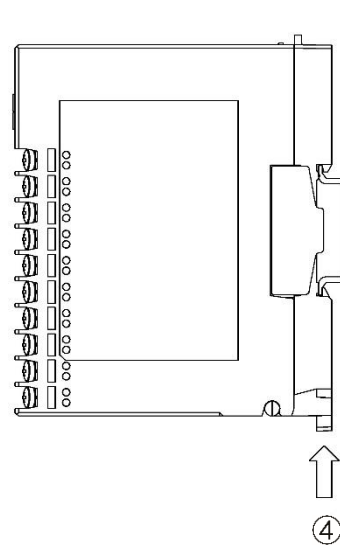

(Fig. 13.3-2)

Removal from the DIN rail

- ① Insert a flat blade screwdriver into the lock lever of this instrument and lower the lock lever until it stops.
- ② Remove this instrument from the DIN rail by lifting it from below.

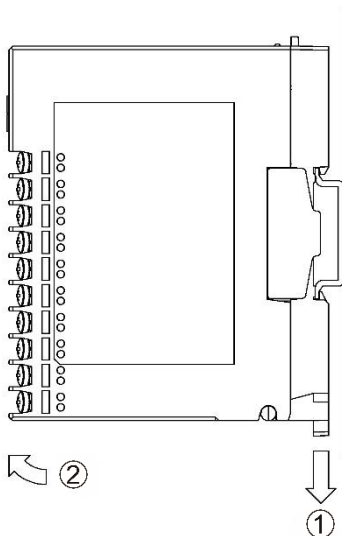

(Fig. 13.3-3)


Mounting multiple modules to the DIN rail

This section describes an example of mounting multiple control modules QTC-R on the DIN rail.


- ① Remove the protective sticker on the right side of the QTC1-RP
- ② Lower the lock lever of the QTC1-R0, and mounting the QTC1-R0 to the DIN rail.
- ③ Slide the QTC1-R0 to the left and connect the connectors to each other.
- ④ Raise the lock lever of this instrument.

Make sure it is fixed to the DIN rail.

QTC1-RP

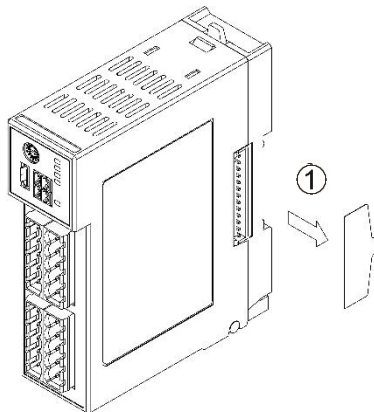

(Fig. 13.3-4)

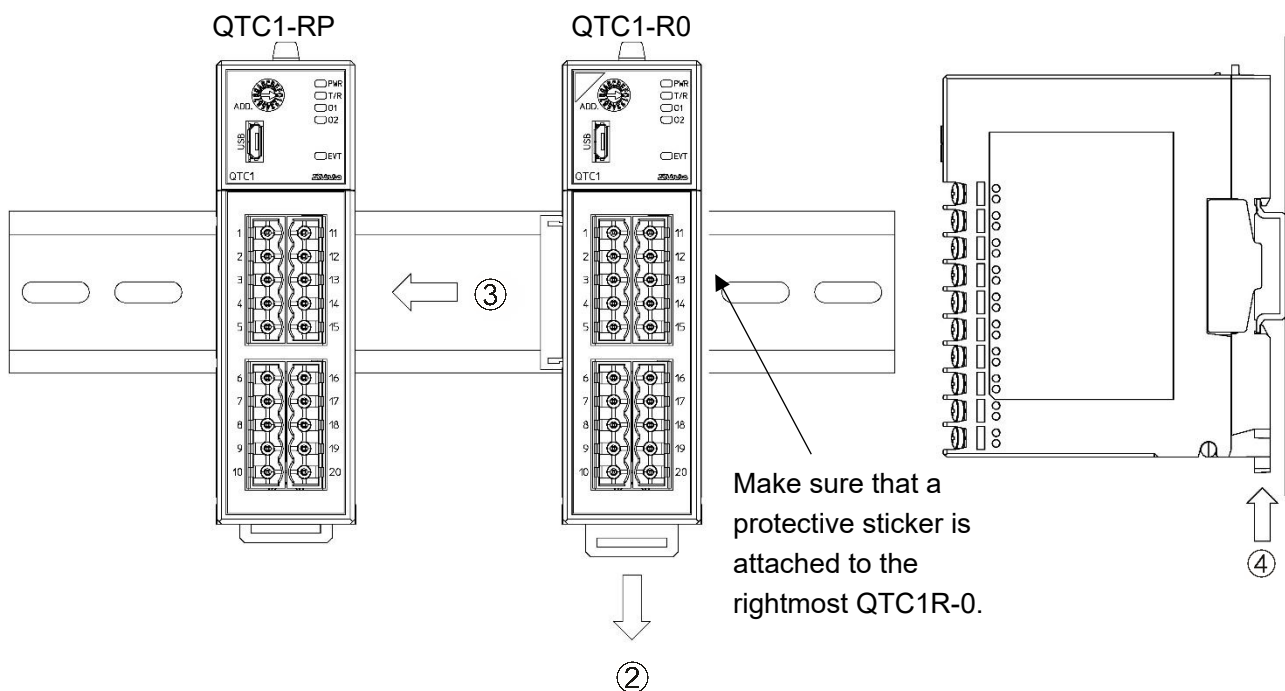

(Fig. 13.3-5)

(Fig. 13.3-6)

13.4 Wiring


13.4.1 Wiring for Power Supply and Serial Communication

The terminal block for power supply and serial communication is located on the base of control module QTC1-RP.

Wiring by the following procedure.


(1) Case removal

- ① Push the release lever on the top of QTC1-RP to unlock it.
- ② Remove the case.

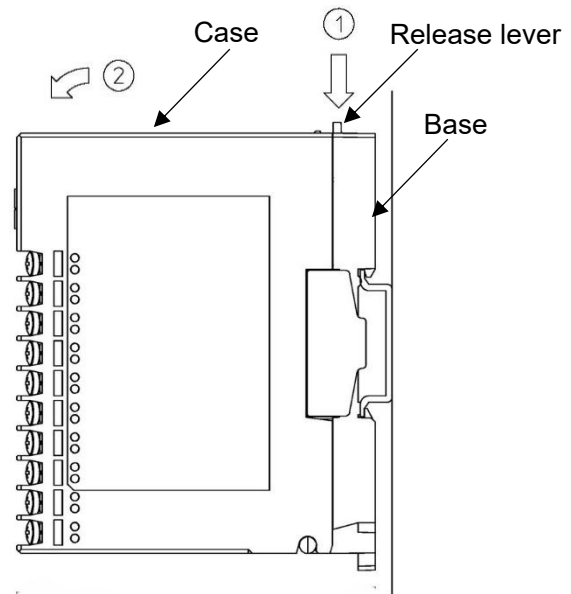

(Fig. 13.4.1-1)


(2) Wiring

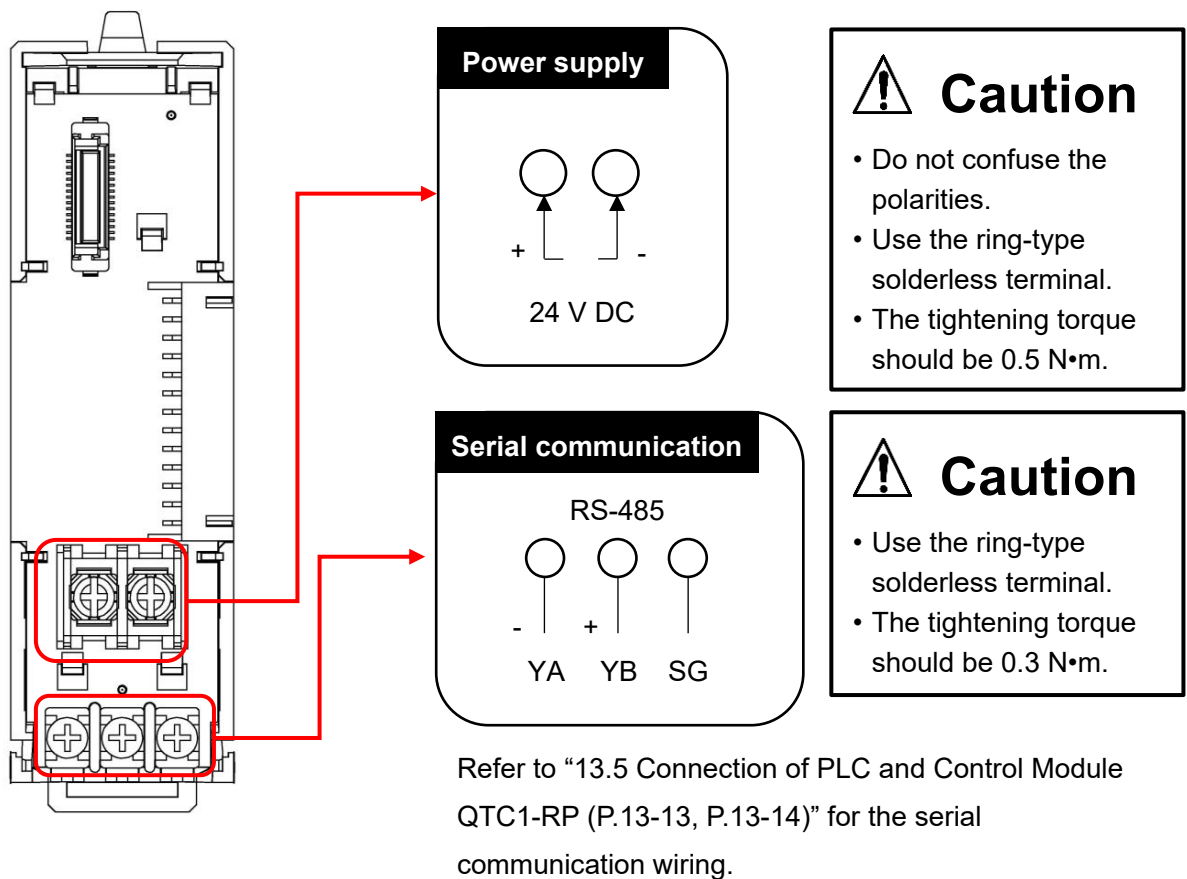

(Fig. 13.4.1-2)


(3) Case mounting

- ① Hook the case on the lower part ① of this instrument.
- ② Mount the case so that the lower part ① of this instrument is the fulcrum and covers the release lever. There is a clicking sound.

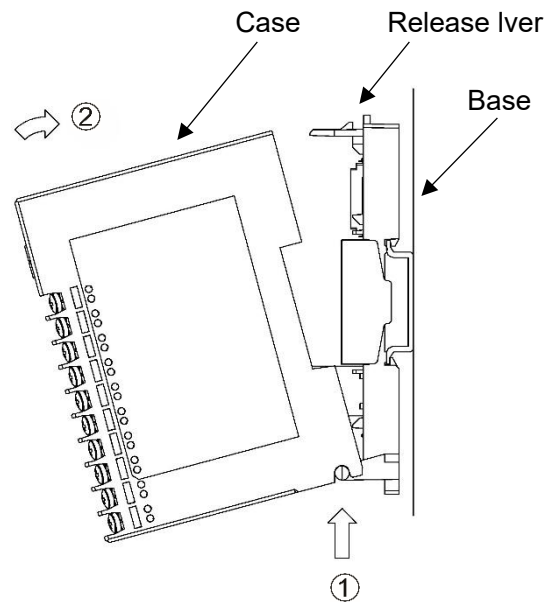

(Fig. 13.4.1-3)


13.4.2 Wiring for Input and Output

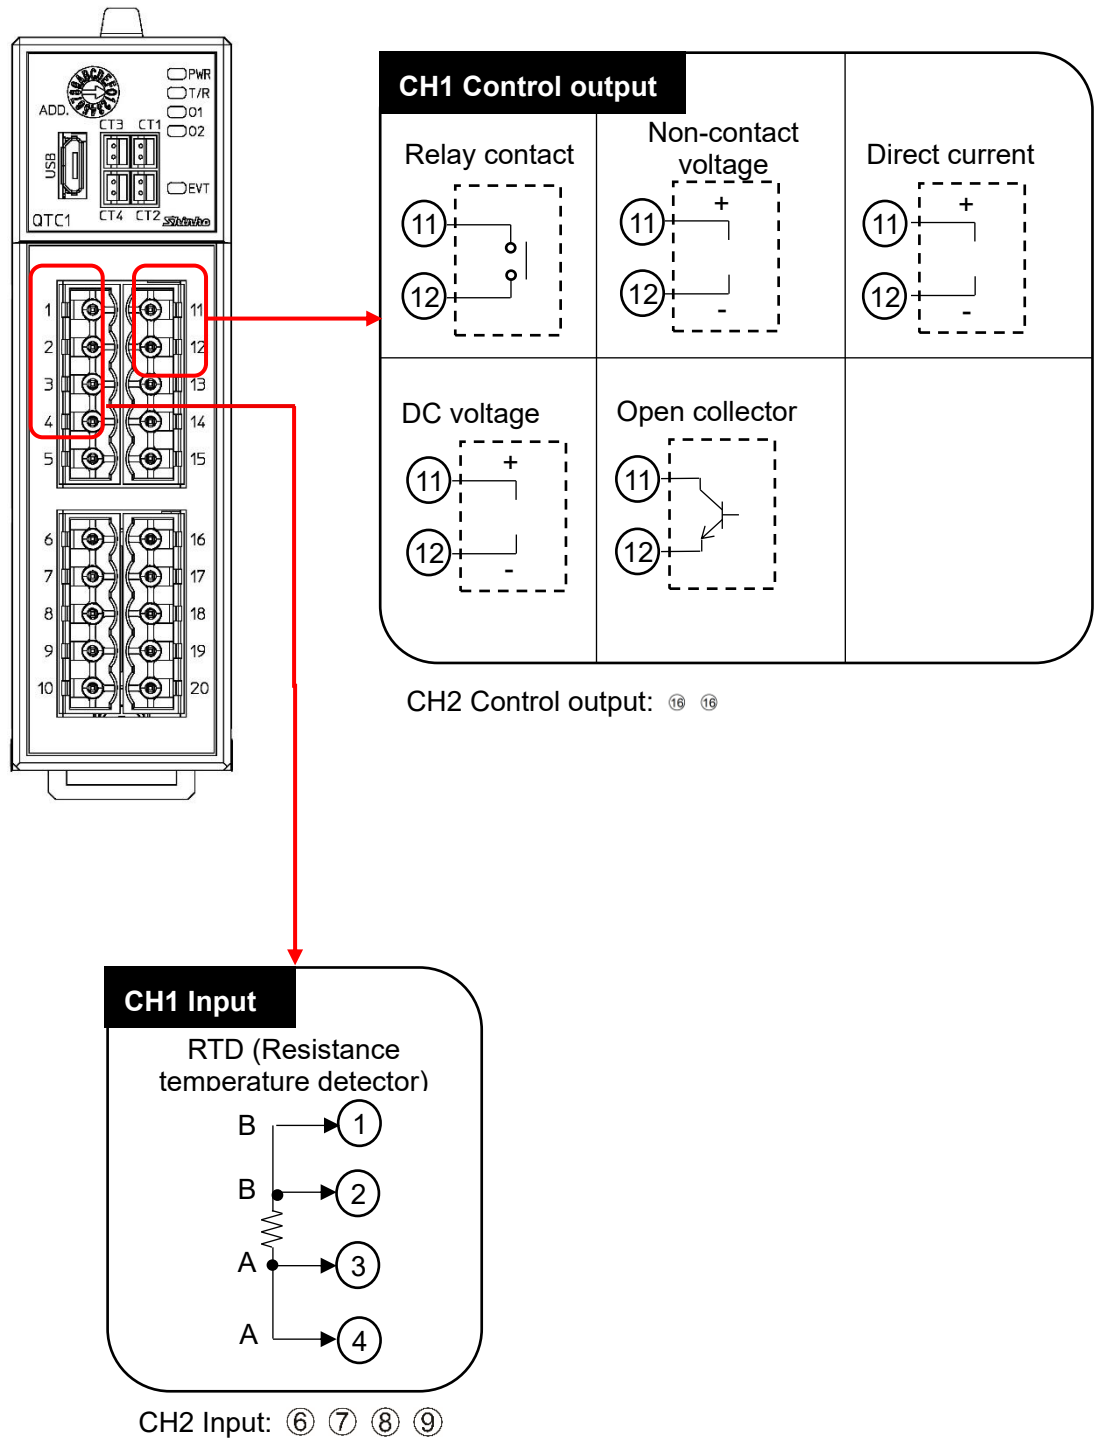

(Fig. 13.4.2-1)


13.4.3 Wiring for CT

For single-phase

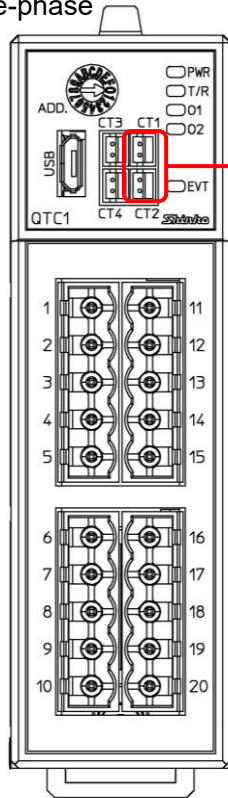


CT Input (Single-phase)

CH1 heater burnout alarm CT1 input: CT1 or CT3

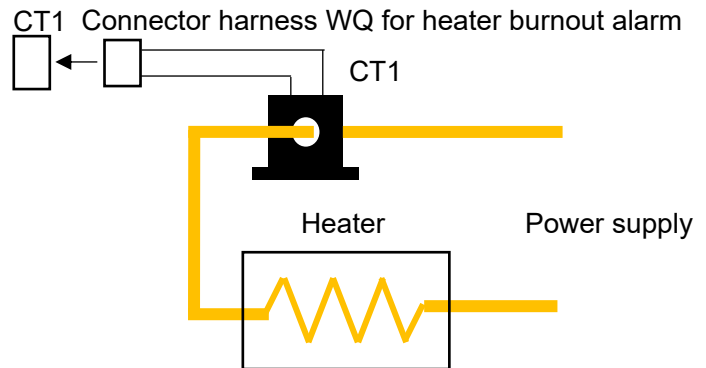


CH2 heater burnout alarm CT1 input: CT2 or CT4

For 3-phase

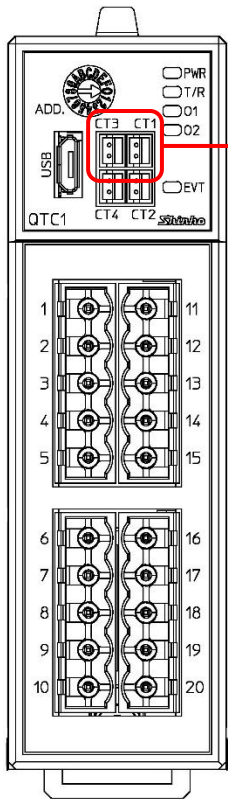

CT Input (3-phase)

CH1 heater burnout alarm CT1 input: CT1, CT2 input: CT3

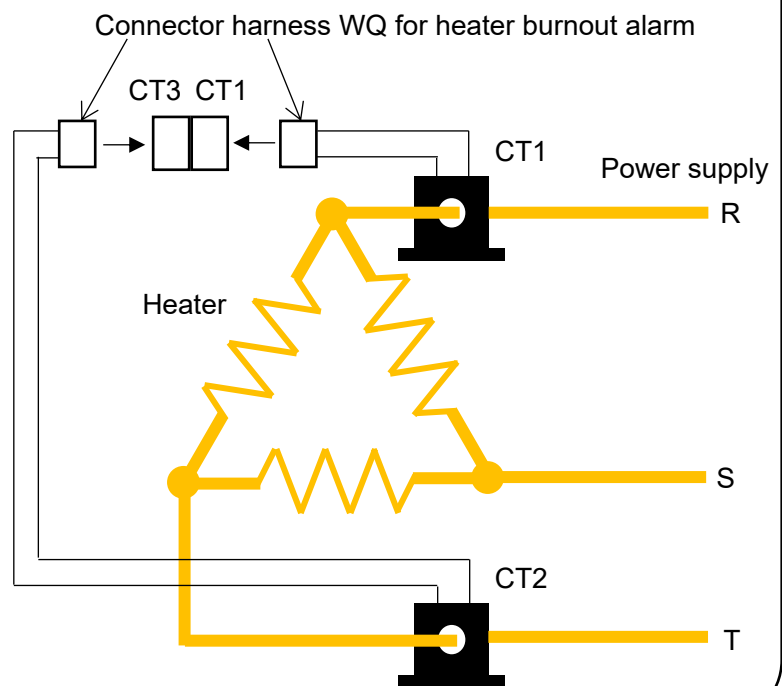


CH2 heater burnout alarm CT1 input: CT2, CT2 input: CT4

(Fig. 13.4.3-1)

13.4.4 Wiring for Event Input and Event Output

Using the connector harness EVQ for event input/output.

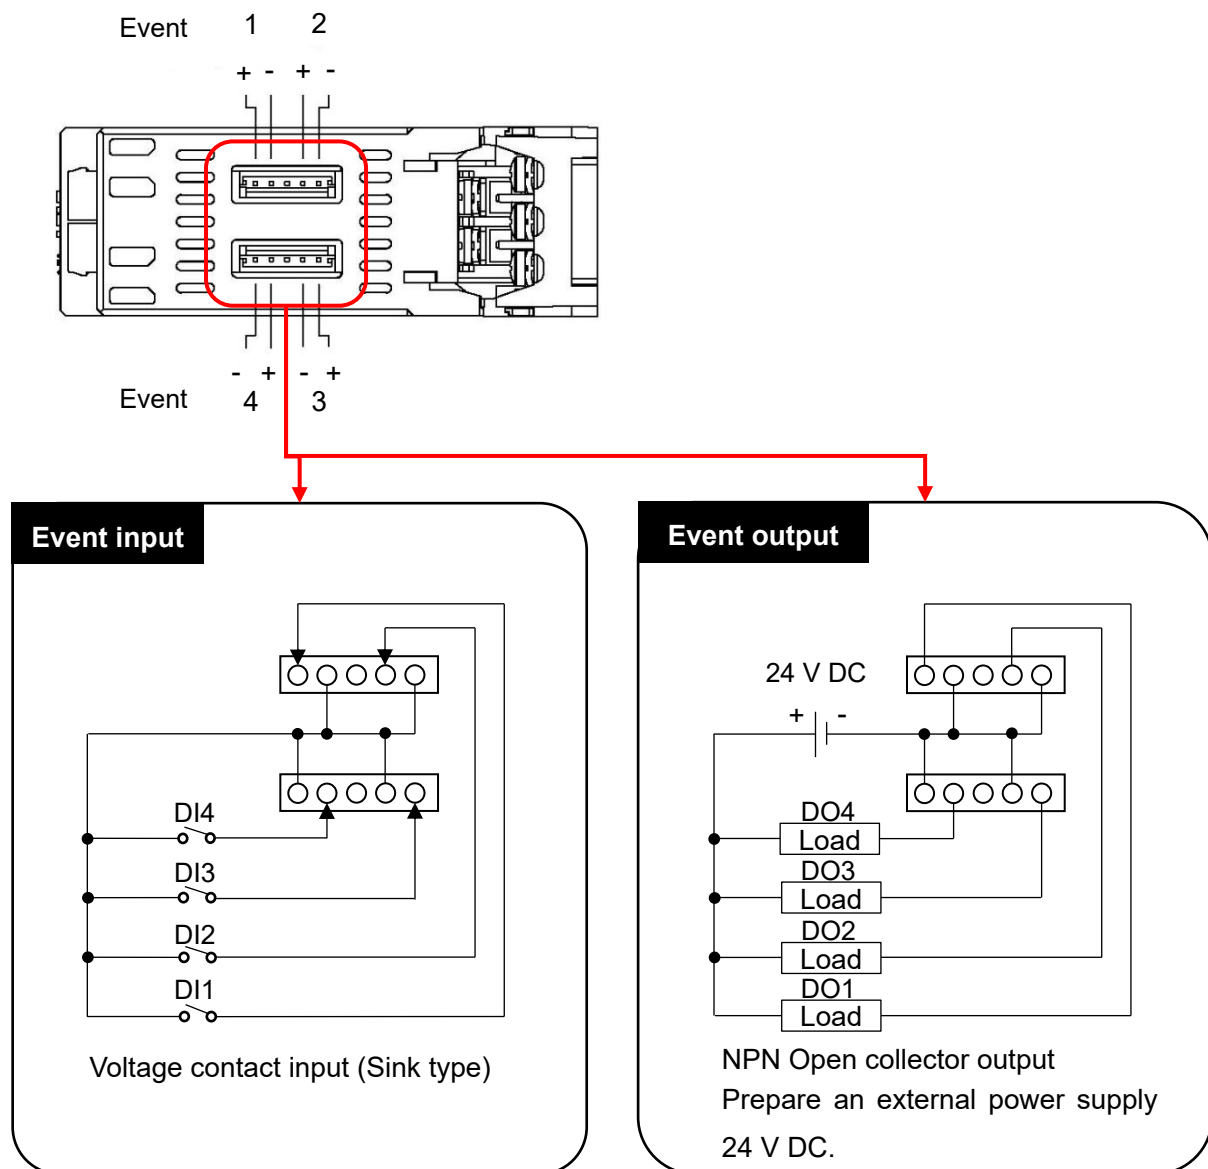

(Fig. 13.4.4-1)


13.5 Connection of PLC and Control Module QTC1-RP



Warning

Turn off the power supply to this instrument before wiring.


If you work while the power is supplied, you may get an electric shock, which could result in an accident resulting in death or serious injury.

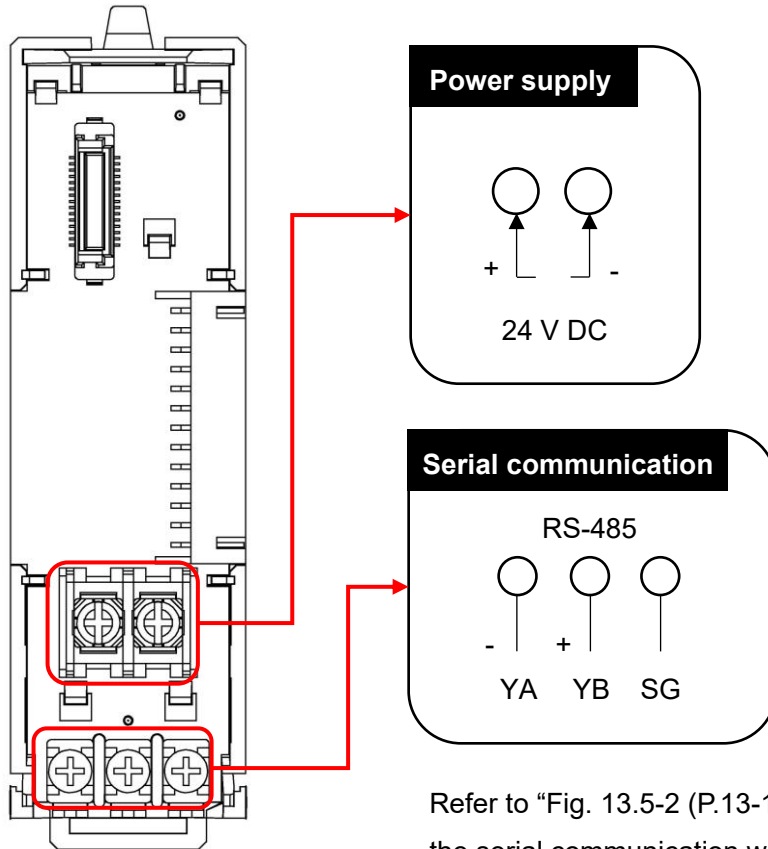

Refer to “Fig. 13.5-2 (P.13-14)” for the serial communication wiring.

(Fig. 13.5-1)

Example of connection between PLC and QTC1-RP, QTC1-R0

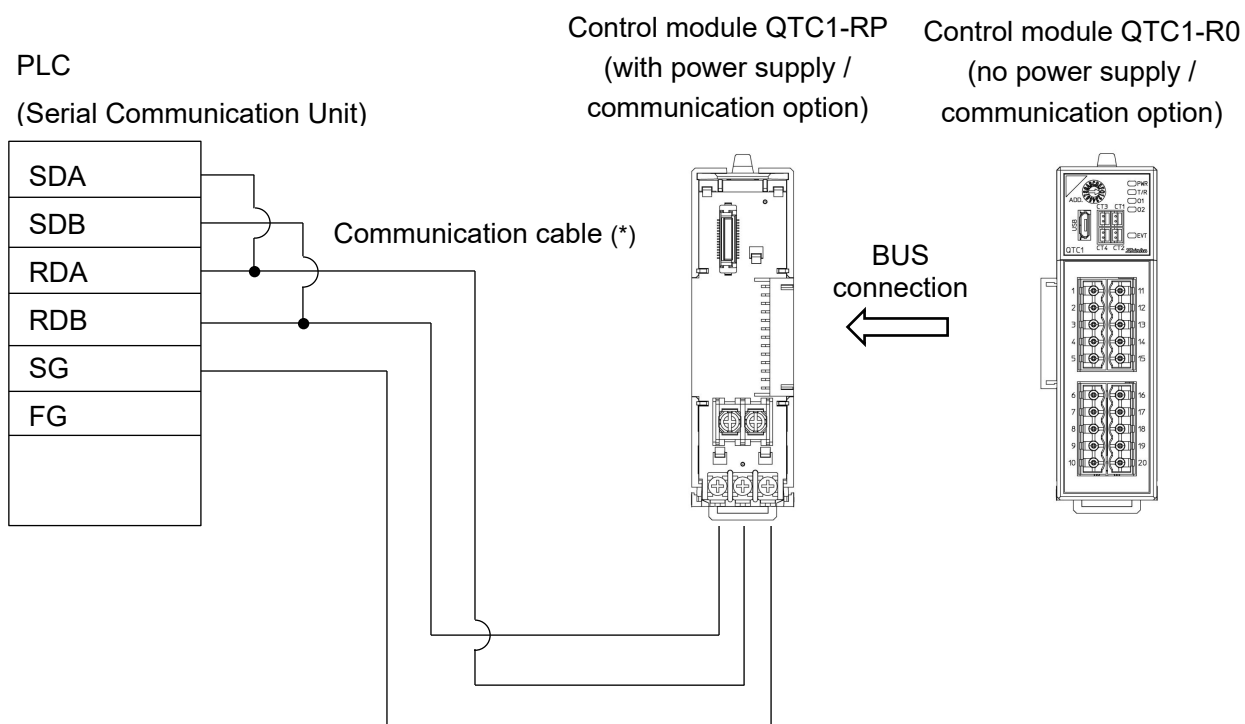

(*): For communication cables, please contact the store where you purchased the product or our sales office.

(Fig. 13.5-2)

13.6 Specification Setting

Set the specifications of the control module to communicate with the PLC.

This section describes how to set specifications using console software (SWC-QTC101M).

13.6.1 Preparation of USB Communication Cable and Console Software

Please prepare the USB communication cable and the console software.

- USB communication cable
USB-micro USB Type-B (commercial item)
- Console software (SWC-QTC101M)
Please download from our website and install.

Click <https://shinko-technos.co.jp/e/> → Support/Download → Software

13.6.2 Connecting to Host Computer




Caution

Do not use the logging function of the console software when communicating by connecting the USB communication cable.

- (1) Connect the micro USB Type-B side of the USB communication cable to the console communication connector of this instrument.
- (2) Connect the USB plug of the USB communication cable to the USB port of the host computer.

Example of connection between host computer and QTC1-2P, QTC1-20

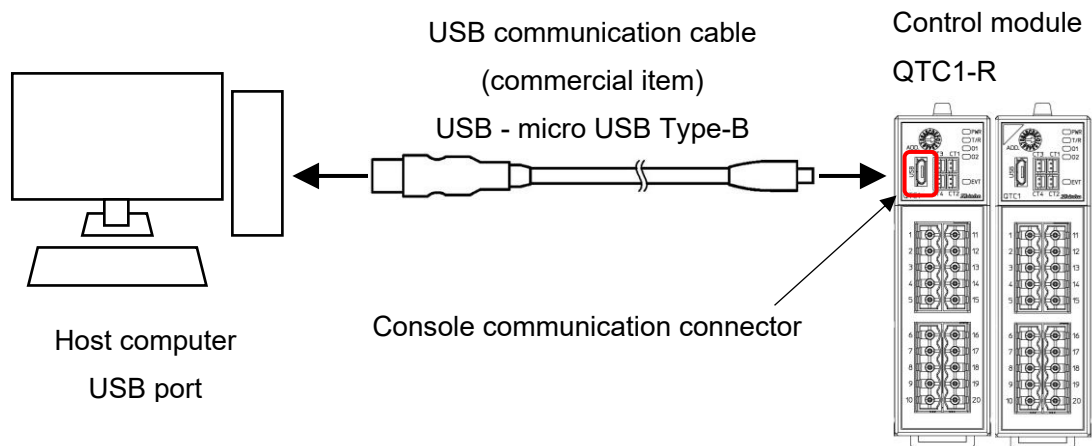

(Fig. 13.6.2-1)


(3) Checking the COM port number

Follow the procedure below to check the COM port number.


- ① Right-click "Start" → Click "Device manager" from menu.
- ② When "USB Serial Port (COM3)" is displayed in "Port (COM and LPT)", the COM port is assigned to No. 3.
Check the COM port number, and then close "Device Manager".

(4) Starting the console software (SWC-QTC101M)

- ① Start the console software (SWC-QTC101M).
Select "QTC1-R" in the Device selection.

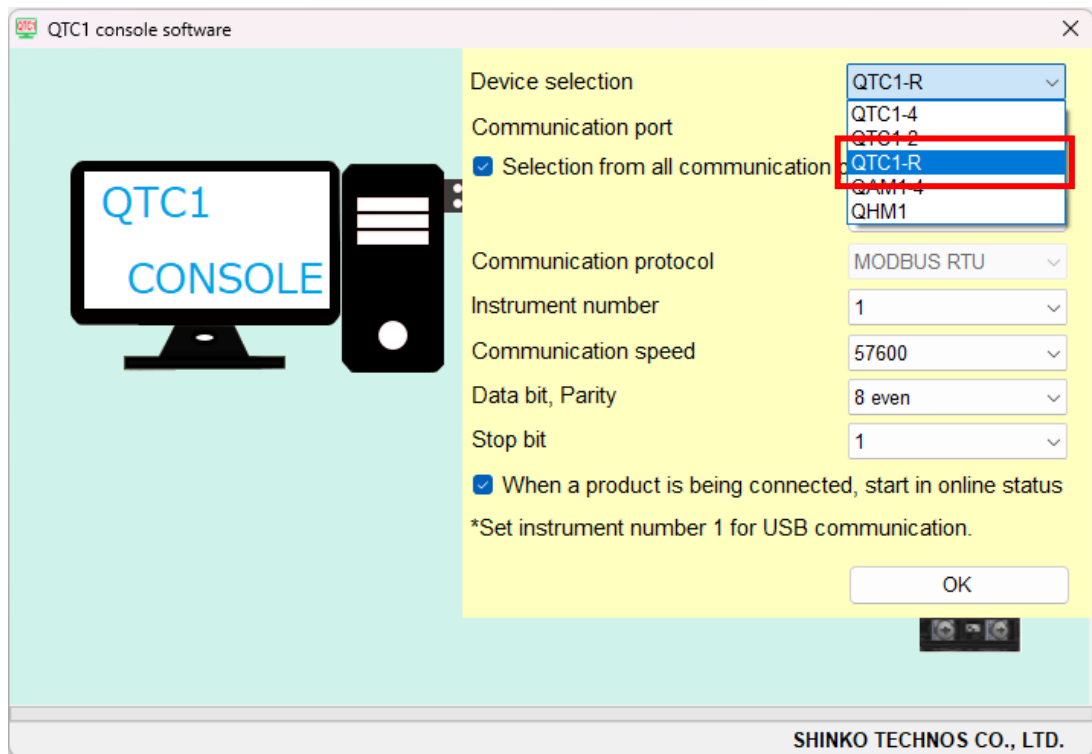


(Fig. 13.6.2-2)

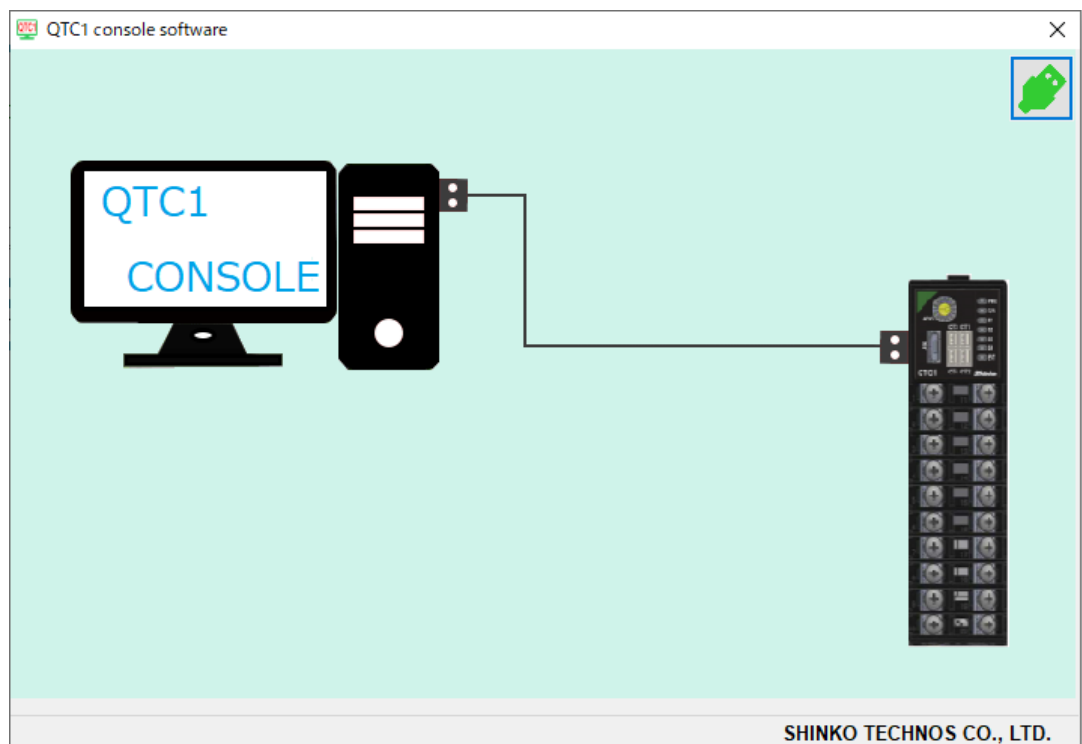


(Fig. 13.6.2-3)

- ② Click [User (U)] on the menu bar → [Communication condition (C)].
Display the communication condition setting screen.

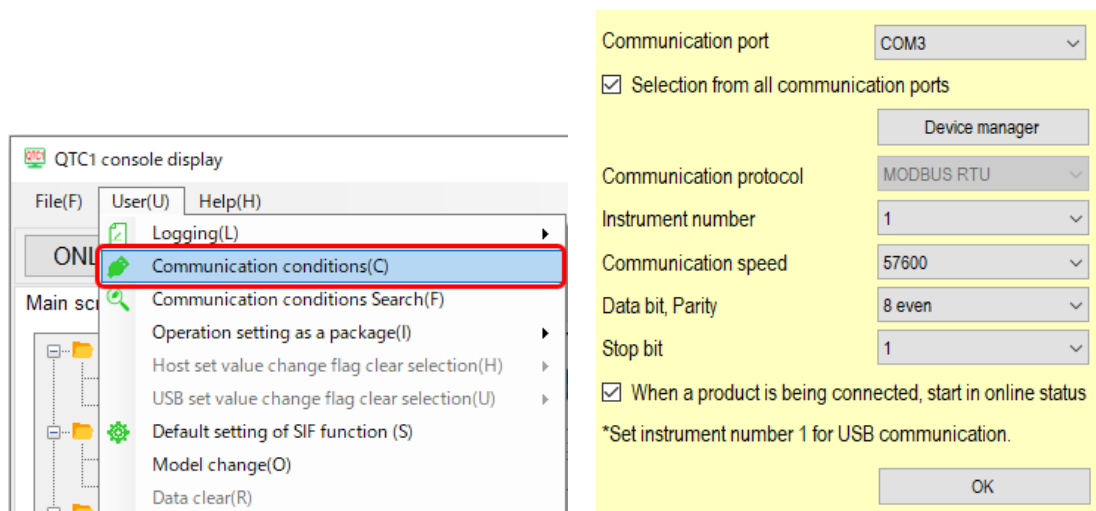

(Fig. 13.6.2-4)

*The model “QTC1-R” can also be selected from User (U) - Model change (o) in the menu bar.

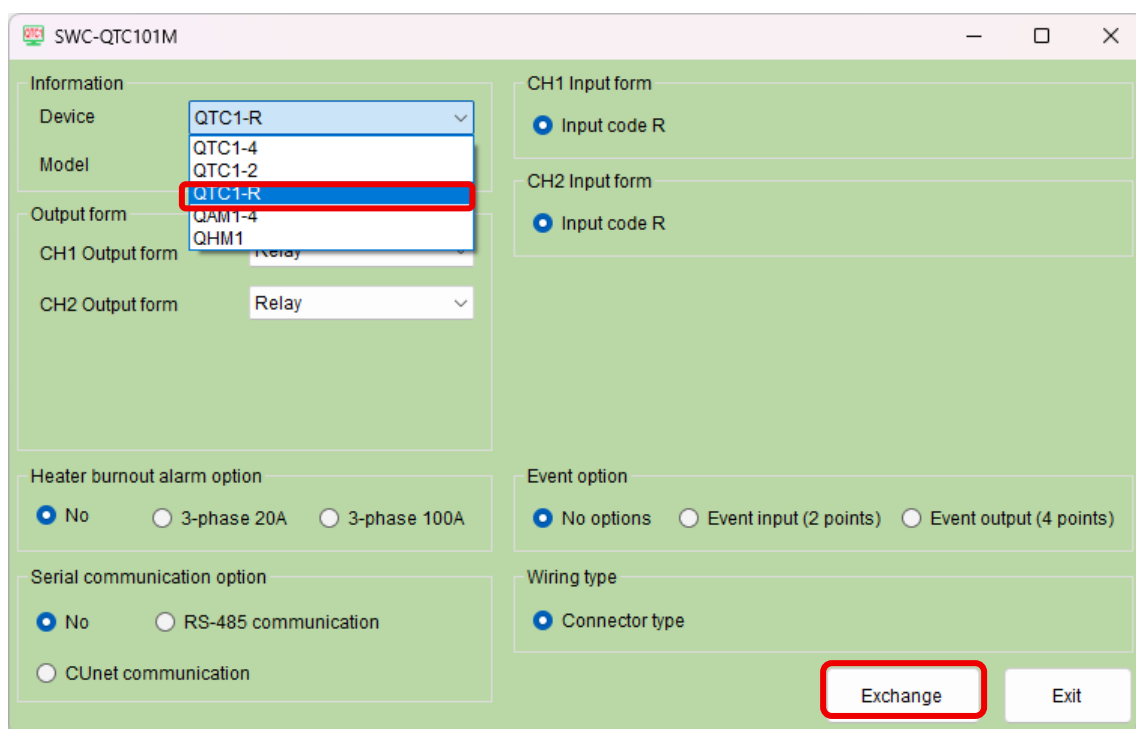


(Fig. 13.6.2-5)

- ③ Set the communication condition as shown below.

Setup Items	Setting Value
Communication port	Select the COM port number confirmed in ② of (3).
Communication protocol	MODBUS RTU


- ④ Click [OK]

- ⑤ Click “Default setting of SIF function(S)” from “User(U)” of menu ber.
Display “Default setting of SIF function” screen.

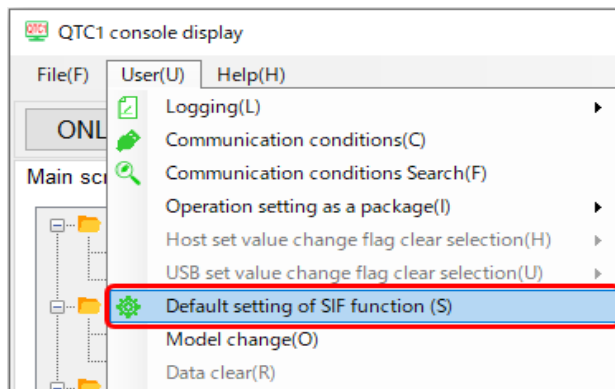

(Fig. 13.6.2-6)

- ⑥ Select “Module 1” and click “System” tab.

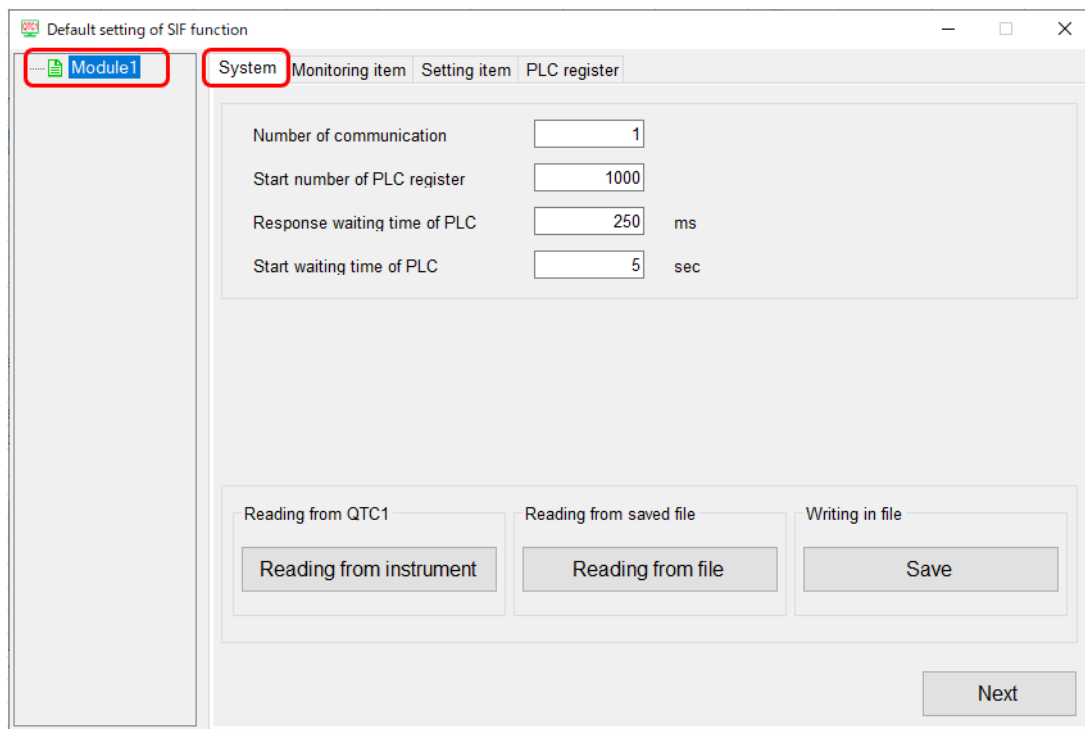

(Fig. 13.6.2-7)

The specifications are ready.

13.6.3 Specification Setting

SIF function initial setting screen

(Fig. 13.6.3-1)

Set the specifications referring to the SIF function initial setting items.

SIF function initial setting items

MODBUS address		Name	Settings • Selection range	Initial value	Remarks (*)
HEX	DEC				
020A	522	Communication management module number setting	1 to 16 modules	1	1
0384	900	PLC register start number	0 to 65535	1000	0
0385	901	PLC response wait time	100 to 3000 ms	250	1
0386	902	PLC communication start wait time	1 to 255 seconds	5	1
0387	903	Reservation (Not used)		0	0
0388	904	Reservation (Not used)		0	0
0389	905	Monitor item 1	Refer to Monitor item 1 (P.13-19)	31	0
038A	906	Monitor item 2	Refer to Monitor item 2 (P.13-20)	0	0
038B	907	Monitor item 3	Refer to Monitor item 3 (P.13-20)	0	0
038C	908	Reservation (Not used)		0	0
038D	909	Reservation (Not used)		0	0
038E	910	Setting item 1	Refer to Setting item 1 (P.13-21)	57827	0
038F	911	Setting item 2	Refer to Setting item 2 (P.13-21)	2721	0
0390	912	Setting item 3	Refer to Setting item 3 (P.13-22)	0	0
0391	913	Setting item 4	Refer to Setting item 4 (P.13-22)	0	0
0392	914	Setting item 5	Refer to Setting item 5 (P.13-23)	0	0
0393	915	Setting item 6	Refer to Setting item 6 (P.13-23)	0	0
0394	916	Setting item 7	Refer to Setting item 7 (P.13-24)	0	0

(*) 0: The value set in each control module QTC1-R is a valid item.

1: The value set in the control module QTC1-RP is a valid item.

- (1) Communication management module number setting
Set the number of modules managed by the master module.
Set the number of modules including the master module.
- (2) PLC register start number
Set the start number of the register used in PLC communication. It is fixed to the D register.
Please set in the range of 0 to 65535.
For A compatible 1C frame AnA/AnU, set within the range of 0 to 8191.
A maximum of 170 registers are used per control module. [System area: 10 registers, Monitor item: 80 registers (20 × 4ch), Setting item: 80 registers (20 × 4ch)]
When using multiple control modules, be careful not to duplicate them.
- (3) PLC response wait time
Set the retransmission interval time when there is no response from the PLC.
Please set in the range of 100 to 3000 ms.
- (4) PLC communication start wait time
Set the time from when the control module QTC1-RP power is turned on until communication is started to the PLC.
Please set in the range of 1 to 255 seconds.
- (5) Monitor item 1 to 3
Click [Monitor item] tab or [Next] button.
Displays the Monitor item screen.
Select any of Monitor item 1 to 3. The maximum number of valid item selections is 20.
The excess is invalid for all channels in the control module.

Monitor item 1 (Initial value: 31)

Bit	No.	Selection	Description
0	01	1	PV reading (including difference)
1	02	1	MV reading
2	03	1	SV reading
3	04	1	Status flag 1
4	05	1	Status flag 2
5	06	0	Heater current value reading
6	07	0	Event input
7	08	0	Event output
8	09	0	PV reading (true value)
9	10	0	Not used
10	11	0	Not used
11	12	0	Not used
12	13	0	Not used
13	14	0	Not used
14	15	0	Not used
15	16	0	Not used

Monitor item 2 (Initial value: 0)

Bit	No.	Selection	Description
0	17	0	Alarm history 1 Error No.
1	18	0	Alarm history 2 Error No.
2	19	0	Alarm history 3 Error No.
3	20	0	Alarm history 4 Error No.
4	21	0	Alarm history 5 Error No.
5	22	0	Alarm history 6 Error No.
6	23	0	Alarm history 7 Error No.
7	24	0	Alarm history 8 Error No.
8	25	0	Alarm history 9 Error No.
9	26	0	Alarm history 10 Error No.
10	27	0	Alarm history 1 Total energizing time
11	28	0	Alarm history 2 Total energizing time
12	29	0	Alarm history 3 Total energizing time
13	30	0	Alarm history 4 Total energizing time
14	31	0	Alarm history 5 Total energizing time
15	32	0	Alarm history 6 Total energizing time

Monitor item 3 (Initial value: 0)

Bit	No.	Selection	Description
0	33	0	Alarm history 7 Total energizing time
1	34	0	Alarm history 8 Total energizing time
2	35	0	Alarm history 9 Total energizing time
3	36	0	Alarm history 10 Total energizing time
4	37	0	Contact switching total number of times (High)
5	38	0	Contact switching total number of times (Low)
6	39	0	Total energizing time (High, Low)
7	40	0	Heater accumulated energizing time (High)
8	41	0	Heater accumulated energizing time (Low)
9	42	0	Not used
10	43	0	Not used
11	44	0	Not used
12	45	0	Not used
13	46	0	Not used
14	47	0	Not used
15	48	0	Not used

(6) Setting item 1 to 7

Click [Setting item] tab or [Next] button.

Displays the Setting item screen.

Select any of Setting item 1 to 7. The maximum number of valid item selections is 20.

The excess is invalid for all channels in the control module.

Setting item 1 (Initial value: 57827)

Bit	Setting request item number	Selection	Description
0	1	1	Control Allowed/Prohibited selection
1	2	1	AT Perform/Cancel selection
2	3	0	Event output ON/OFF selection
3	4	0	Auto/Manual control selection
4	5	0	Manual MV setting
5	6	1	SV setting
6	7	1	Proportional band setting
7	8	1	Integral time setting
8	9	1	Derivative time setting
9	10	0	Proportional cycle setting
10	11	0	ON/OFF hysteresis setting
11	12	0	Output high limit setting
12	13	0	Output low limit setting
13	14	1	Alarm 1 action selection
14	15	1	Alarm 2 action selection
15	16	1	Alarm 3 action selection

Setting item 2 (Initial value: 2721)

Bit	Setting request item number	Selection	Description
0	17	1	Alarm 4 action selection
1	18	0	Alarm 1 hysteresis setting
2	19	0	Alarm 2 hysteresis setting
3	20	0	Alarm 3 hysteresis setting
4	21	0	Alarm 4 hysteresis setting
5	22	1	Alarm 1 value setting
6	23	0	Alarm 1 high limit value setting
7	24	1	Alarm 2 value setting
8	25	0	Alarm 2 high limit value setting
9	26	1	Alarm 3 value setting
10	27	0	Alarm 3 high limit value setting
11	28	1	Alarm 4 value setting
12	29	0	Alarm 4 high limit value setting
13	30	0	Heater burnout alarm setting
14	31	0	Loop break alarm band setting
15	32	0	Loop break alarm time setting

Setting item 3 (Initial value: 0)

Bit	Setting request item number	Selection	Description
0	33	0	Sensor correction factor setting
1	34	0	Sensor correction setting
2	35	0	PV filter time constant setting
3	36	0	SV rise rate setting
4	37	0	SV fall rate setting
5	38	0	MV bias setting
6	39	0	Not used
7	40	0	Not used
8	41	0	Not used
9	42	0	Not used
10	43	0	Not used
11	44	0	Not used
12	45	0	Not used
13	46	0	Not used
14	47	0	Not used
15	48	0	Not used

Setting item 4 (Initial value: 0)

Bit	Setting request item number	Selection	Description
0	49	0	Input type selection
1	50	0	Temperature unit selection
2	51	0	Scaling high limit setting
3	52	0	Scaling low limit setting
4	53	0	Not used
5	54	0	Direct/Reverse action selection
6	55	0	AT action mode selection
7	56	0	AT bias setting
8	57	0	ATgain setting
9	58	0	Alarm 1 value 0 Enable/Disable selection
10	59	0	Alarm 2 value 0 Enable/Disable selection
11	60	0	Alarm 3 value 0 Enable/Disable selection
12	61	0	Alarm 4 value 0 Enable/Disable selection
13	62	0	Event output allocation selection
14	63	0	Event input allocation selection
15	64	0	CH Enable/Disable selection

Setting item 5 (Initial value: 0)

Bit	Setting request item number	Selection	Description
0	65	0	Number of moving average setting
1	66	0	Input math function selection
2	67	0	Input difference selection
3	68	0	Input difference setting
4	69	0	Control action selection
5	70	0	Proportional gain 2 DOF coefficient (α) setting
6	71	0	Integral 2 DOF coefficient (β) setting
7	72	0	Derivative 2 DOF coefficient (γ) setting
8	73	0	Desired value proportional coefficient (C_p) setting
9	74	0	Gap width setting
10	75	0	Gap coefficient setting
11	76	0	Output minimum ON/OFF time setting
12	77	0	Integral/Derivative decimal point position selection
13	78	0	Power-on restore action selection
14	79	0	Not used
15	80	0	Not used

Setting item 6 (Initial value: 0)

Bit	Setting request item number	Selection	Description
0	81	0	Control function selection
1	82	0	Cooling P-band setting
2	83	0	Cooling Integral time setting
3	84	0	Cooling Derivative time setting
4	85	0	Cooling proportional cycle setting
5	86	0	Cooling ON/OFF hysteresis setting
6	87	0	Overlap/Dead band setting
7	88	0	Cooling output high limit setting
8	89	0	Cooling output low limit setting
9	90	0	Cooling action mode selection
10	91	0	Slave scale high limit setting
11	92	0	Slave scale low limit setting
12	93	0	Output bias setting
13	94	0	Output gain setting
14	95	0	Output channel selection
15	96	0	Output rate-of-change setting

Setting item 7 (Initial value: 0)

Bit	Setting request item number	Selection	Description
0	97	0	Communication response delay time setting
1	98	0	Expanded function selection
2	99	0	Total current setting
3	100	0	Current value setting
4	101	0	OUT ON delay setting
5	102	0	Auto balance control Interlock/Single selection
6	103	0	Auto balance control Master/ Slave selection
7	104	0	Auto balance control Enable/Disable selection
8	105	0	Auto balance control start output setting
9	106	0	Auto balance control cancel area setting
10	107	0	Number of communication management module setting
11	108	0	Non-volatile IC memory data save selection
12	109	0	Control action selection when input error
13	110	0	Output manipulated variable setting when input error
14	111	0	Not used
15	112	0	Not used

(7) Control module power OFF → ON

Turn the control module power off and then on. The set value becomes effective.


This completes the specification setting.

If multiple control modules are connected, connect the USB communication cable to the next control module.

Click User (U) - Model change (o) in the menu bar.

This will display the Change Model screen.


Select "QTC1-R" and click the [Exchange] button.

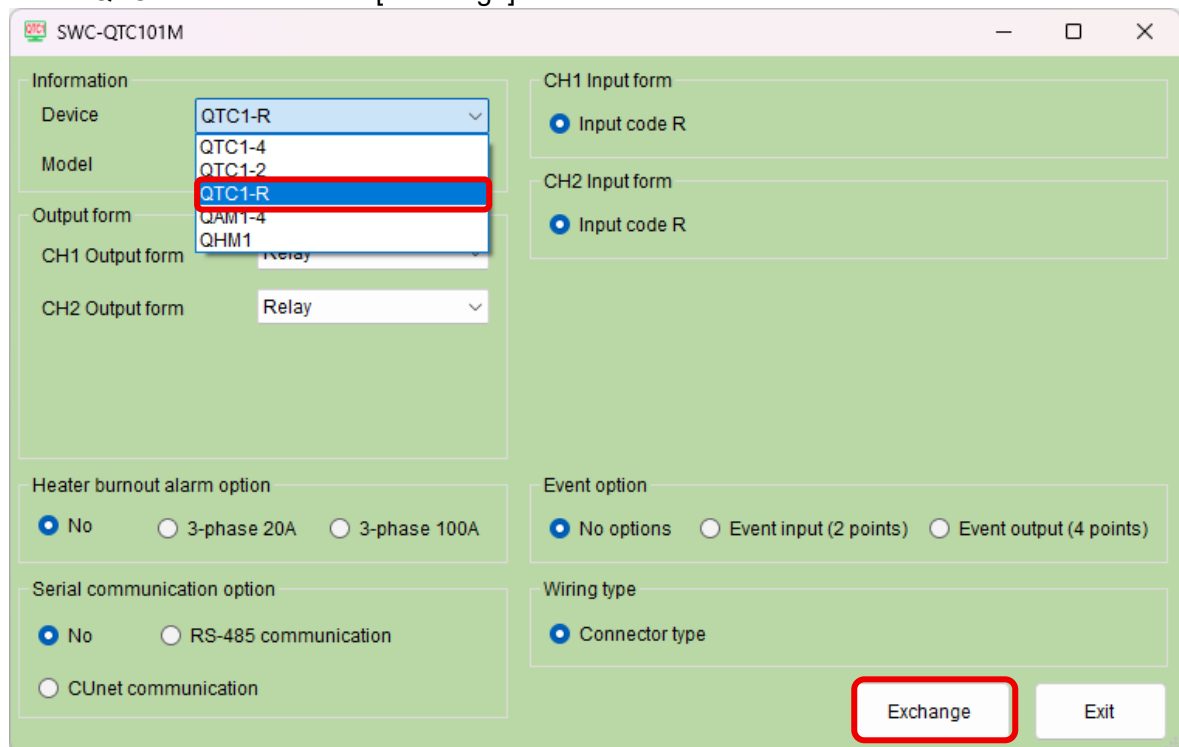

(Fig. 13.6.3-2)


Click "Default setting of SIF function(S)" from "User(U)" of menu bar.

Display "Default setting of SIF function" screen.

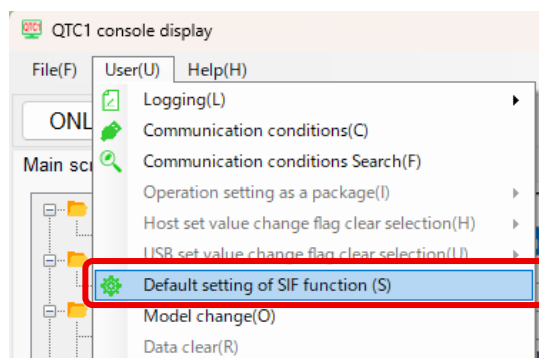

(Fig. 13.6.3-3)

Select the connected module number (Example: Module 2) and click the [System] tab.

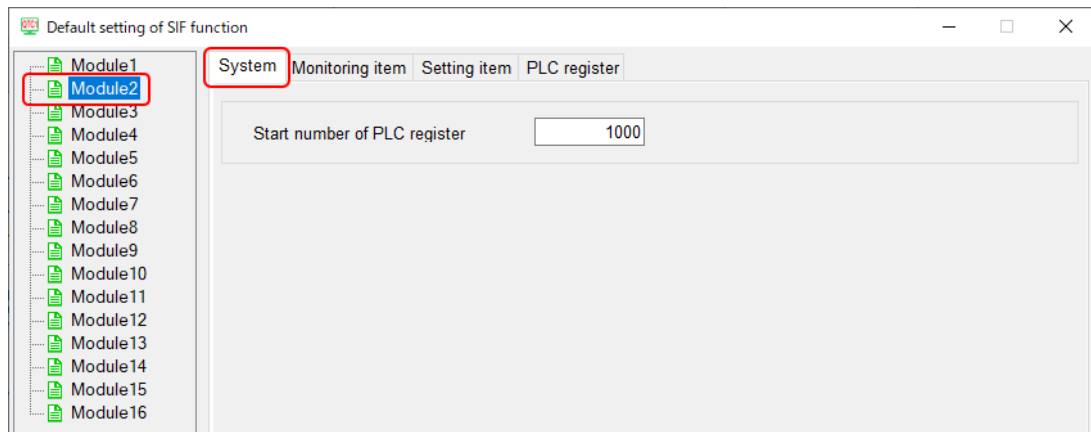


(Fig. 13.6.3-4)

(2) PLC register start number, (5) Monitor item 1 to 3 and (6) Setting item 1 to 7 are selected, and (7) Control module power is turned OFF → ON.

13.7 Operation

The following explains how to connect two control modules to the PLC.

Example of connection between PLC and QTC1-RP, QTC1-R0

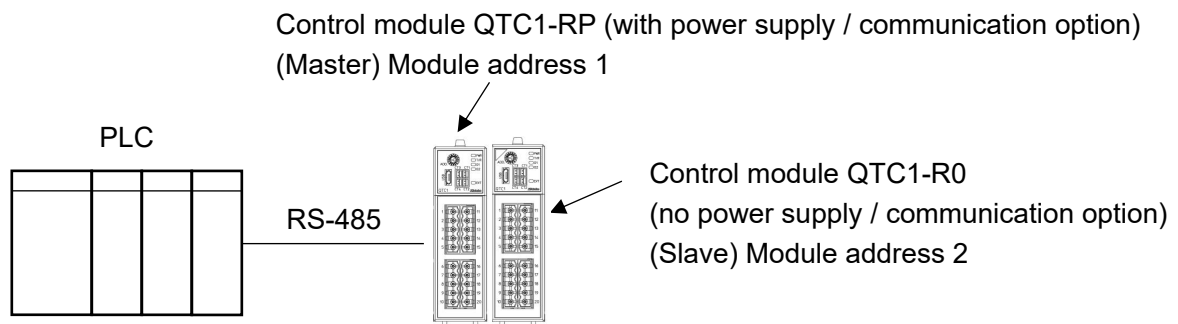


(Fig. 13.7-1)

13.7.1 Communication Procedure


- (1) The control module QTC1-RP becomes the master and collects the valid monitor items and setting items of the control module QTC1-R0 (slave).
- (2) After the PLC communication start waiting time has elapsed, the control module QTC1-RP periodically writes the item selected in the monitor items to the PLC register.


Also, the item selected from the setting items is read from the PLC register in response to a setting request.

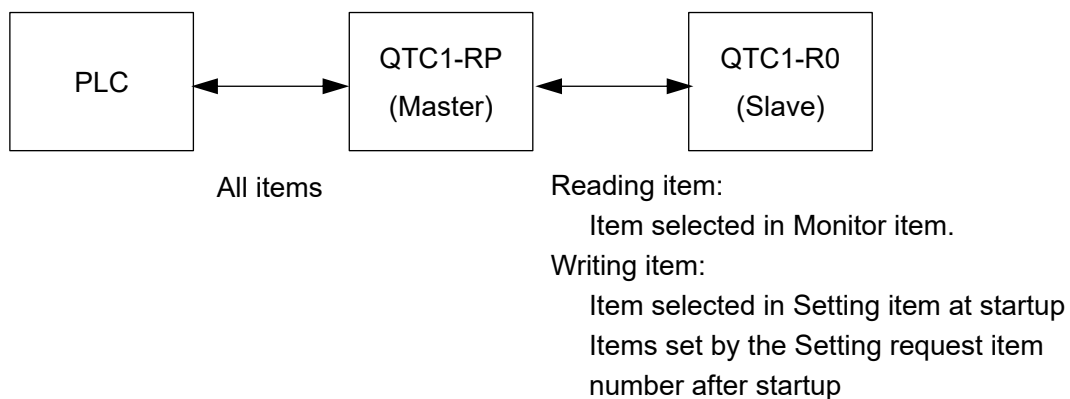

(Fig. 13.7.1-1)

13.7.2 Handshake between Control Module QTC1-RP and PLC

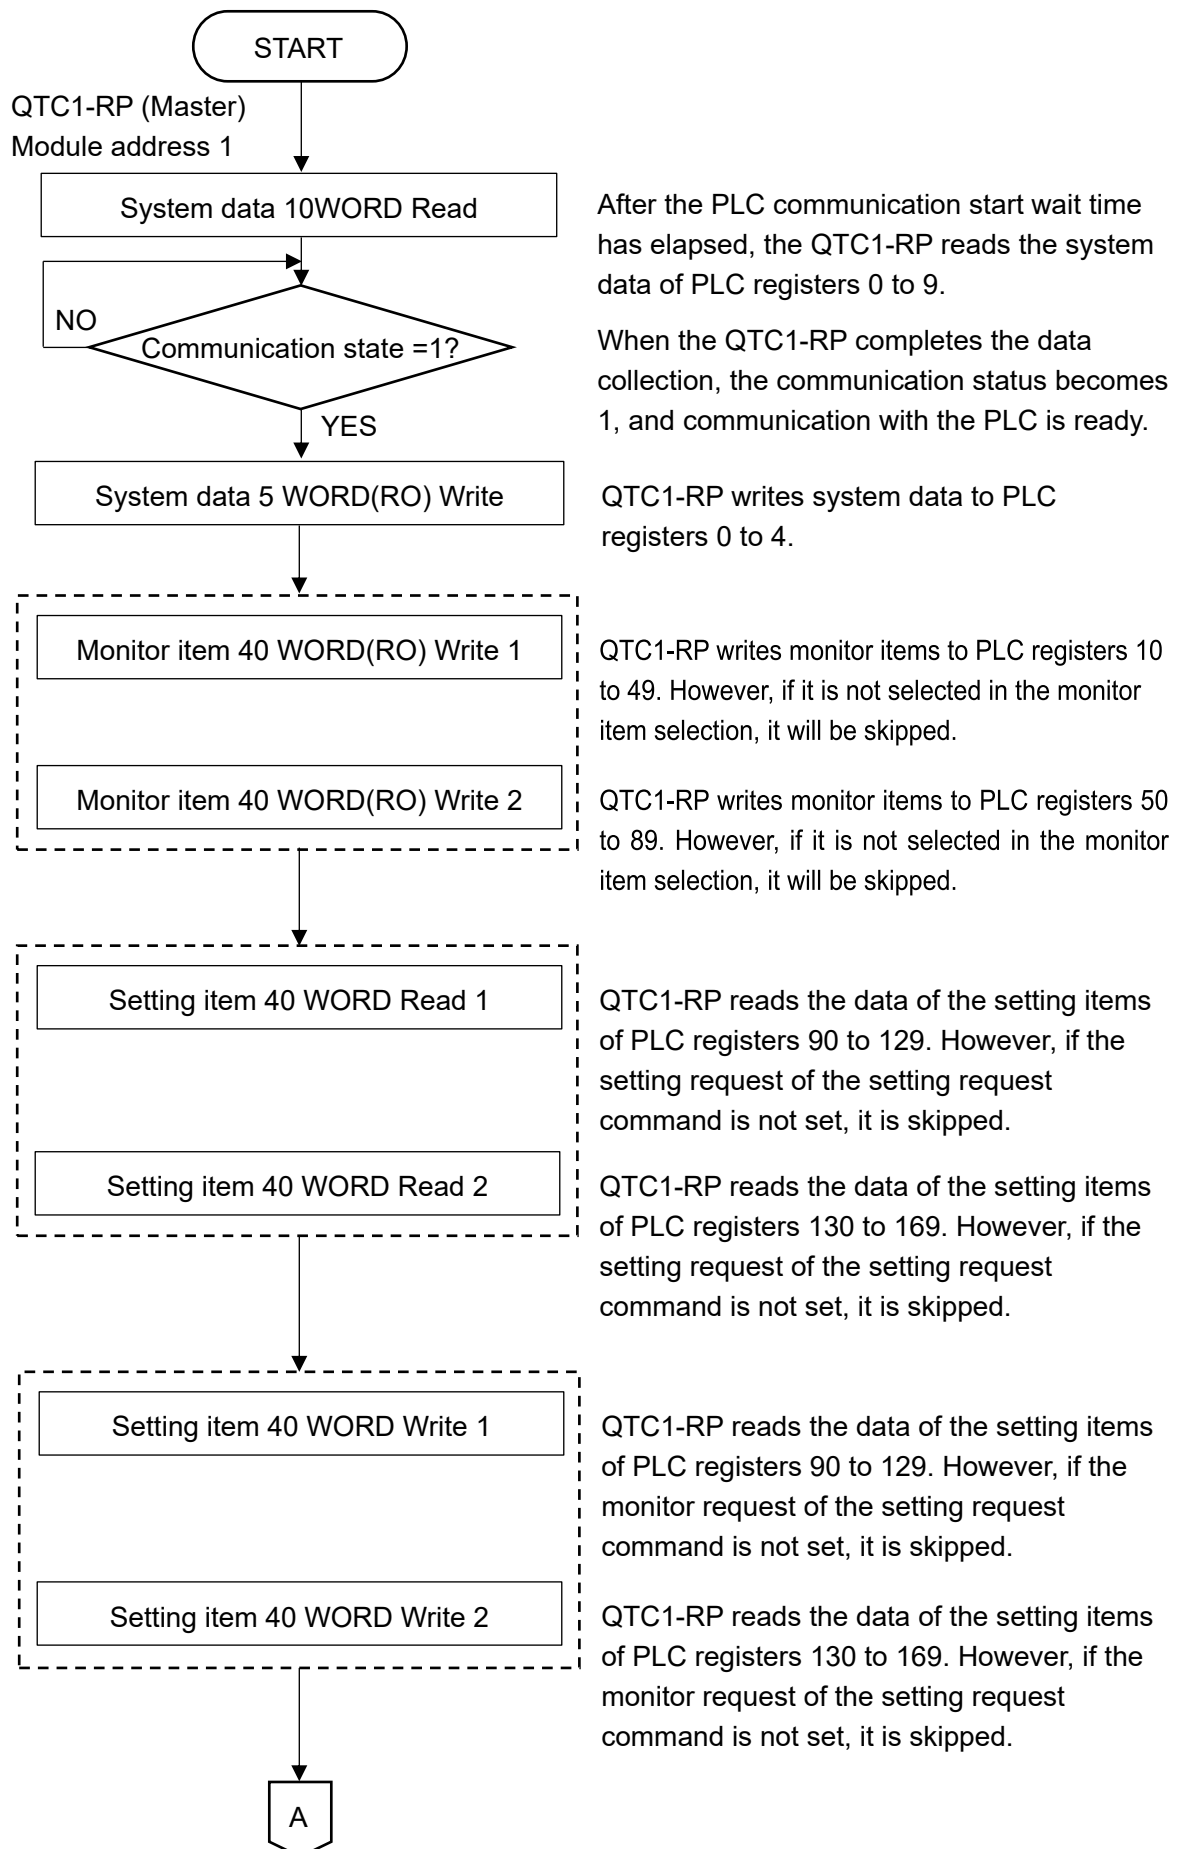

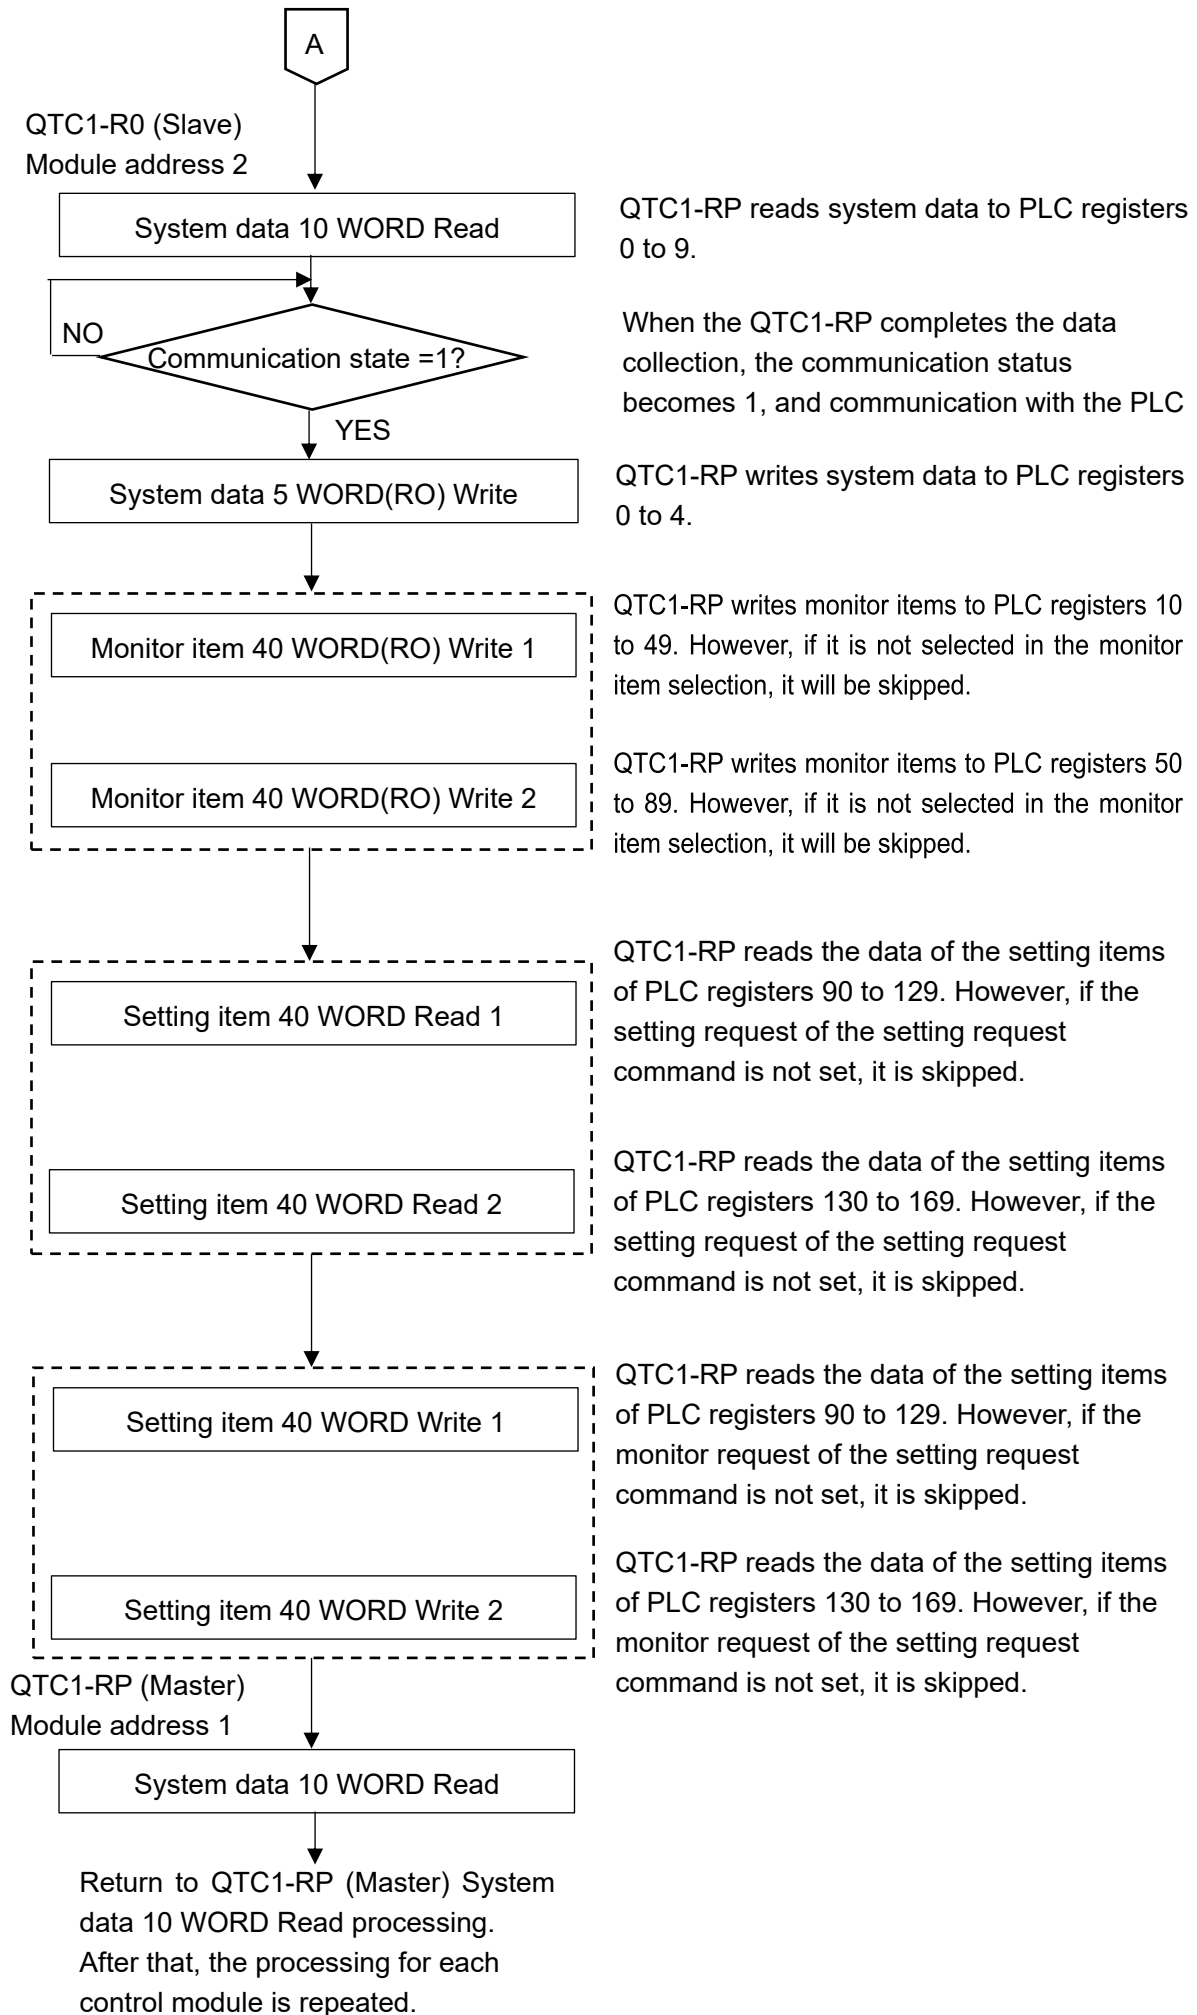

13.7.3 PLC Communication Data Map

Shown below is the PLC communication data map when the initial setting example for PLC communication is set.

Example of initial setting for PLC communication

MODBUS address		Name	QTC1-RP (Master) setting	QTC1-R0 (Slave) setting
HEX	DEC			
0384	900	PLC register start number	1000	1100
0385	901	PLC response wait time	250	250
0386	902	PLC communication start wait time	5	5
0387	903	Reservation (Not used)	0	0
0388	904	Reservation (Not used)	0	0
0389	905	Monitor item 1	31	31
038A	906	Monitor item 2	0	0
038B	907	Monitor item 3	0	0
038C	908	Reservation (Not used)	0	0
038D	909	Reservation (Not used)	0	0
038E	910	Setting item 1	57827	57827
038F	911	Setting item 2	2721	2721
0390	912	Setting item 3	0	0
0391	913	Setting item 4	0	0
0392	914	Setting item 5	0	0
0393	915	Setting item 6	0	0
0394	916	Setting item 7	0	0

PLC data register layout

	QTC1-RP (Master)	QTC1-R0 (Slave)
Information between QTC1-R and PLC (system data)	1000 to 1009	1100 to 1109
Monitor item	1010 to 1029	1110 to 1129
Setting item	1030 to 1085	1130 to 1185

Details of information (system data) between control module QTC1-R and PLC

Control module QTC1-R (Master)

Data	PLC data register	Attribute	Description
Communication status	1000	RO	0: QTC1-RP collecting data 1: QTC1-RP completes data collection (Startup: Initial setting value of each slave)
QTC1-R - PLC Normal communication monitor	1001	RO	Increment counter(1*) Repeat 0 to 65535 → 0 to 65535
QTC1-R Error code	1002	RO	B0: PLC register R/W error 0: Normal 1: Error B1: QTC1-2P communication error 0: Normal 1: Error B2: QTC1-2P Negative acknowledgement when setting 0: Normal 1: Error (It will be cleared when B0 of 1006 is cleared.)
Setting request monitor	1003	RO	B0: Setting (Reflect and set to B0 of 1006.) B1: Monitoring (Reflect and set until B1 of 1006 is cleared.)
Reservation	1004	RO	
Setting request item number	1005	R/W	0: All items selected in setting items 1 to 7 1 to 112: Items selected in setting items 1 to 7 (1 data) Only the data (1 data) of the selected item will be read or written. However, because communication with the PLC is a batch process, all the selected items are read or written.
Setting request command (2*)	1006	R/W	B0: Setting request (PLC → QTC1-RP) QTC1-RP requests to read the setting item data from the PLC register. B1: Monitor request (QTC1-RP → PLC) QTC1-RP requests to write the setting item data to the PLC register. After the setting request or monitor request is completed, QTC1-RP clears each bit.
Reservation	1007	R/W	
Reservation	1008	R/W	
Reservation	1009	R/W	

(1*): The increment counter is +1 when QTC1-RP sends out a command.

The number of increments of the count value varies depending on the number of valid monitor items and setting items, the number of connected units, and whether or not a setting request is received.

(e.g.) If the initial value of the number of valid monitor items is 31 and only one monitor is connected, the count value is +3, and if two monitor items are connected, the count value is +6.

(2*): If the setting request and the monitor request are set at the same time, processing is performed in the following procedure: ① setting request (QTC1-RP reads PLC register data), ② monitor request (writing data to PLC register).

If the setting request is set during the monitor request, the monitor request is discarded and the monitoring request is made again after the setting request.

Control module QTC1-R0 (Slave)

Data	PLC data register	Attribute	Description
Communication status	1100	RO	0: QTC1-RP collecting data of QTC1-R0 1: QTC1-RP completes data collection of QTC1-R0 (Startup: Initial setting value of each slave)
QTC1-R - PLC Normal communication monitor	1101	RO	Increment counter (1*) Repeat 0 to 65535 → 0 to 65535
QTC1-R Error code	1102	RO	B0: PLC register R/W error 0: Normal 1: Error B1: Communication error between QTC1-RP and QTC1-R0 0: Normal 1: Error B2: Negative acknowledgement when setting QTC1-RP to QTC1-R0 (It will be cleared when B0 of 1006 is cleared.) 0: Normal 1: Error
Setting request monitor	1103	RO	B0: Setting (Reflect and set to B0 of 1006.) B1: Monitoring (Reflect and set until B1 of 1006 is cleared.)
Reservation	1104	RO	
Setting request item number	1105	R/W	0: All items selected in setting items 1 to 7 1 to 112: Items selected in setting items 1 to 7 (1 data) Only the data (1 data) of the selected item will be read or written. However, because communication with the PLC is a batch process, all the selected items are read or written.
Setting request command (2*)	1106	R/W	B0: Setting request (PLC → QTC1-RP) QTC1-RP requests to read the setting item data from the PLC register. B1: Monitor request (QTC1-RP → PLC) QTC1-RP requests to write the setting item data to the PLC register. After the setting request or monitor request is completed, QTC1-RP clears each bit.
Reservation	1107	R/W	
Reservation	1108	R/W	
Reservation	1109	R/W	

(1*): The increment counter is +1 when QTC1-RP sends out a command.

The number of increments of the count value varies depending on the number of valid monitor items and setting items, the number of connected units, and whether or not a setting request is received.

(e.g.) If the initial value of the number of valid monitor items is 31 and only one monitor is connected, the count value is +3, and if two monitor items are connected, the count value is +6.

(2*): If the setting request and the monitor request are set at the same time, processing is performed in the following procedure: ① setting request (QTC1-RP reads PLC register data), ② monitor request (writing data to PLC register).

If the setting request is set during the monitor request, the monitor request is discarded and the monitoring request is made again after the setting request.

Details of monitor item and setting item between control module QTC1-R and PLC

Control module QTC1-RP (Master)

Data item	Channel	PLC data register	Attribute	Data
PV reading (Including difference)	CH1 CH2 CH3 CH4	1010 1011 1012 1013	RO	The value of "15.2.1 Control range (P.15-6)". Supports input math function (difference input, addition input) and input difference detection function.
MV reading	CH1 CH2 CH3 CH4	1014 1015 1016 1017	RO	Output low limit to Output high limit
SV reading	CH1 CH2 CH3 CH4	1018 1019 1020 1021	RO	Scaling low limit to Scaling high limit
Status flag 1	CH1 CH2 CH3 CH4	1022 1023 1024 1025	RO	B0: Control Allowed/Prohibited 0: Prohibited 1: Allowed B1: AT Perform/Cancel 0: Cancel 1: Perform B2: Auto/Manual control 0: Automatic 1: Manual B3: Control output 0: OFF 1: ON B4: Input error (Overscale) 0: Normal 1: Error B5: Input error (Underscale) 0: Normal 1: Error B6: Alarm 1 output 0: OFF 1: ON B7: Alarm 2 output 0: OFF 1: ON B8: Alarm 3 output 0: OFF 1: ON B9: Alarm 4 output 0: OFF 1: ON B10: Loop brake alarm output 0: OFF 1: ON B11: Heater burnout alarm output 0: OFF 1: ON B12: Input difference 0: Within range 1: Out of range B13: Not used (indefinite) B14: Power supply identification 0: 24 V DC 1: USB bus power B15: Non-volatile IC memory error 0: Normal 1: Error

Data item	Channel	PLC data register	Attribute	Data
Status flag 2 reading	CH1 CH2 CH3 CH4	1026 1027 1028 1029	RO	B0: Auto balance control 0: None 1: During auto balance control B1 to B3: Not used (indefinite) B4: Cold junction error 0: Normal 1: Error B5: Sensor error 0: Normal 1: Error B6: ADC error 0: Normal 1: Error B7: Host setting value change flag 0: Without flag 1: With flag B8: USB setting value change flag 0: Without flag 1: With flag B9 to B15: Not used (indefinite)
Control Allowed/Prohibited selection	CH1 CH2 CH3 CH4	1030 1031 1032 1033	R/W	0: Prohibited 1: Allowed
AT Perform/Cancel selection	CH1 CH2 CH3 CH4	1034 1035 1036 1037	R/W	0: AT Cancel 1: AT Perform
SV setting	CH1 CH2 CH3 CH4	1038 1039 1040 1041	R/W	Scaling low limit to Scaling high limit
Proportional band setting	CH1 CH2 CH3 CH4	1042 1043 1044 1045	R/W	0.001 to Input span °C
Integration time setting	CH1 CH2 CH3 CH4	1046 1047 1048 1049	R/W	0 to 3600 seconds or 0.0 to 2000.0 seconds when "2: Slow-PID control" is selected in control action selection. 1 to 3600 seconds or 0.1 to 2000.0 seconds
Derivative time setting	CH1 CH2 CH3 CH4	1050 1051 1052 1053	R/W	0 to 3600 seconds or 0.0 to 2000.0 seconds

Data item	Channel	PLC data register	Attribute	Data
Alarm 1 action selection	CH1 CH2 CH3 CH4	1054 1055 1056 1057	R/W	0: No action 1: High limit alarm 2: Low limit alarm 3: High/Low limits alarm
Alarm 2 action selection	CH1 CH2 CH3 CH4	1058 1059 1060 1061	R/W	4: High/Low limit s range 5: Process High alarm 6: Process low alarm 7: High limit with standby
Alarm 3 action selection	CH1 CH2 CH3 CH4	1062 1063 1064 1065	R/W	8: Low limit with standby 9: High/Low limits alarm with 10: High/Low limits alarm individually
Alarm 4 action selection	CH1 CH2 CH3 CH4	1066 1067 1068 1069	R/W	11: High/Low limit s range alarm individually 12: High/Low limits alarm with standby individually
Alarm 1 value setting	CH1 CH2 CH3 CH4	1070 1071 1072 1073	R/W	Refer to "Alarm 1 to 4 value setting range table".
Alarm 2 value setting	CH1 CH2 CH3 CH4	1074 1075 1076 1077	R/W	
Alarm 3 value setting	CH1 CH2 CH3 CH4	1078 1079 1080 1081	R/W	
Alarm 4 value setting	CH1 CH2 CH3 CH4	1082 1083 1084 1085	R/W	

Alarm 1 to 4 value setting range table

Alarm type	Setting range
No action	
High limit alarm	-(Input span) to Input span
Low limit alarm	-(Input span) to Input span
High/Low limits alarm	0 to Input span
High/Low limit s range	0 to Input span
Process High alarm	Input range lower limit to Input range high limit
Process low alarm	Input range lower limit to Input range high limit
High limit with standby	-(Input span) to Input span
Low limit with standby	-(Input span) to Input span
High/Low limits alarm with	0 to Input span
High/Low limits alarm individually	0 to Input span
High/Low limit s range alarm individually	0 to Input span
High/Low limits alarm with standby individually	0 to Input span

Control module QTC1-R0 (Slave)

Data item	Channel	PLC data register	Attribute	Data
PV reading (Including difference)	CH1	1110	RO	Same as QTC1-RP (Master).
	CH2	1111		
	CH3	1112		
	CH4	1113		
MV reading	CH1	1114	RO	Same as QTC1-RP (Master).
	CH2	1115		
	CH3	1116		
	CH4	1117		
SV reading	CH1	1118	RO	Same as QTC1-RP (Master).
	CH2	1119		
	CH3	1120		
	CH4	1121		
Status flag 1 reading	CH1	1122	RO	Same as QTC1-RP (Master).
	CH2	1123		
	CH3	1124		
	CH4	1125		
Status flag 2 reading	CH1	1126	RO	Same as QTC1-RP (Master).
	CH2	1127		
	CH3	1128		
	CH4	1129		
Control Allowed/Prohibited selection	CH1	1130	R/W	Same as QTC1-RP (Master).
	CH2	1131		
	CH3	1132		
	CH4	1133		
AT Perform/Cancel selection	CH1	1134	R/W	Same as QTC1-RP (Master).
	CH2	1135		
	CH3	1136		
	CH4	1137		
SV setting	CH1	1138	R/W	Same as QTC1-RP (Master).
	CH2	1139		
	CH3	1140		
	CH4	1141		
Proportional band setting	CH1	1142	R/W	Same as QTC1-RP (Master).
	CH2	1143		
	CH3	1144		
	CH4	1145		
Integration time setting	CH1	1146	R/W	Same as QTC1-RP (Master).
	CH2	1147		
	CH3	1148		
	CH4	1149		
Derivative time setting	CH1	1150	R/W	Same as QTC1-RP (Master).
	CH2	1151		
	CH3	1152		
	CH4	1153		

Data item	Channel	PLC data register	Attribute	Data
Alarm 1 action selection	CH1 CH2 CH3 CH4	1154 1155 1156 1157	R/W	Same as QTC1-RP (Master).
Alarm 2 action selection	CH1 CH2 CH3 CH4	1158 1159 1160 1161	R/W	
Alarm 3 action selection	CH1 CH2 CH3 CH4	1162 1163 1164 1165	R/W	
Alarm 4 action selection	CH1 CH2 CH3 CH4	1166 1167 1168 1169	R/W	
Alarm 1 value setting	CH1 CH2 CH3 CH4	1170 1171 1172 1173	R/W	Same as QTC1-RP (Master).
Alarm 2 value setting	CH1 CH2 CH3 CH4	1174 1175 1176 1177	R/W	
Alarm 3 value setting	CH1 CH2 CH3 CH4	1178 1179 1180 1181	R/W	
Alarm 4 value setting	CH1 CH2 CH3 CH4	1182 1183 1184 1185	R/W	

13.7.4 Data Exchange between Control Module QTC1-RP and PLC

Data transfer between the control module QTC1-RP and PLC is performed by the setting request item number and setting request command.

(1) Setting request item number

Set whether to transfer the data of all items selected in setting item 1 to 7 selection or only the data (1 data) of the selected item.

0: Transfers the data of all items selected in setting item 1 to 7 selection.

1 to 112: Transfers only the data (1 data) of the item selected in setting item 1 to 7 selection.

(2) Setting request command

The setting request command includes setting request and monitor request.

B0: Setting request (PLC → QTC1-RP)

The control module QTC1-RP is a command to request to read the data of the setting item of the PLC register.

B1: Monitor request (QTC1-RP → PLC)

The control module QTC1-RP is a command to request to write the data of the setting item of the PLC register.

If setting request and monitor request are set at the same time, processing is performed in the order of setting request (QTC1-RP reads the data of the setting item in the PLC register) and then monitor request (writing the data of the setting item in the PLC register).

If a setting request is set during monitor request, the monitor request is discarded and the monitor request is made again after the setting request.



Caution

When setting data, first write all the setting item data to the PLC register.

Note that if you change the setting items of the control module QTC1-RP without writing all the setting item data, it may be overwritten with an undefined value and malfunction may occur.

Data setting procedure

When select the control allowed in control allowed/prohibited selection of the control module QTC1-RP

- (1) Set 0 to the setting request item number

To write all the setting item data to the PLC register, set 0 to 1005 (setting request item number).

- (2) Set B1 (monitor request) of the setting request command

Set 1 (decimal number: 2) to B1 (monitor request) of 1006 (setting request command).

The control module QTC1-RP starts writing the setting item data to the PLC register.

- (3) Check B1 (monitor request) of the setting request command

When the writing of the setting item data to the PLC register is completed, B1 (monitor request) of 1006 (setting request command) is cleared.

- (4) Set data

Set 1 (control allowed) to 1030 to 1033 (control allowed/prohibited selection) of the PLC register.

- (5) Set 1 to the setting request item number

To read the control allowed/prohibited selection data of the PLC register, set 1 to 1005 (setting request item number).

- (6) Set B0 (setting request) of the setting request command

Set 0 (decimal number: 1) to B0 (monitor request) of 1006 (setting request command).

The control module QTC1-RP starts reading the setting item data of the PLC register.

- (7) Check B0 (monitor request) of the setting request command


When the reading of the setting item data to the PLC register is completed, B0 (monitor request) of 1006 (setting request command) is cleared.

Example of PV read and SV write operations

Explanation: This is an example of reading and writing the PV and SV of the QTC1-RP and QTC1-R0. The PLC registers are assigned to 1000: QTC1-RP and 1100: QTC1-R0.

1. Data flow and flag operation to match the PLC register and QTC1 settings at power-on

- ① Write 0 to 1005. (Select all setting items set by the SIF function [only SV in this case])
- ② Write 2 to 1006. (Specify data transfer from QTC1-RP to PLC)
- ③ Write SV of QTC1-RP to 1014 to 1017.
- ④ QTC1-RP reads the SV of QTC1-R0 and writes it to 1104 to 1107.
- ⑤ QTC1-RP writes 0 to 1006.

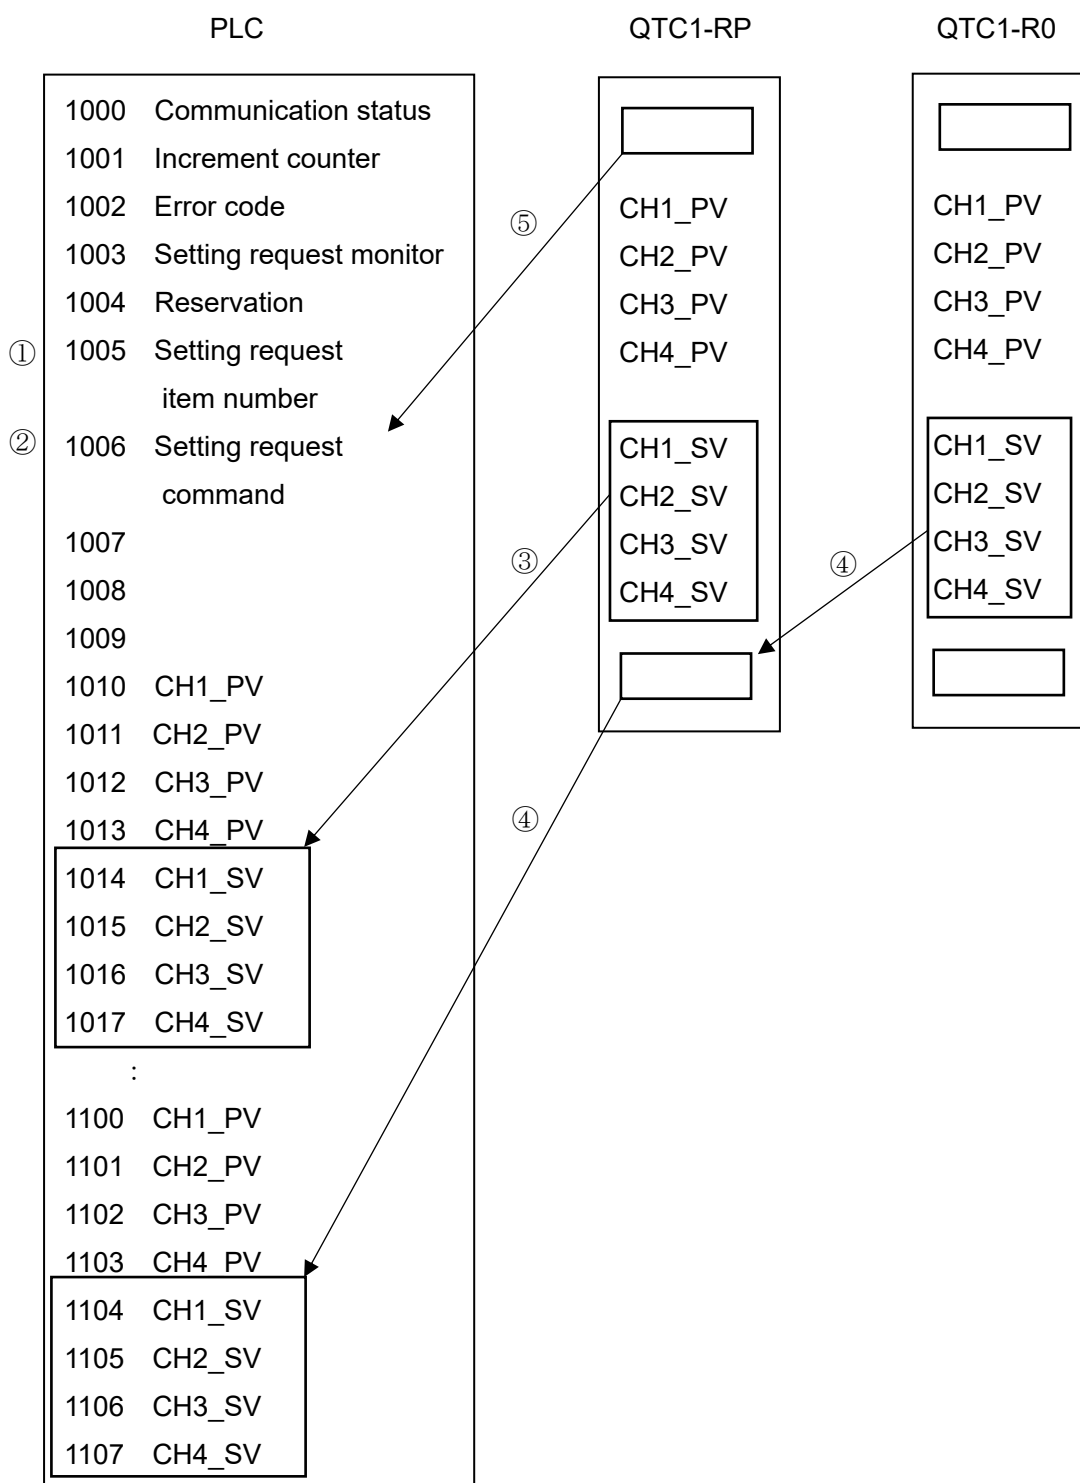


2. Data flow and flag operations when PV read

- ①,④ QTC1-RP reads the system data in PLC registers 0 to 9.
- ②,⑤ QTC1-RP writes system data to PLC registers 0 to 4.
- ③ QTC1-RP writes PV to PLC registers 1010 to 1013.
- ⑥ QTC1-RP reads the PV from QTC1-R0 and writes the PV to PLC registers 1100 to 1103.


*Only the SIF function is set by the console software; no flag operation is required.

The PV of each register is constantly updated at the timings (1) to (6) above.

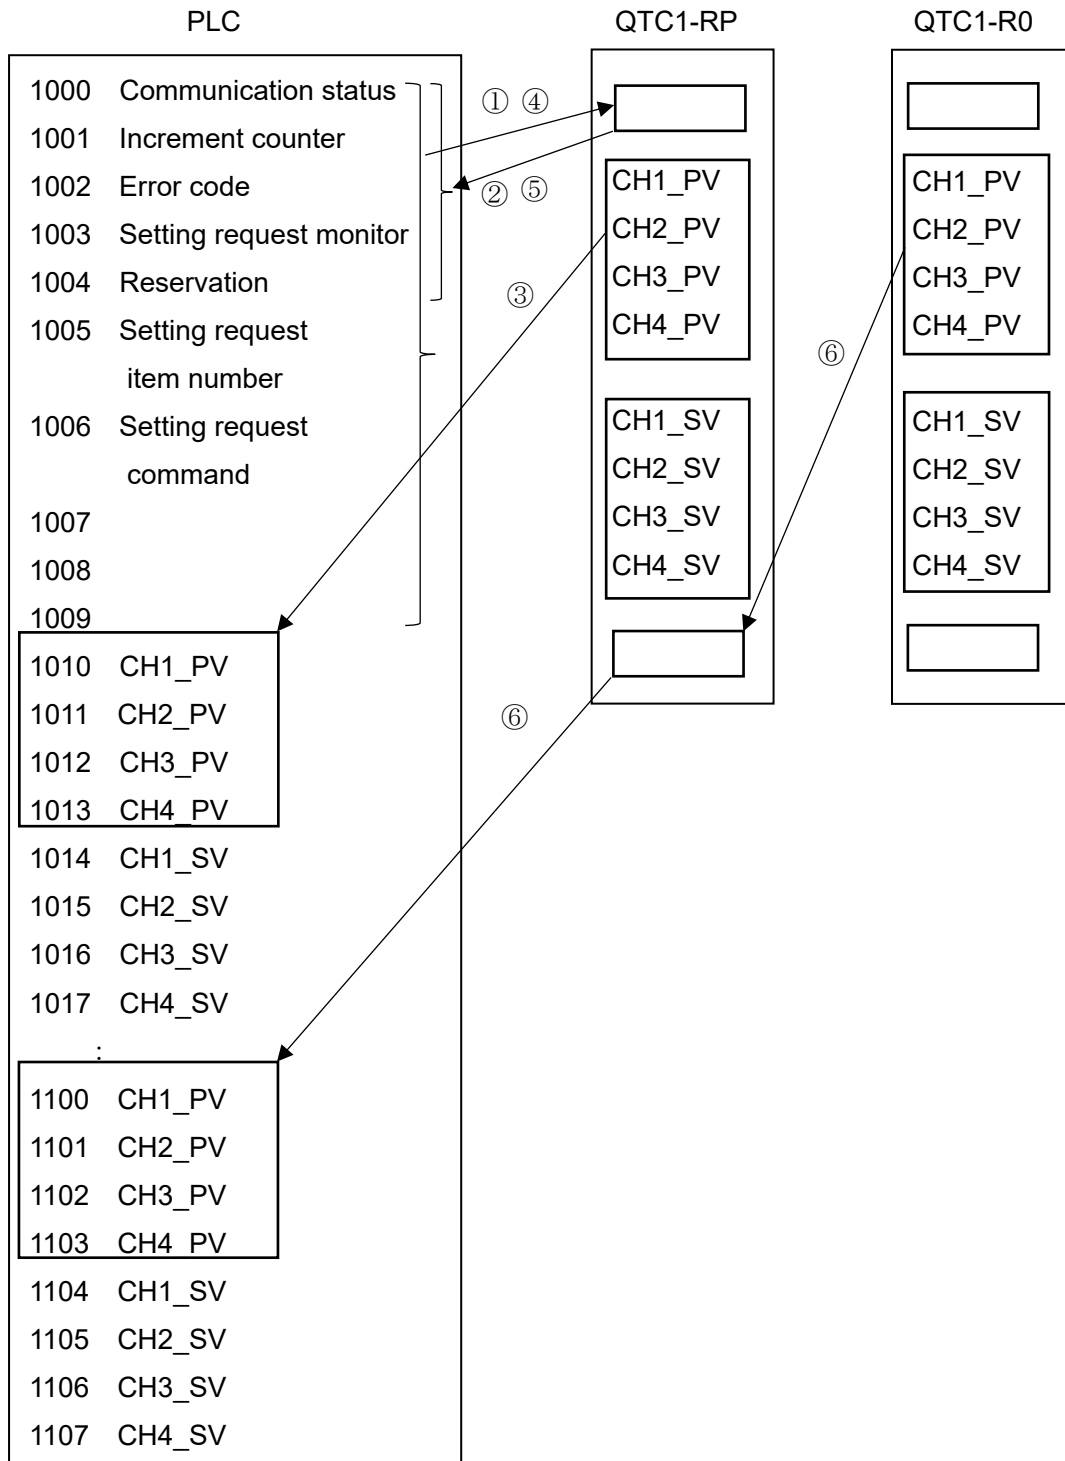

3. Data flow and flag operations when SV write

- ① 1014 to 1017 (SV of QTC1-RP) is changed.
- ② Change 1104 to 1107 (SV of QTC1-R0).
- ③ Write 0 or 6 to 1005.
0: Select all setting items set by the SIF function (only SV in this case)
6: SV only (see P13-20)
- ④ Write 1 to 1006. (Specify data transfer from PLC to QTC1-RP)
- ⑤ QTC1-RP writes data from 1014 to 1017 to SV of QTC1-RP.
- ⑥ QTC1-RP writes data from 1104 to 1107 to the SV of QTC1-R0.
- ⑦ QTC1-RP writes 0 to 1006.

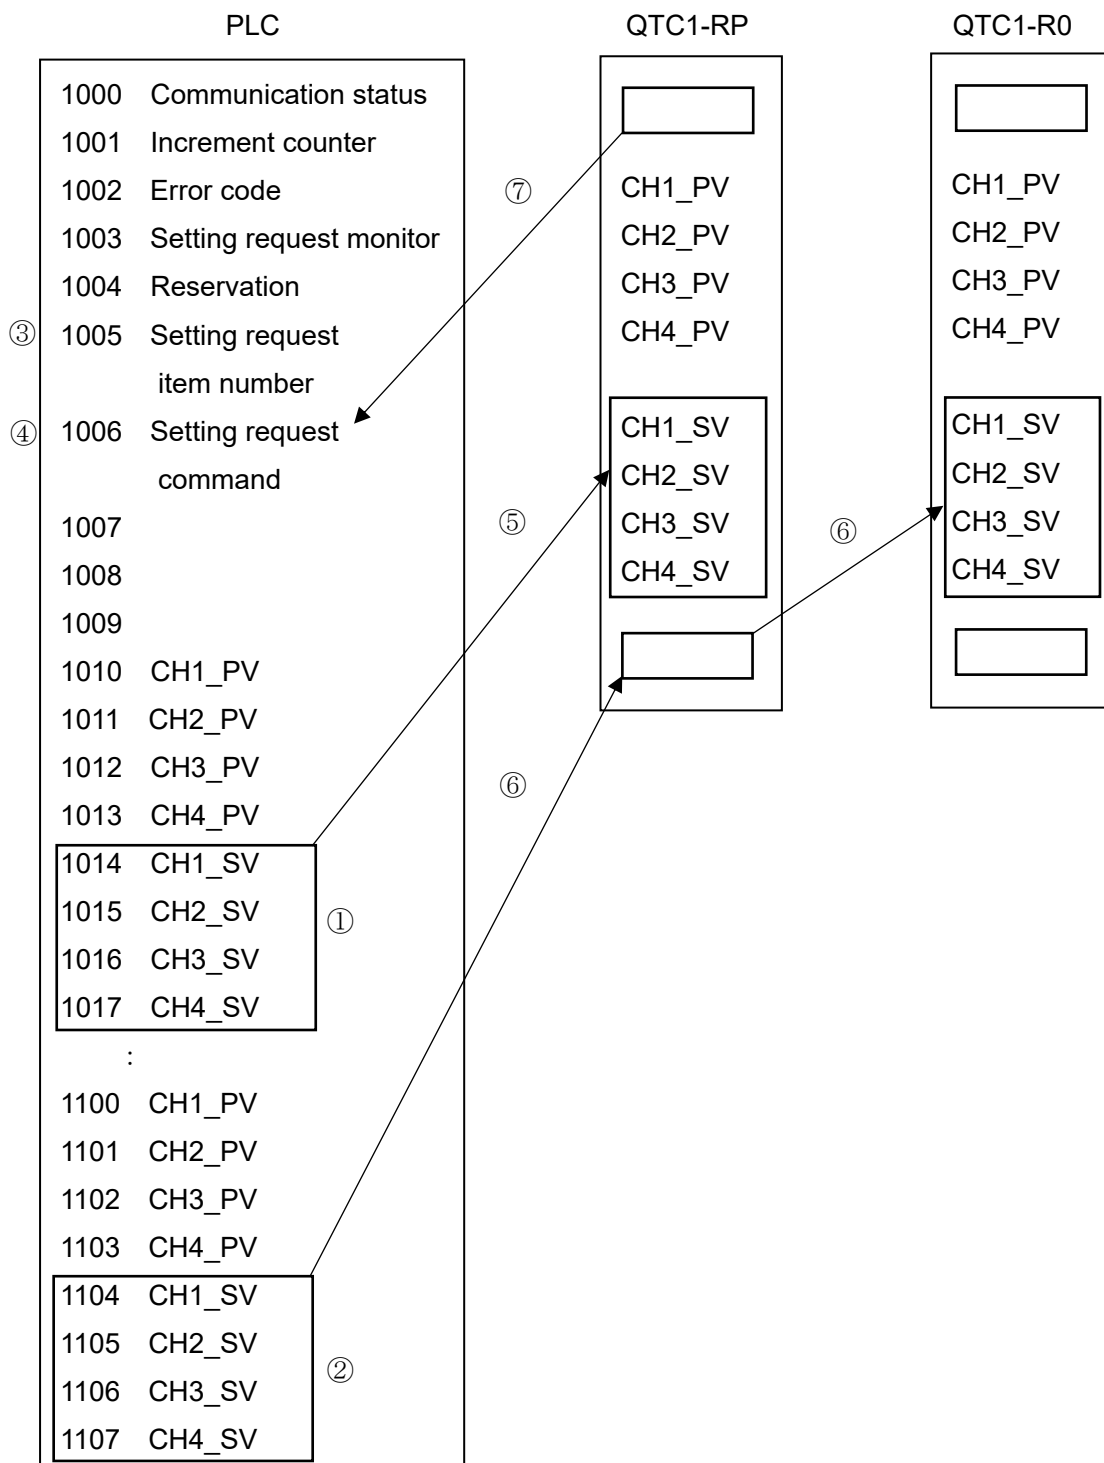


14 CUnet Communication

CUnet communication writes the reading value from the module to the global memory (GM) specified by the station address (SA).

It reads the setting values from the master address (DOSA) and sets them to the module.


The setting value can also be changed by using the mail function of CUnet.

Configuration example of host computer (master board) and QTC1-RC

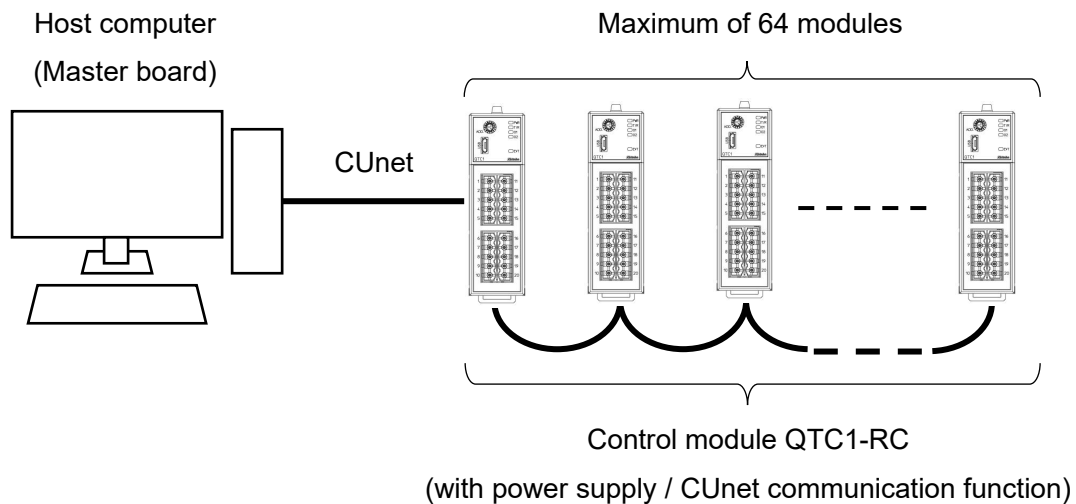

(Fig. 14-1)

14.1 Flow of Before Operation

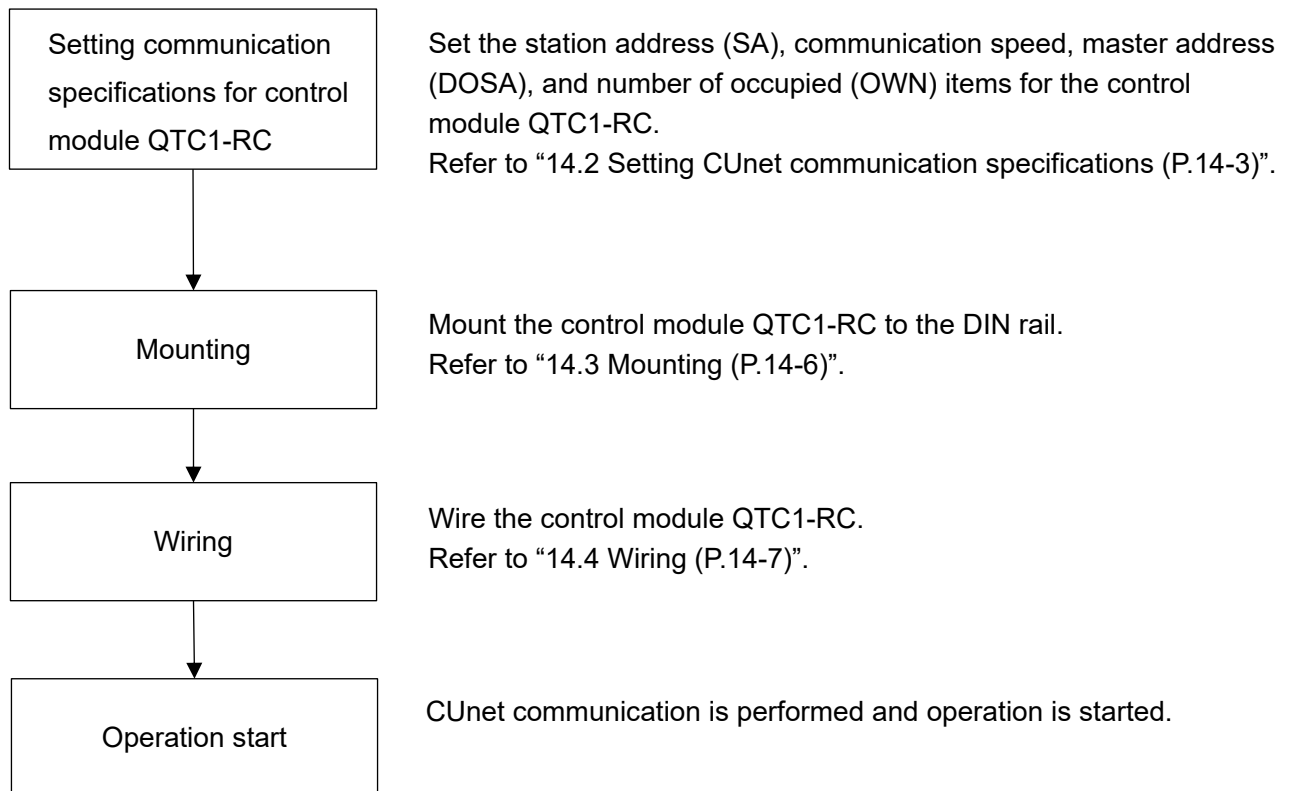


(Fig. 14.1-1)

14.2 Setting CUnet communication specifications

The CUnet communication specifications are set by the dip switches (SW10, SW11) on the base part.

(1) Case removal

- ① Push the release lever on the top of this instrument to unlock it.
- ② Remove the case.

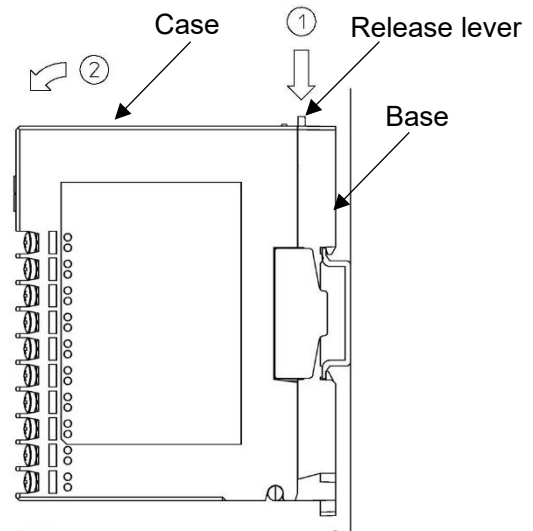

(Fig. 14.2-1)


(2) Station address (SA), communication speed setting (SW10)



Caution

Please set the station address (SA) so that there are no duplicate addresses.

The station address (SA) and communication speed are set by DIP switch (SW10).

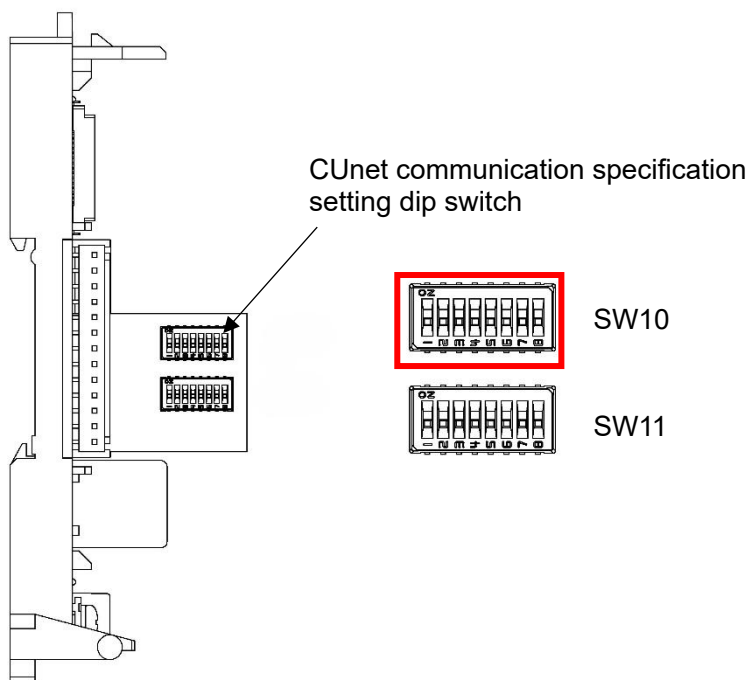

(Fig. 14.2-2)


Set the station address (SA) and communication speed.

The setting range of the station address (SA) is 00 to 63.

No.	Setting item	Status	Factory default
1	Station address setting	Bit0 ON: Enable, OFF: Disable	Disable
2		Bit1 ON: Enable, OFF: Disable	Disable
3		Bit2 ON: Enable, OFF: Disable	Disable
4		Bit3 ON: Enable, OFF: Disable	Disable
5		Bit4 ON: Enable, OFF: Disable	Disable
6		Bit5 ON: Enable, OFF: Disable	Disable
7	Communication speed setting	7: OFF 8: OFF 12 Mbps	12 Mbps
		7: ON 8: OFF 6 Mbps	
		7: OFF 8: ON 3 Mbps	
8		7: ON 8: ON Disable (12 Mbps)	

(3) Master address (DOSA) and number of occupied (OWN) items selection (SW11)

The master address (DOSA) and the number of occupied (OWN) items are set by DIP switch (SW11).

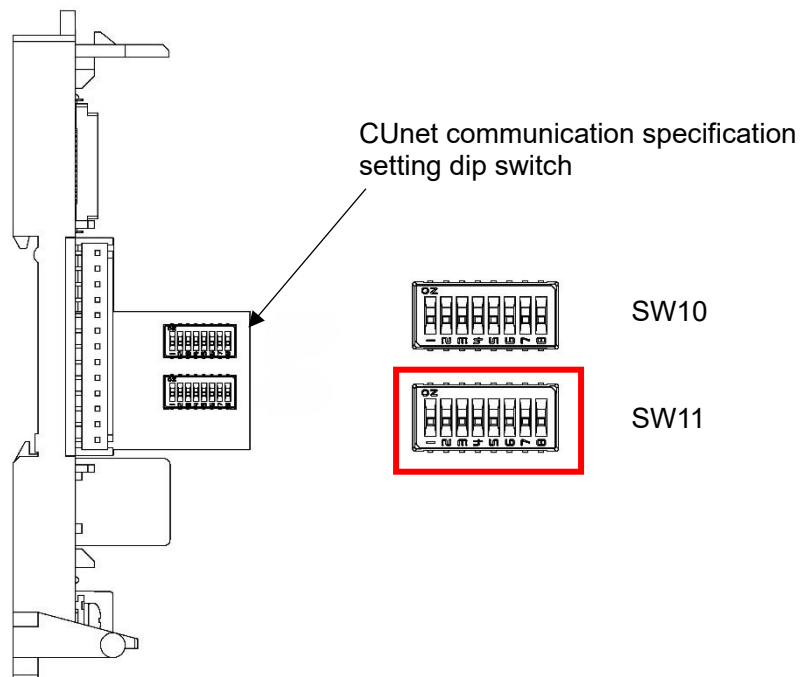

(Fig. 14.2-3)

Set the master address (DOSA) and the number of occupied (OWN) items.

Set which master global memory (GM) area data is output to the analog output terminal.

The setting range of the master address (DOSA) is 00 to 63.


No.	Setting item	Status	Factory default
1	Master address setting	Bit0 ON: Enable, OFF: Disable	Disable
2		Bit1 ON: Enable, OFF: Disable	Disable
3		Bit2 ON: Enable, OFF: Disable	Disable
4		Bit3 ON: Enable, OFF: Disable	Disable
5		Bit4 ON: Enable, OFF: Disable	Disable
6		Bit5 ON: Enable, OFF: Disable	Disable
7	Number of occupied (OWN) items selection(*)	7: OFF 8: OFF 1 item	1 item
		7: ON 8: OFF 2 items	
		7: OFF 8: ON 3 items	
8		7: ON 8: ON 4 items	

(*): The following items are allocated to global memory for each module.

Number of occupied (OWN) items	QTC1-R			
	Read item		Write item	
1	PV:	03E8-03EB	SV:	0018-001B
2	Status flag 1:	03F4-03F7	Control Allowed/Prohibited:	0004-0007
3	MV:	03EC-03EF	Auto/Manual control:	0010-0013
4	SV:	03F0-03F3	Manual control MV:	0014-0017

(4) Case mounting

- ① Hook the case on the lower part ① of this instrument.
- ② Mount the case so that the lower part ① of this instrument is the fulcrum and covers the release lever. There is a clicking sound.

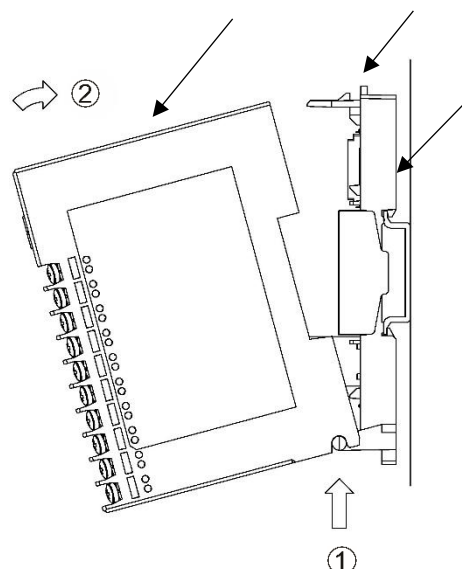


(Fig. 14.2-4)

14.3 Mounting


Mounting to the DIN rail

- ① Lower the lock lever of this instrument. (The lock lever of this instrument has a spring structure, but if lower it in the direction of the arrow until it stops, it will be locked in that position.)
- ② Hook the part ② of this instrument onto the top of the DIN rail.
- ③ Insert the lower part of this instrument with the part ② as a fulcrum.
- ④ Raise the lock lever of this instrument.

Make sure it is fixed to the DIN rail.

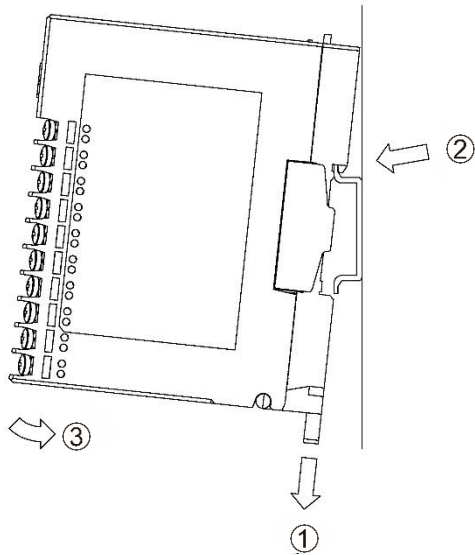


(Fig. 14.3-1)

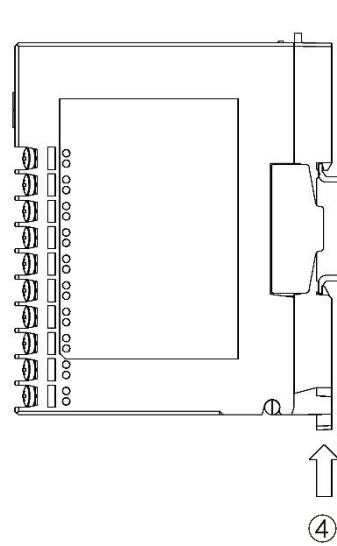

(Fig. 14.3-2)

Removal from the DIN rail

- ① Insert a flat blade screwdriver into the lock lever of this instrument and lower the lock lever until it stops.
- ② Remove this instrument from the DIN rail by lifting it from below.

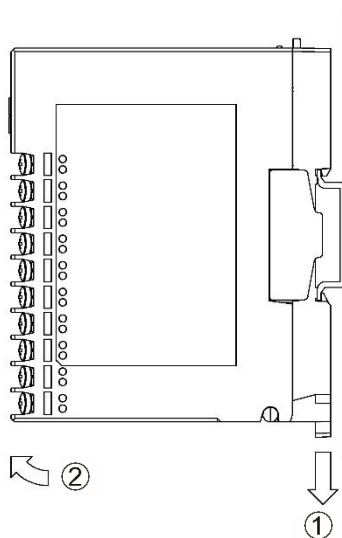

(Fig. 14.3-3)


14.4 Wiring

14.4.1 Wiring for Power Supply and Communication

The terminal block for power supply and communication is located on the base of this instrument. Wiring by the following procedure.



(1) Case removal

- ① Push the release lever on the top of this instrument to unlock it.
- ② Remove the case.

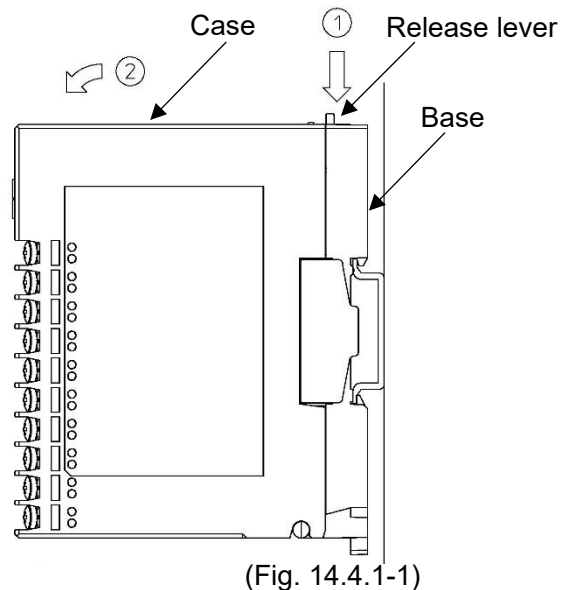


(2) Wiring

CUnet communication

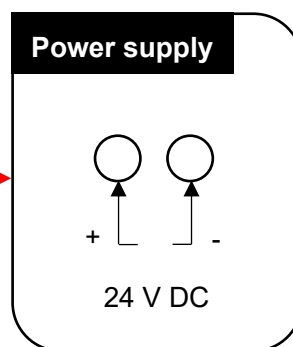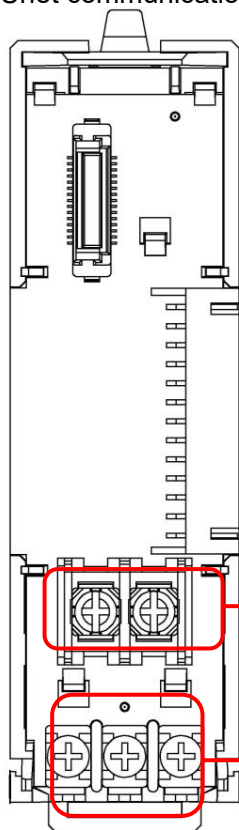

Caution

- Do not confuse the polarities.
- Use the ring-type solderless terminal.
- The tightening torque should be 0.5 N•m.

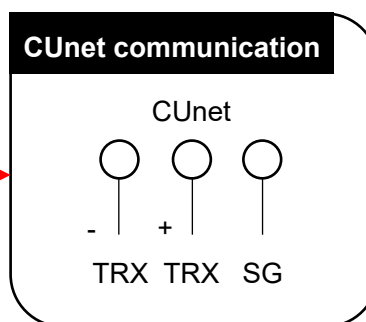

Caution


- Use the ring-type solderless terminal.
- The tightening torque should be 0.3 N•m.

Refer to “14.4.4 Wiring Example of CUnet Communication Line (P.14-11)” for CUnet communication wiring.

(Fig. 14.4.1-2)


(3) Case mounting

- ① Hook the case on the lower part ① of this instrument.
- ② Mount the case so that the lower part ① of this instrument is the fulcrum and covers the release lever. There is a clicking sound.

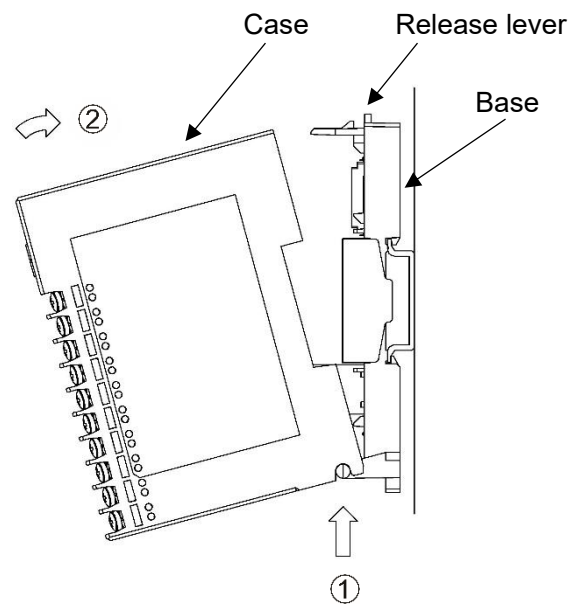

(Fig. 14.4.1-3)


14.4.2 Wiring for Input and Output

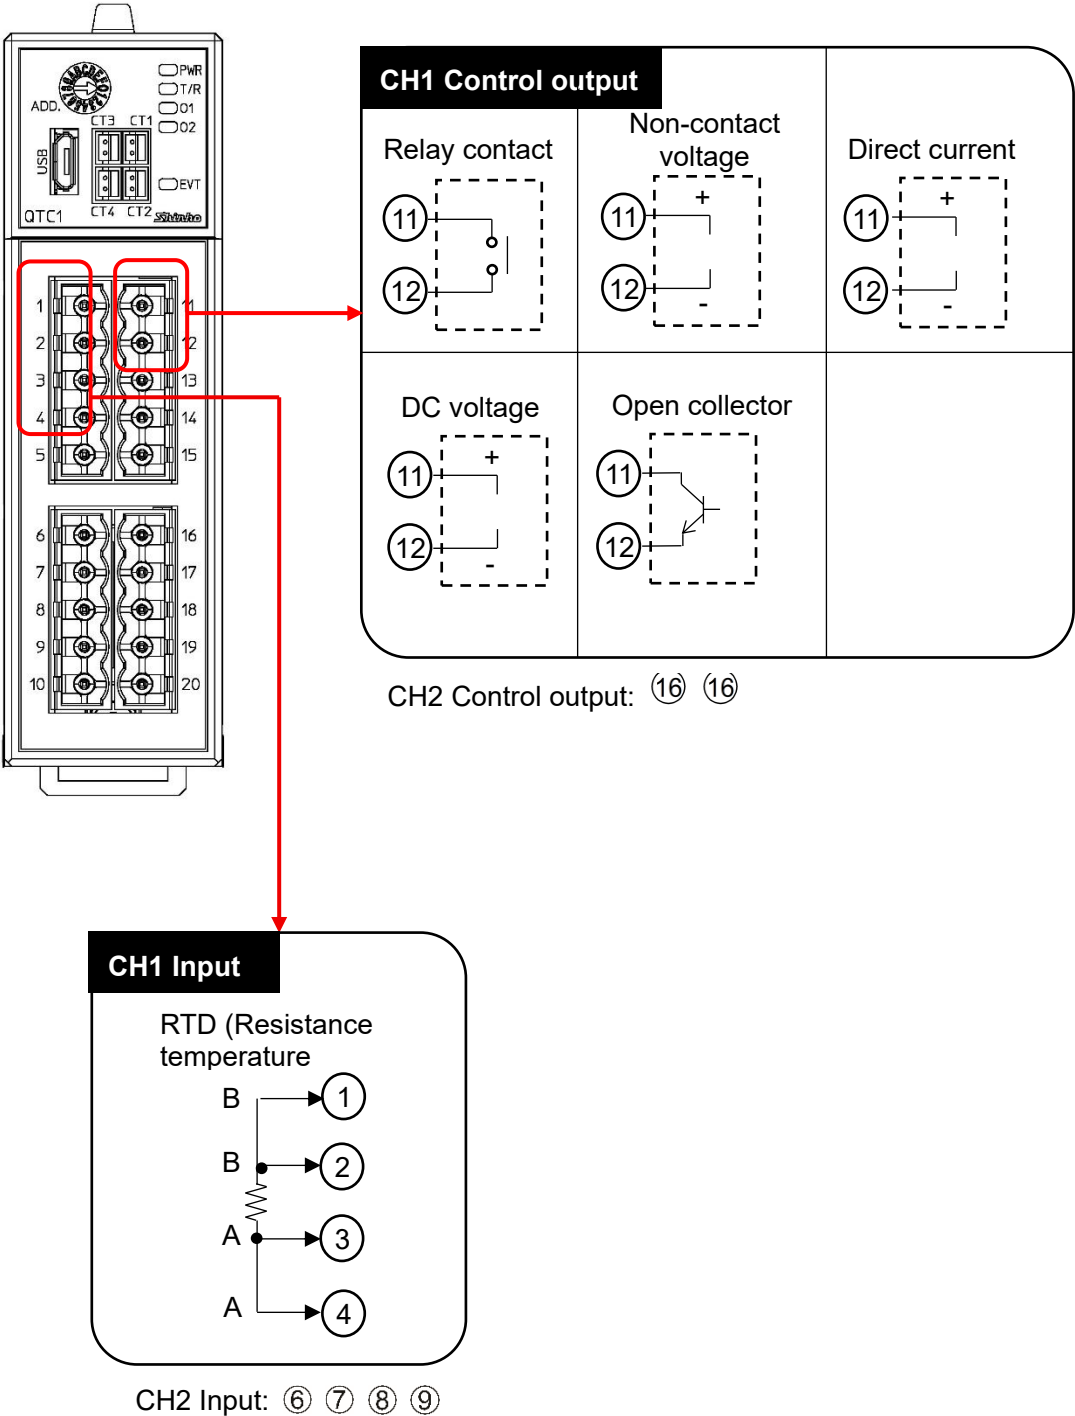

(Fig. 14.4.2-1)


14.4.3 Wiring for CT

Single phase

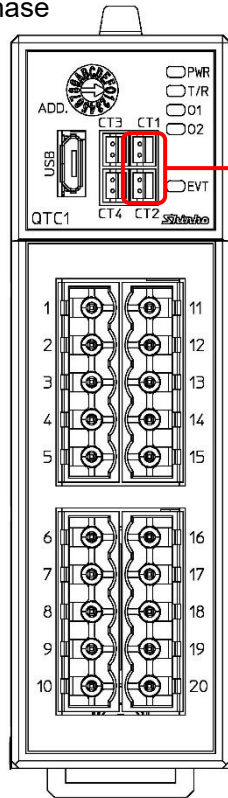


CT input (single phase)

CH1 heater burnout alarm CT1 input: CT1 or CT3

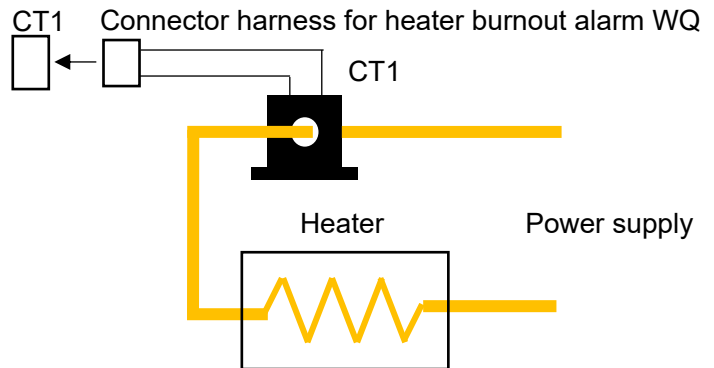


CH2 heater burnout alarm CT1 input: CT2 or CT4

For 3-phase

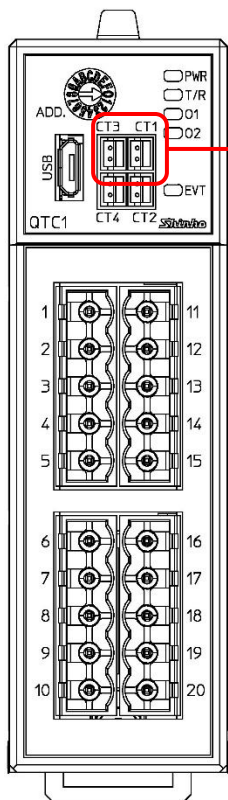

CT input (3-phase)

CH1 heater burnout alarm CT1 input: CT1, CT2 input: CT3

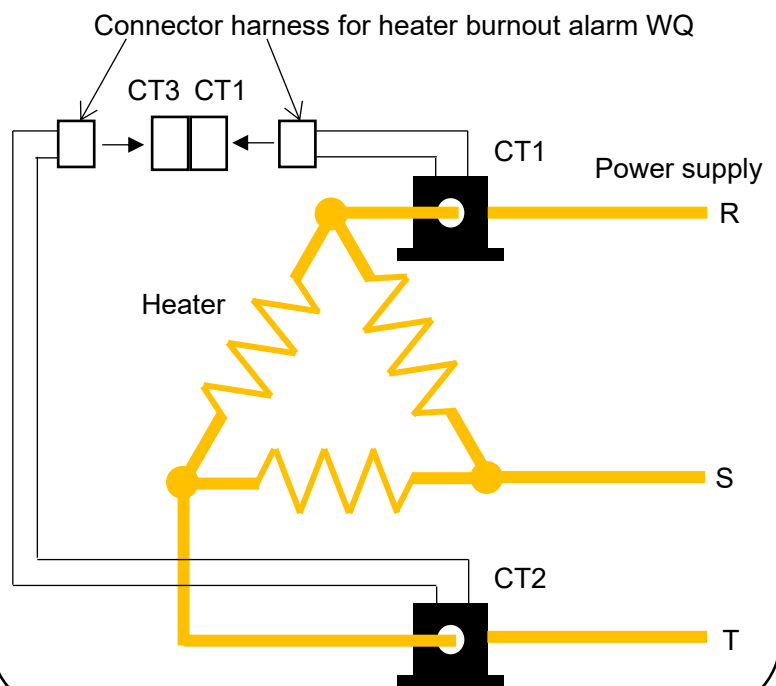

CH2 heater burnout alarm CT1 input: CT2, CT2 input: CT4


(Fig. 14.4.3-1)

14.4.4 Wiring Example of CUnet Communication Line

Connect the LAN cable between the upper system (master) and this instrument.

Recommended cable: LAN cable (straight cable) / Category 5 or higher shielded cable

Install a 100 Ω terminator [RES-S07-100 (optional)] on the last unit in the communication line.

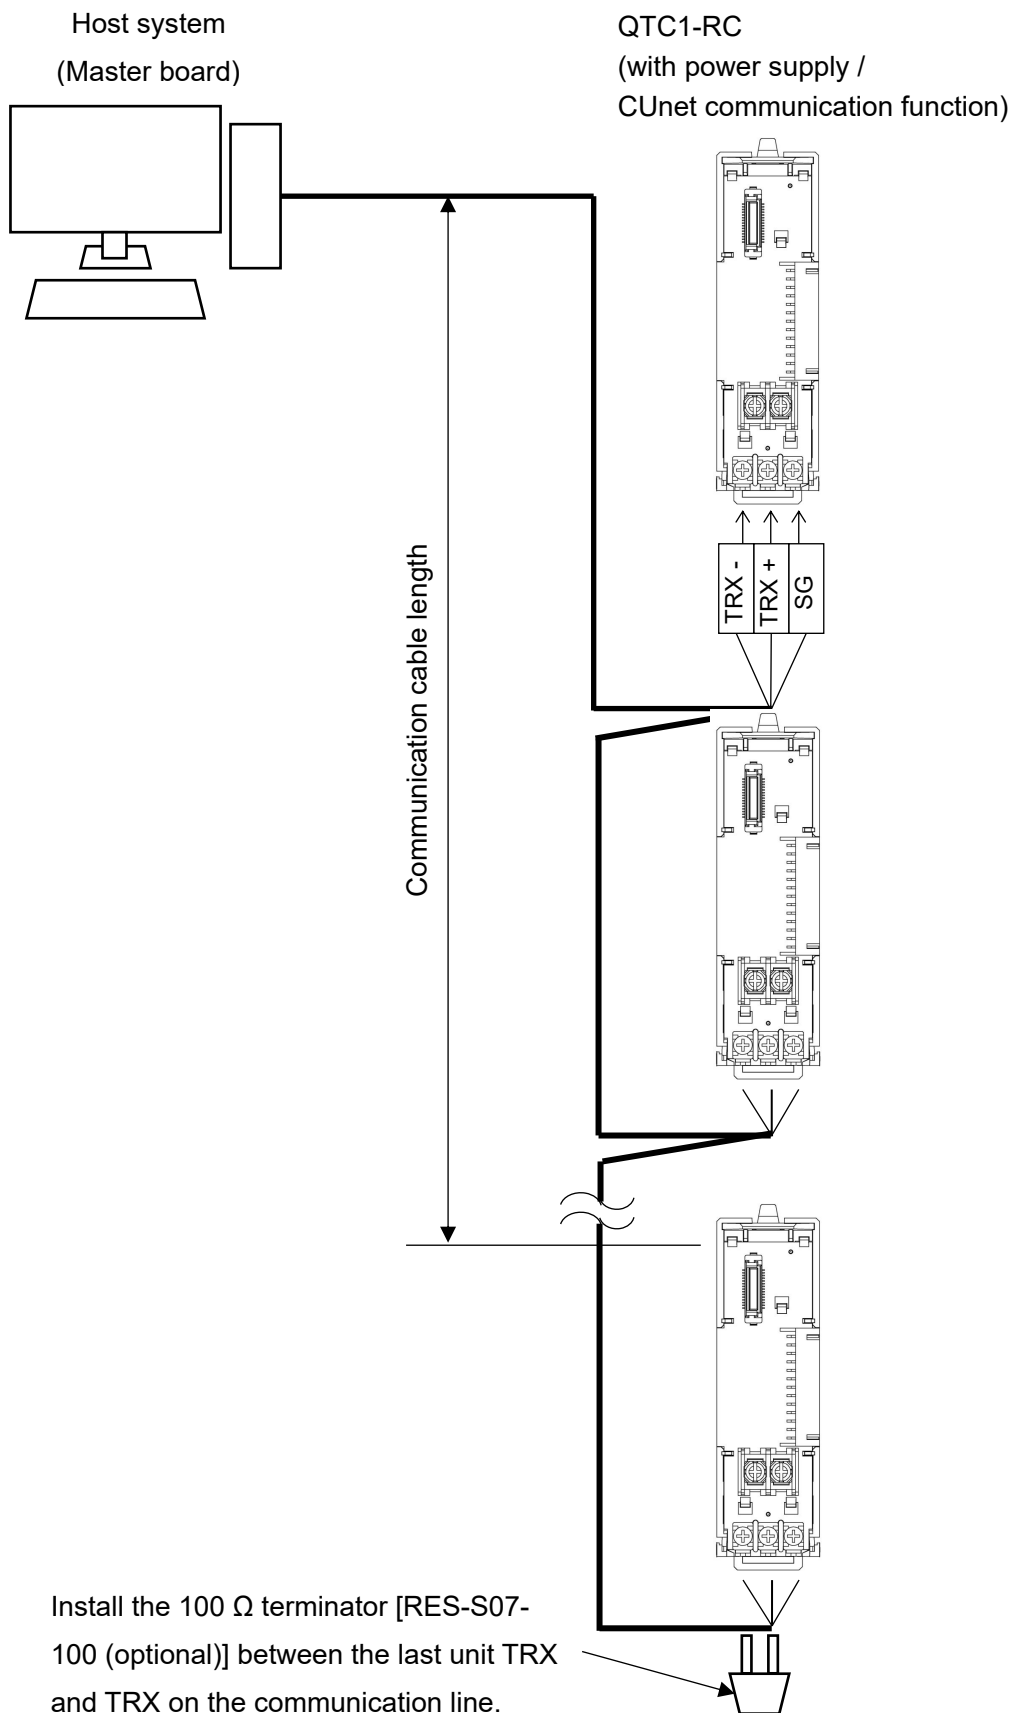

(Fig. 14.4.4-1)

The communication cable length is the total length of the communication cable from the upper system (master) to the last unit, and varies depending on the communication speed.

The communication cable length can be extended by inserting a dedicated HUB for CUNet.

Communication speed	Communication cable length		
	No HUB	HUB 1-deck	HUB 2-deck
12 Mbps	100 m	200 m	300 m
6 Mbps	200 m	400 m	600 m
3 Mbps	300 m	600 m	900 m

14.5 Global Memory (GM)

The memory space where memory data is shared is called global memory (GM).

The size of global memory (GM) is 512 bytes and is divided into 64 areas in 8-byte units corresponding to station addresses (SA).

The addresses in global memory (GM) correspond to station addresses (SA).

Station addresses (SA)	Global memory (GM)
00(0x00)	000H to 007H
01(0x01)	008H to 00FH
02(0x02)	010H to 017H
63(0x3F)	1F8H to 1FFH

The basic unit of the amount of data that can be written to global memory (GM) by one station is 8 bytes.

- Station 00 (0x00) writes data in the 000H to 007H area of the global memory (GM).
- Station 63 (0x3F) writes data in the 1F8H to 1FFH area of the global memory (GM).

All stations can read all areas of the global memory (GM).

- All units can read the 000H to 007H area of the global memory (GM) to obtain the data written by the 00 (0x00) station.
- All units can read the 1F8H to 1FFH area of the global memory (GM) to obtain the data written by the 63 (0x3F) station.

14.6 Software

CUNet master board and software are required for CUNet communication.

Using the software, the CUNet communication status and the input/output status of the unit can be controlled on the PC screen.

	Manufacturer	Model name
CUNet master board	StepTechnica Co., Ltd.	CU-43USB
Software	StepTechnica Co., Ltd.	ASSIST-CU

14.7 Global Memory (GM) Map

SA: Station Address

GM: Global Memory

DOSA: Data Output Station Address

(1) Number of occupied (OWN) items: 1 item

SA	GM+0	GM+2	GM+4	GM+6
16bit signed	PV (CH1)	PV (CH2)		

DOSA	GM+0	GM+2	GM+4	GM+6
16bit signed	SV setting (CH1)	SV setting (CH2)		

(2) Number of occupied (OWN) items: 2 items

SA	GM+0	GM+2	GM+4	GM+6	GM+8	GM+10	GM+12	GM+14
16bit signed	PV (CH1)	Status Flag 1 (CH1)	PV (CH2)	Status flag 1 (CH2)				

DOSA	GM+0	GM+2	GM+4	GM+6	GM+8	GM+10	GM+12	GM+14
16bit signed	SV setting (CH1)	Control Allowed /Prohibited selection (CH1)	SV setting (CH2)	Control Allowed /Prohibited selection (CH2)				

(3) Number of occupied (OWN) items: 3 items

SA	GM+0	GM+2	GM+4	GM+6	GM+8	GM+10	GM+12	GM+14
16bit signed	PV (CH1)	Status Flag 1 (CH1)	MV (CH1)	PV (CH2)	Status Flag 1 (CH2)	MV (CH2)		
SA	GM+16	GM+18	GM+20	GM+22				
16bit Signed								

DOSA	GM+0	GM+2	GM+4	GM+6	GM+8	GM+10	GM+12	GM+14
16bit signed	SV setting (CH1)	Control Allowed /Prohibited selection (CH1)	Auto/ Manual control selection (CH1)	SV setting (CH2)	Control Allowed /Prohibited selection (CH2)	Auto/ Manual control selection (CH2)		
DOSA	GM+16	GM+18	GM+20	GM+22				
16bit Signed								

(4) Number of occupied (OWN) items: 4 items

SA	GM+0	GM+2	GM+4	GM+6	GM+8	GM+10	GM+12	GM+14
16bit signed	PV (CH1)	Status Flag 1 (CH1)	MV (CH1)	SV (CH1)	PV (CH2)	Status Flag 1 (CH2)	MV (CH2)	SV (CH2)
SA	GM+16	GM+18	GM+20	GM+22	GM+24	GM+26	GM+28	GM+30
16bit signed								

DOSA	GM+0	GM+2	GM+4	GM+6	GM+8	GM+10	GM+12	GM+14
16bit signed	SV setting (CH1)	Control Allowed /Prohibited selection (CH1)	Auto/ Manual control selection (CH1)	Manual MV setting (CH1)	SV setting (CH2)	Control Allowed /Prohibited selection (CH2)	Auto/ Manual control selection (CH1)	Manual MV setting (CH2)
DOSA	GM+16	GM+18	GM+20	GM+22	GM+24	GM+26	GM+28	GM+30
16bit Signed								

When setting by CUnet communication, please set within the range of the module.

The data out of the setting range will be invalid.

For items not covered by global memory (GM), set them in the console software of each module or via e-mail communication.

14.8 Attached Function

Automatic recognition function of connection modules

At power-on, the configuration of connected modules is checked and the data of modules whose connection is recognized is expanded in global memory (GM).

15 Action Explanation

15.1 Control Action Explanation

With the control action selection, any control type can be selected from 2 DOF PID control, Fast-PID control, Slow-PID control, ON-OFF control, or Gap-PID control.

The control action selection can be selected only when control prohibited.

When the integration time is set to 0 or 0.0, Slow-PID control cannot be selected.

Optimum control is possible by selecting the control type according to the intended use and process.

The factory default settings of the control parameters when switching the control type are shown below.


Control parameter \ Control type	2 DOF PID control	Fast-PID control	Slow-PID control	ON-OFF control	Gap-PID control
Proportional band	No update	No update	No update	No update	No update
Integral time	No update	No update	No update	No update	No update
Derivative time	No update	No update	No update	No update	0
Proportional gain 2 DOF coefficient (α) (*1)	0.40	1.00	1.00	1.00	1.00
Integral 2 DOF coefficient (β) (*1)	1.35	1.00	1.00	1.00	1.00
Derivative 2 DOF coefficient (γ , Cd) (*2)	0.00	0.00	0.00	0.00	1.00
Desired value proportional coefficient (Cp) (*2)	1.00	1.00	0.00	1.00	1.00

(*1): Do not change anything other than 2 DOF PID control.

(*2): Do not change.

Rising characteristics / Disturbance characteristics


The rising and disturbance characteristics of 2 DOF PID control, Fast-PID control, and Slow-PID control are shown below.

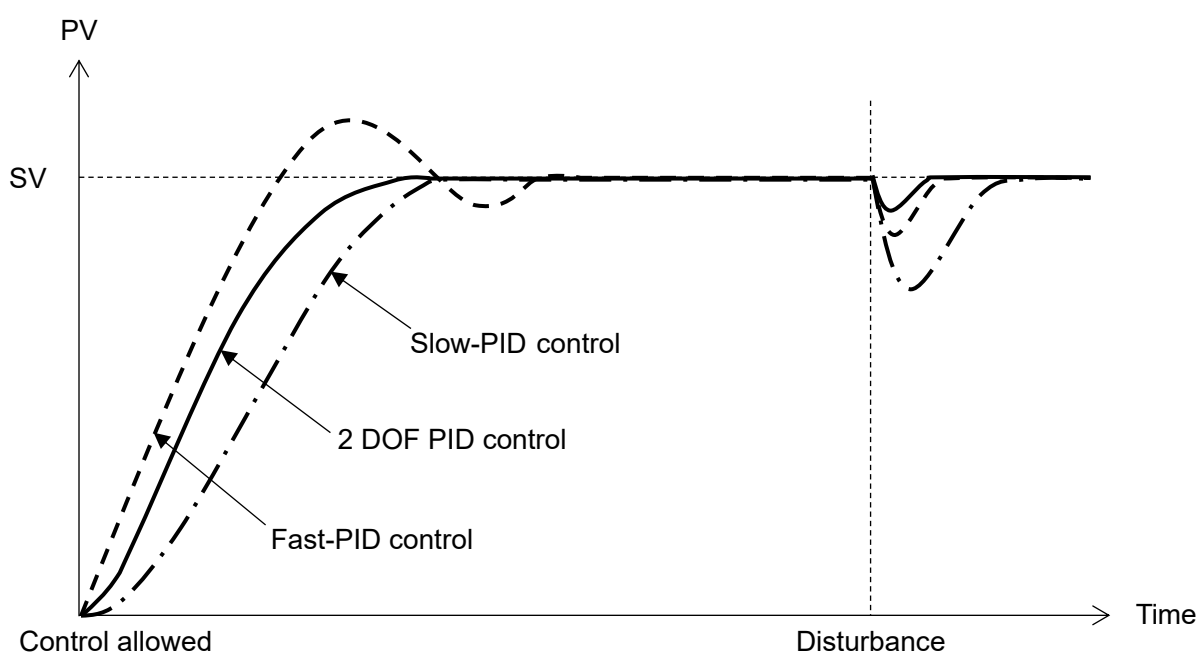

(Fig. 15.1-1)

Target value tracking / Disturbance suppression

The characteristic maps for target value tracking and disturbance suppression of 2 DOF PID control, Fast-PID control, and Slow-PID control are shown below.

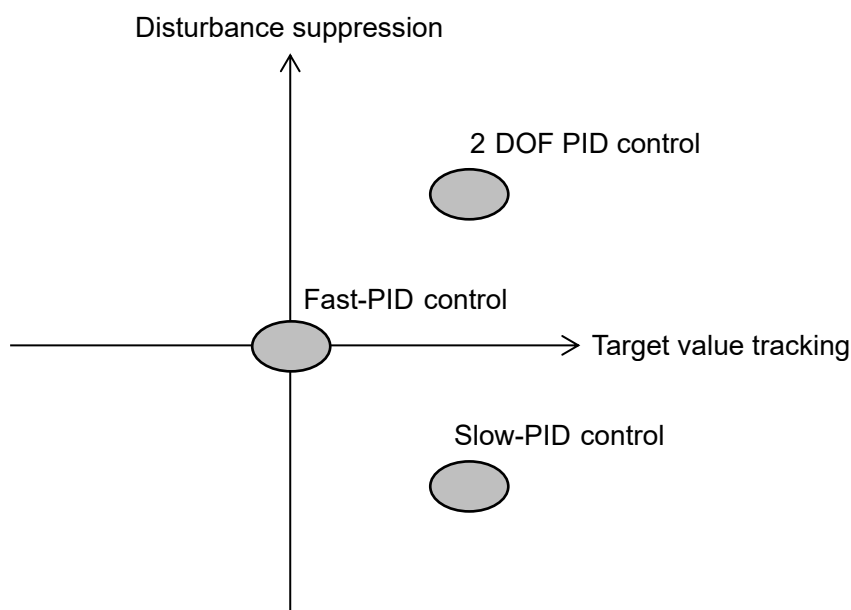

(Fig. 15.1-2)

The number of main control parameters used in control type is shown below.

Control type	Main control parameter
2 DOF PID control	6 [Proportional band, Integral time, Derivative time, Proportional gain 2 DOF coefficient (α), Integral 2 DOF coefficient (β), Proportional cycle]
Fast-PID control	4 [Proportional band, Integral time, Derivative time, Proportional cycle]
Slow-PID control	4 [Proportional band, Integral time, Derivative time, Proportional cycle]
ON-OFF control	1 [ON/OFF hysteresis]
Gap-PID control	6 [Proportional band, Integral time, Derivative time, Proportional cycle, Gap width, Gap coefficient]

15.1.1 2 DOF PID Control

The 2 DOF PID control is control type that achieves both “following characteristics when SV is changed” and “disturbance suppression”.

The 2 DOF means that the above two characteristics can be adjusted independently.

“Following characteristics when SV is changed” is adjusted by proportional gain 2 degrees of freedom coefficient (α) and integral 2 degrees of freedom coefficient (β), and “disturbance suppression” is adjusted by proportional band, integral time and derivative time.

The table below shows the relationship between response speed, overshoot/undershoot, and steady state arrival time depending on the settings of Proportional gain 2 DOF coefficient (α) and Integral 2 DOF coefficient (β).

	When Proportional gain 2 DOF coefficient (α) is increased	When Integral 2 DOF coefficient (β) is increased
Response speed	Become fast	
Overshoot / Undershoot	Become large	Become small
Steady state arrival time		Become slow

The Proportional gain 2 DOF coefficient (α) and the Integral 2 DOF coefficient (β) have set up the optimal value as a factory default value in the usual control.

15.1.2 Fast-PID Control

The Fast-PID control is a general control type for fixed value control.

15.1.3 Slow-PID Control


The Slow-PID control is a control type that is effective for processes that do not want to generate overshoot or for processes in which PV does not easily drop once PV exceeds SV.

15.1.4 ON-OFF Control

The control output is turned on when PV is lower than SV, and the control output is turned off when PV exceeds SV.

Overshoot, undershoot, and hunting will occur.

The ON-OFF control is suitable for processes that do not require accuracy.

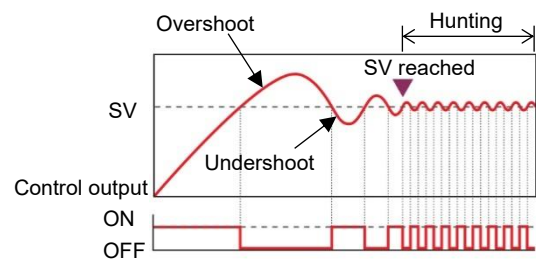

(Fig. 15.1.4-1)

Overshoot / Undershoot

As shown in (Fig. 15.1.4-1), if the temperature of the controlled object rises, it may exceed SV significantly. This is called overshoot.


Also, lowering the temperature from the SV is called undershoot.

Hunting

As shown in (Fig. 15.1.4-1), it means the state when the control result becomes oscillatory.

15.1.5 Gap-PID Control

If the PV is noisy or the operating part has hysteresis, a slight fluctuation may continue near the deviation of zero. In such a case, the dead zone is usually used, but since control is not performed within the dead zone, PV changes during a disturbance.

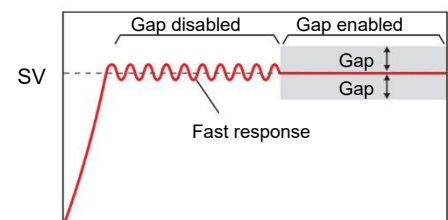

(Fig. 15.1.5-1)

It is suitable for fast response processes such as flow rate and valves.

15.1.6 PID Control Parameters


P control, PI control, PD control or deviation PID control can be performed by setting the PID control parameter.

(1) P control

When the integral time and derivative time are set to 0, P control is performed.

P control is a control operation that outputs a manipulated variable proportional to the deviation between SV and PV within the proportional band.

Control output is ON until PV reaches point A. When it exceeds this (when it enters the proportional band), the control output starts to turn ON/OFF in the proportional cycle, and when it exceeds SV, the control output turns OFF.

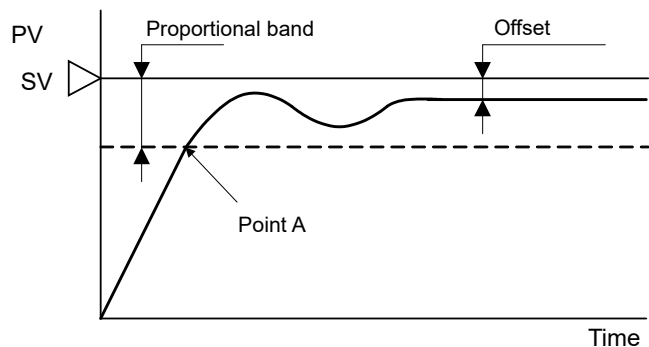

(Fig. 15.1.6-1)

As the temperature rises from point A to SV, the control output ON time becomes shorter and the OFF time becomes longer. Compared to ON-OFF control, overshoot is eliminated and hunting is reduced, but offset occurs.

P control is suitable for processes with no dead time such as gas pressure control and level control.


- When the proportional band is reduced, the control output turns ON/OFF from around SV, so the time until the PV temperature rises to SV becomes shorter and the offset becomes smaller, but hunting becomes larger.
If the proportional band is made extremely small, the control will be similar to the ON-OFF control.
- When the proportional band is increased, the control output turns ON/OFF from a temperature considerably lower than SV, so overshoot and hunting are reduced, but it takes time for PV to rise to SV, and also for SV and PV. The offset will also increase.

(2) PI control

When the derivative time is set to 0, PI control is performed.

In PI control, the offset generated by P control is automatically corrected by the integral action, and temperature control is performed with SV. However, it takes time for the temperature to stabilize even if the temperature changes rapidly due to disturbance.

PI control is suitable for temperature control, which changes slowly.

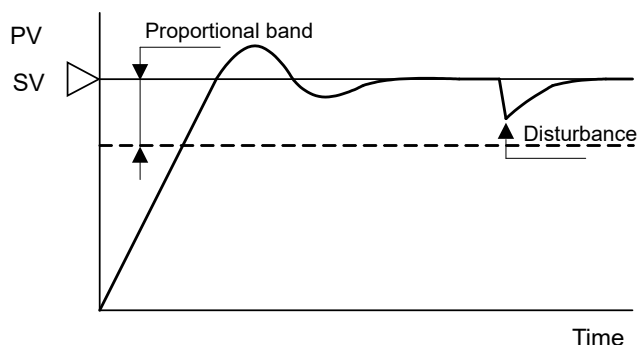

(Fig. 15.1.6-2)


- If the integral time is too short, the integral action will be strong and the offset can be corrected in a short time, but this may cause hunting with a long cycle.
- If the integral time is too long, the integral action will be weak and it will take time to correct the offset.

(3) PD control

When the integral time is set to 0, PD control is performed.

Compared to P control, PD control has a quicker response to rapid temperature changes due to disturbances, stabilizes control in a short time, and improves transient response characteristics.

PD control is suitable for temperature control with fast changing speed.

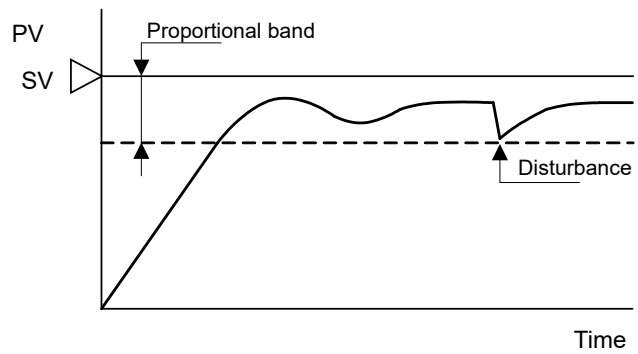

(Fig. 15.1.6-3)

- Decreasing the derivative time weakens the derivative action and delays the response to rapid temperature changes. Also, since the function of suppressing a rapid temperature rise is weakened, the temperature rise time up to SV is shortened, but overshooting tends to occur correspondingly.
- Increasing the derivative time strengthens the derivative action, resulting in faster response to rapid temperature changes. Also, since the function of suppressing a sudden temperature rise becomes stronger, the temperature rise time to SV becomes slower, but overshooting is less likely to occur.

(4) Deviation PID control




Caution

The proportional gain 2 DOF coefficient (α) and the derivative 2 DOF coefficient (γ , Cd) must be set only when using deviation PID control.

For other controls, do not change The proportional gain 2 DOF coefficient (α) and the derivative 2 DOF coefficient (γ , Cd).

When the Fast-PID control is selected in the control action selection and the proportional gain 2 DOF coefficient (α) is set to 1.00 and the derivative 2 DOF coefficient (γ) is set to 1.00, the deviation PID control is performed. The feature of deviation PID control is that only the response after SV change is fast.

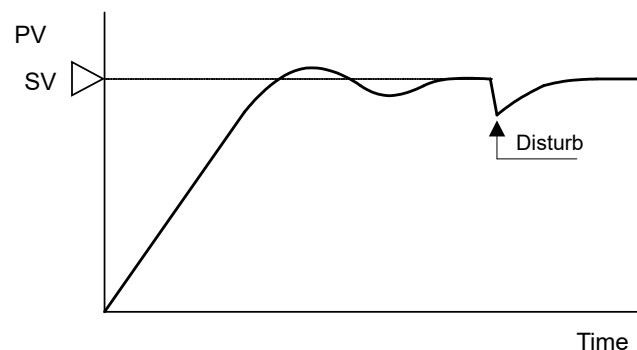

(Fig. 15.1.6-4)

It is suitable for program control and cascade control using the SV rise rate and SV fall rate. It is not suitable for processes that cannot accept sudden changes in MV.

15.2 Standard Function

15.2.1 Control Range

If the control range below is exceeded, the control output will turn OFF.

Input range low limit – 5.000°C to Input range high limit + 5.000°C

15.2.2 Integral/Derivative Decimal Point Position

By changing the decimal point position in the integration time and differentiation time settings, you can select the time unit to be set. When the decimal point position is set to 1-second increments, changing it will multiply the current setting value by 0.1. Changing the decimal point position for 0.1-second increments will automatically convert the current setting value to 10 times its original value. However, if changing the decimal point position causes the setting to fall outside the valid range, it will be limited to the upper or lower limit of the respective setting range.

15.2.3 MV Bias

When performing control, an offset may occur without reaching SV.

In such a case, it is a function that can be added to MV.

Setting range

0.0 to 100.0% (Factory default: 0.0%)

15.2.4 Control action selection when input error

The user can select whether to continue the control operation when the input becomes an input error, overscale, or underscale, or whether to output the fixed operation amount set in the input error operation amount setting.

Setting range

0: Input error operation setpoint

0.0 to 100.0 % (for DC current output and DC voltage output: -5.0 to 105.0 %)

1: Control operation continues


15.2.5 Output Minimum ON/OFF Time

When the MV is other than 0% or 100%, the output can be turned ON or OFF without depending on the MV by setting the output minimum ON/OFF time. However, when the auto balance control function is selected, it becomes invalid.

Setting range


0 to 1000 ms (Factory default: 0 ms)

When output is ON

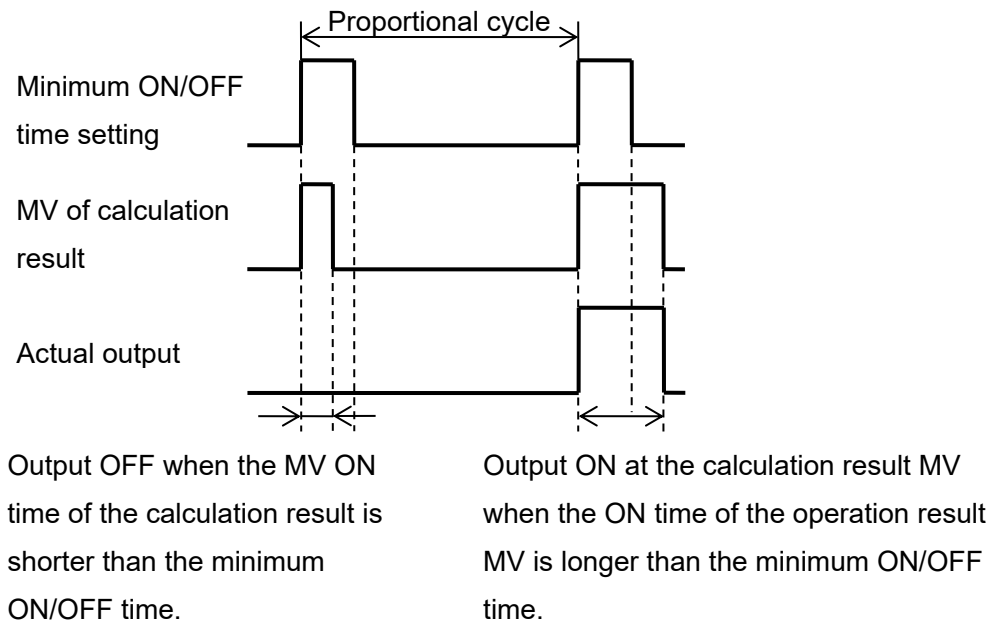

(Fig. 15.2.5-1)

When output is OFF

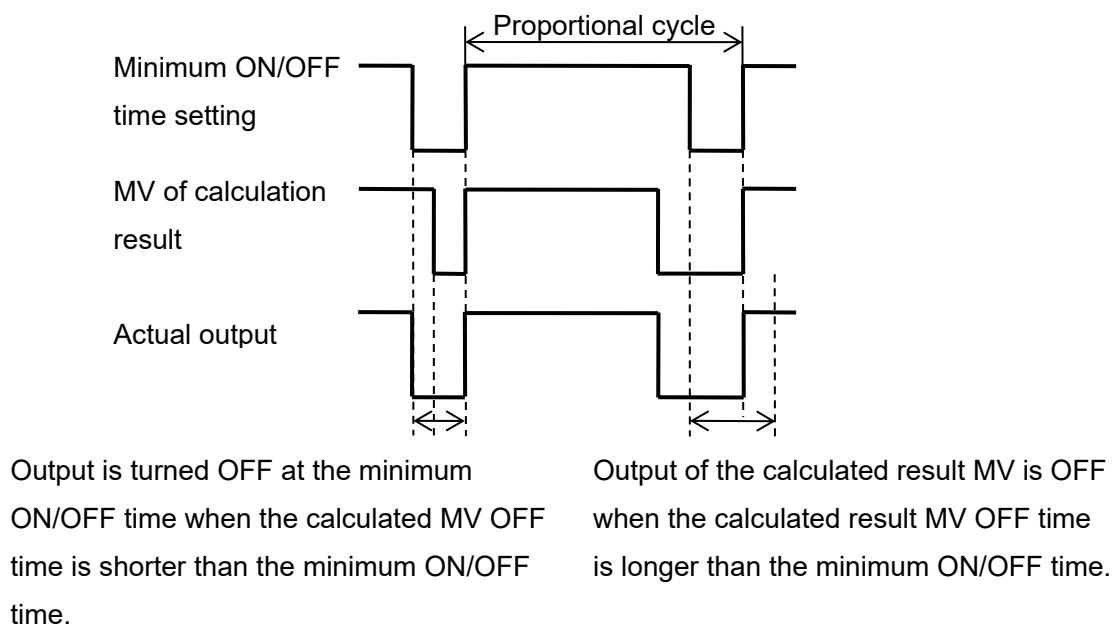

(Fig. 15.2.5-2)

15.2.6 Alarm Output

For Alarm output, the alarm value is set by $\pm$ deviation from the SV (excluding Process alarm), and if the input goes outside the range, the Alarm output is turned ON (turned OFF for High/Low limit range alarm).

Select High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limit s range alarm, Process High alarm, Process Low alarm, High limit with standby alarm, Low limit with standby alarm, High/Low limits alarm with standby alarm, High/Low limits alarm individually, High/Low limit s range alarm individually, High/Low limits alarm with standby individually or No action.

Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)” for detail of alarm action.

Alarm value 0 Enable/Disable selection

When the alarm value is 0, select whether to enable or disable the alarm value.

If select enabled, set the alarm value to 0 in High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limit s range alarm, High limit with standby alarm, Low limit with standby alarm, High/Low limits alarm with standby alarm, High/Low limits alarm individually, High/Low limits range alarm individually and High/Low limits alarm with standby individually to activate the alarm action.

15.2.7 Loop Break Alarm

Detects actuator trouble (heater burnout, sensor burnout).

When control action is Reverse action

When the PV does not rise above the loop break alarm action width setting within the loop break alarm time, even if MV reaches 100% or the output high limit, the loop break alarm is activated.

When the PV does not fall above the loop break alarm action width setting within the loop break alarm time, even if MV reaches 0% or the output low limit, the loop break alarm is activated.

When control action is Direction action

When the PV does not fall above the loop break alarm action width setting within the loop break alarm time, even if MV reaches 100% or the output high limit, the loop break alarm is activated.

When the PV does not rise above the loop break alarm action width setting within the loop break alarm time, even if MV reaches 0% or the output low limit, the loop break alarm is activated.

Loop break alarm time setting:	0 to 200 min
Loop break alarm action width setting:	0.000 to 15.000°C
Output:	Event output allocated via status flag or event output allocation selection

15.2.8 Set Value Ramp Function

When the SV is changed, control proceeds from the previous SV to the new SV at the set change rate.

When control is permitted, control proceeds from the current PV to the SV.

SV rise rate setting: Temperature input 0.000 to 10.000 °C/min

SV fall rate setting: Temperature input 0.000 to 10.000 °C/min

(Both rise and fall rates are factory-set to 0. However, setting either to 0 disables this function.)

15.2.9 Power On Restore Action

When the power is turned on, select whether to resume in the continuous state (state before turning off the power) or in the stopped state.

	Power-on restore action selection			
	0: Stopped state (Return to automatic control)		1: Continuous state (Return to automatic control)	
	Control allowed	Control prohibited	Control allowed	Control prohibited
Auto control	Auto control Control stop	Auto control Control prohibited	Auto control Control allowed	Auto control Control prohibited
Manual control	Auto control Control stop	Auto control Control prohibited	Auto control Control allowed	Auto control Control prohibited

	Power-on restore action selection			
	2: Stopped state (Return to previous state)		3: Continuous state (Return to previous state)	
	Control allowed	Control prohibited	Control allowed	Control prohibited
Auto control	Auto control Control stop	Auto control Control prohibited	Auto control Control allowed	Auto control Control prohibited
Manual control	Manual control Control stop	Manual control Control prohibited	Manual control Control allowed	Manual control Control prohibited

15.2.10 Non-volatile IC Memory Data Save

Select whether to allow or prohibit saving data to the non-volatile IC memory.

If you select save prohibition, can temporarily change all the set values, but if turn the power off and then on, it will return to the value before selecting save prohibition.

15.2.11 Auto/Manual Control Switching

Switches between automatic control and manual control.

When switching from automatic control to manual control or from manual control to automatic control, the balanceless bumpless function prevents sudden changes in MV.

MV can be set arbitrarily by switching to manual control. (*)

Manual control MV setting range: -5.0 to 105.0 %

However, if power is cycled while manual control is selected, the system will resume with the control operation selected in the power-on recovery action selection.


(*): If the sensor fails in manual control, the MV will be 0%.

15.2.12 Sensor Correction Factor

Set the slope of the sensor input value.

The sensor correction factor setting is calculated by the following formula.

Sensor correction factor setting = $(Y' - X') / (Y - X)$

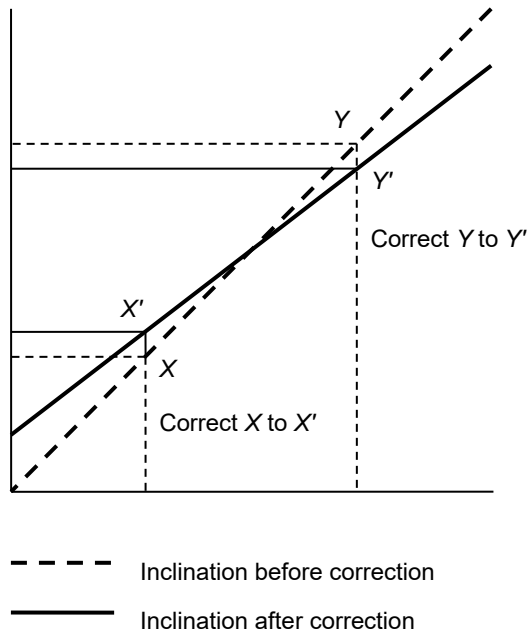

(Fig. 15.2.13-1)

15.2.13 Sensor Correction

If the temperature at the control location and the temperature at the sensor location are different, PV is corrected.

However, it is valid within the input rated range regardless of the sensor correction value.

PV after input correction is expressed by the following formula.

PV after input correction =

Current PV × Sensor correction factor setting value + (Sensor correction setting value)


15.2.14 Output Rate-of-Change Limit

When PV is lower than SV in heat control, the normal output changes from OFF to ON as shown in (Fig. 14.2.15-1), but set the output change rate limit value, the output change rate can be changed as shown in (Fig. 15.2.15-2).

Set the MV that changes for 1 second.

If 0 is set, this function will not work.

It is suitable for controlling high-temperature heaters (components containing molybdenum, tungsten, platinum, etc., used at about 1500 to 1800°C) that will be cut off when electricity is applied rapidly.

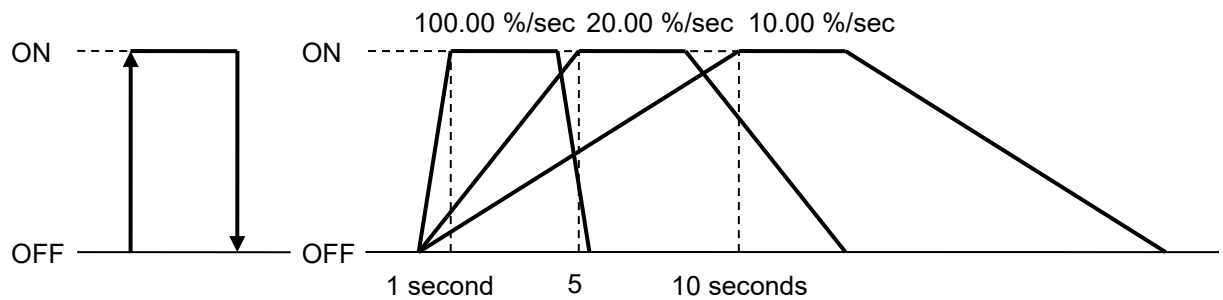

(Fig. 15.2.14-1)

(Fig. 15.2.14-2)

15.2.15 Control Function

Select Standard, Heating/Cooling control, Cascade control or Output selection function, for control function selection.

The control function selection can be selected only when control prohibited.

(1) Heating/Cooling control

The heating/cooling control is a control that is combined with cooling operation when it is difficult to control the temperature control of the controlled object only by heating operation.

The control result calculated according to SV and PV is divided into heating output and cooling output and output.


When PV is larger than SV, cooling output is output.

When PV is smaller than SV, heating output is output.

It is possible to set the band that outputs both heating output and cooling output (overlap), and the band that does not output both (dead band).

Also, the cooling action mode can be selected from Air cooling (Linear characteristics), Oil cooling (1.5th power of the linear characteristic s) or Water cooling (2nd power of the linear characteristic).


The output characteristics are as shown below for cooling MV.

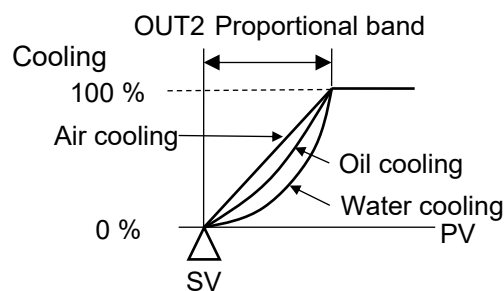

(Fig. 15.2.15-1)

For processes that generate heat (extruders, etc.) and temperature control near room temperature (environmental testers, etc.), heating and cooling control that performs both heating and cooling operations for the controlled object is effective.

When heating/cooling control is selected for CH1 in control function selection, CH1 becomes heating output and CH2 becomes cooling output.

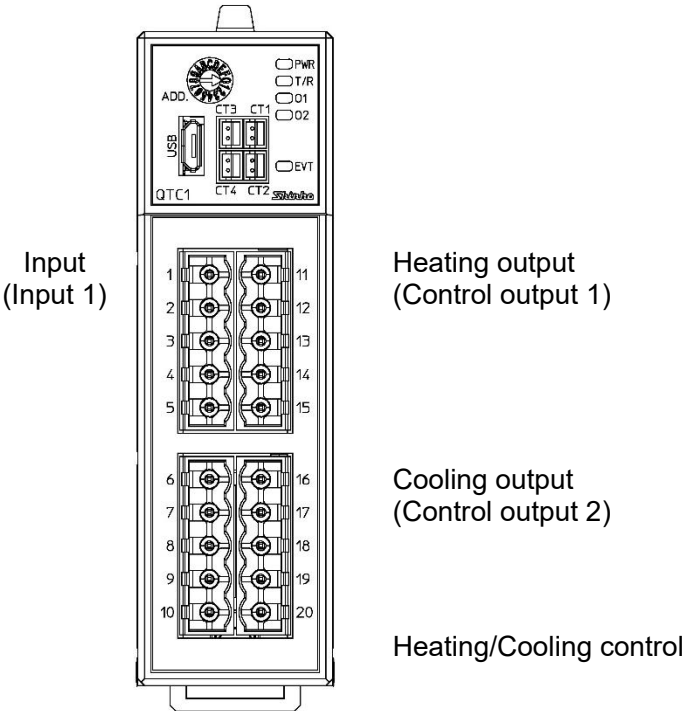

(Fig. 15.2.15-2)


(2) Cascade control

The cascade control is a method of combining two PID controls to form one feedback group and controlling.

This is effective when controlling a control target that has an extremely long delay time or dead time from the change of MV to the measurement of the control target.

Although it takes longer for PV to reach SV, highly stable control is possible.

When the cascade control is selected for CH1 in the control function selection, the cascade control is performed with CH1 as the master and CH2 as the slave.

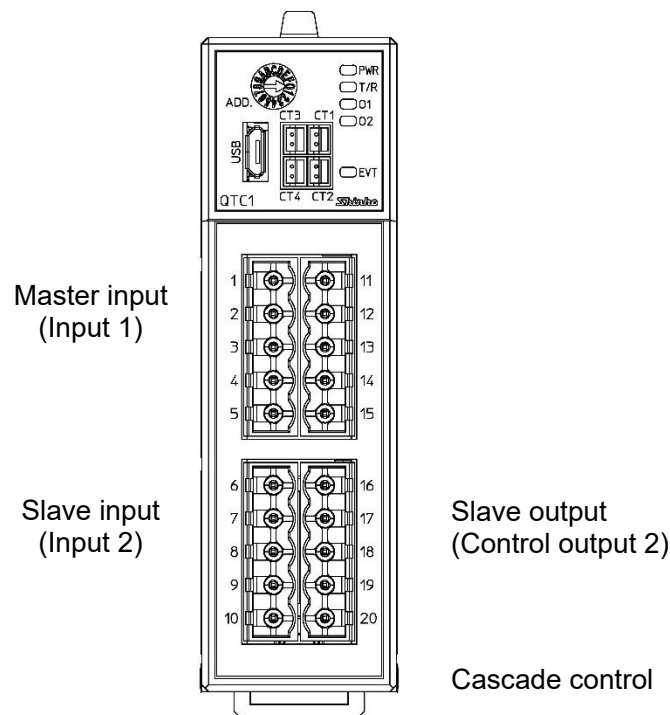

(Fig. 15.2.15-3)

The MV on the master side obtained from the SV on the master side (CH1) and PV is substituted for the SV on the slave side (CH2), and the slave side performs control calculation and controls on the MV on the slave side.

The control output on the master side is OFF (0 mA for current output).


MV (0 to 100%) on the master side is converted according to the setting of slave scale low limit value to slave scale high limit value, and becomes SV on the slave side.

For example, if the slave scale low limit value is 100°C and the slave scale high limit value is 400°C, the master side MV is 0% 100°C, 50% 200°C, 100% 400°C is the SV on the slave side.

It is necessary to design the system so that the control on the slave side has less delay than the control on the master side and a quick control response can be obtained.

(Example)

This is an application that selects the cascade control for CH1 in control function selection, uses CH1 as the master and CH2 as the slave, and adjusts the heat quantity of the heater using the power controller to adjust the temperature of the controlled object.

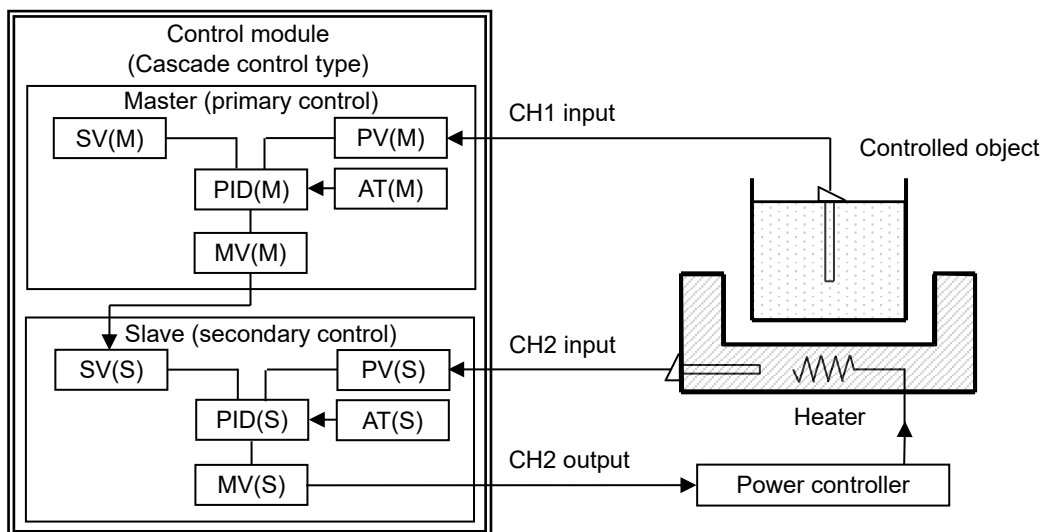

(Fig. 15.2.15-4)

AT for cascade control

Execute AT in cascade control according to the following procedure.

- Slave side (CH2) AT

- ① Set SV (AT point) on slave side (CH2).
- ② Select AT Perform in AT Perform/Cancel on the slave side (CH2).

After AT is completed, each PID setting value on the slave side (CH2) is automatically set.

- Master side (CH1) AT

- ① Set SV on master side (CH1).
- ② Select AT Perform in AT Perform/Cancel on the master side (CH1).


After AT is completed, each PID setting value on the master side (CH1) is automatically set.

Depending on the controlled object, the optimum PID settings may not be obtained.

In such a case, refer to each PID setting value after AT is completed and set manually.


(3) Output selection function

If the used channel fails, the input can be changed to an unused channel and the output location for the input can be selected.

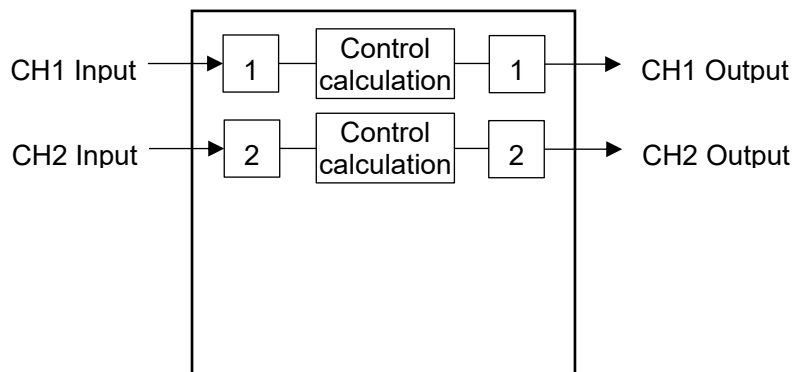


(Fig. 15.2.15-5)

If the input or output fails, you can select the input channel for the output of each channel by selecting the output channel.

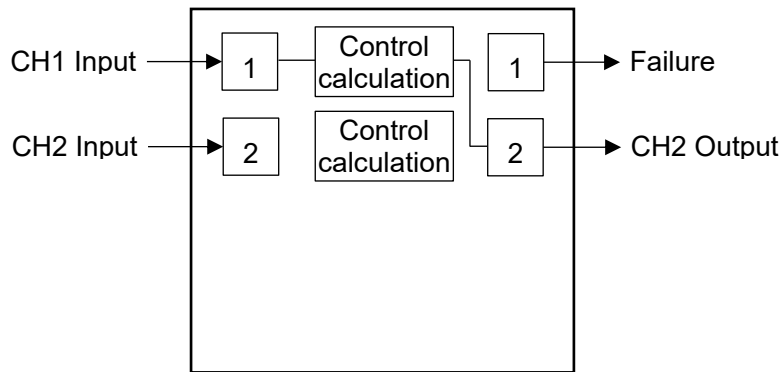

(Fig. 15.2.15-6)

The same output can be output up to 2 points for one input.

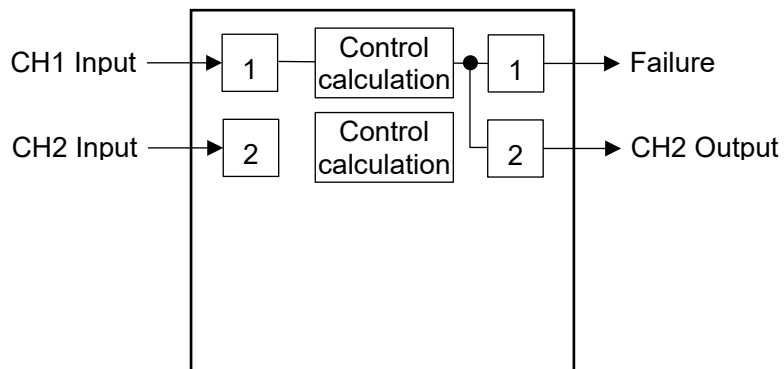

(Fig. 15.2.15-7)

15.3 Extension function

15.3.1 Extension function selection

In the Extension function selection, select "Without expanded function", "Peak power suppression function" or "Auto balance control function".


(1) Peak power suppression function

This function suppresses the peak power value when there is a power limit for the facility.

By setting the total current, power suppression is controlled when the sum of the current values set for each channel is less than or equal to the total current value. However, this function does not work for direct current output and DC voltage output.

The change of each set value is effective only when control is inhibited.

Output timing during peak power suppression function

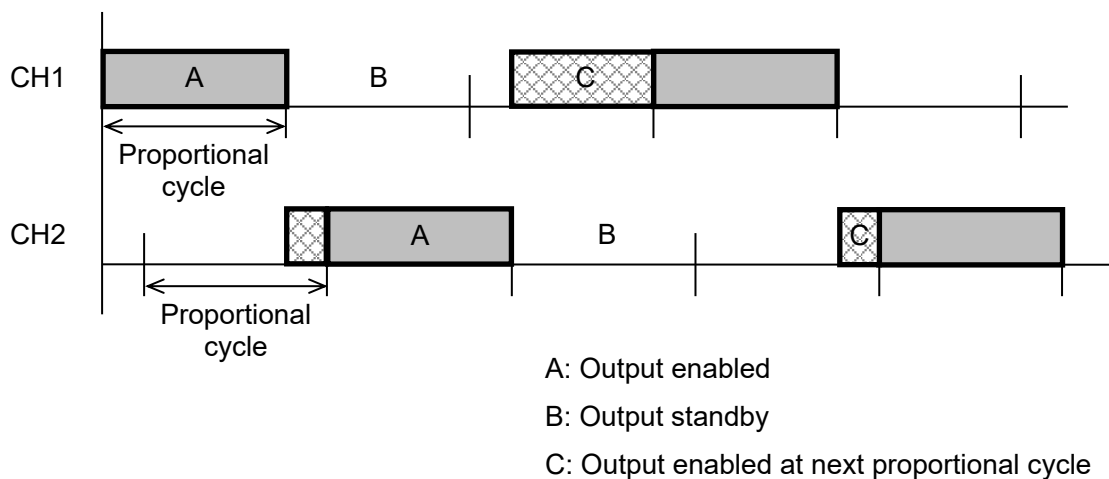

(Fig. 15.3.1-1)

Current judgment

The current value is judged for each proportional cycle of each channel, and the channel that becomes "Control output enabled", "Control output standby", or "Control output enabled at next proportional cycle" is judged.

Conditions for enabling the peak power suppression function

The peak power suppression function will be enabled in the following cases.

- When the input is not the input error, overscale or underscale during control prohibition
- When Control Enable is selected in Control Enable/Prohibited selection

Conditions for disabling the peak power suppression function

The peak power suppression function will be disabled in the following cases.

- When the input is not the input error, overscale or underscale during control prohibition
- When Control Prohibited is selected in Control Enable/Prohibited selection
- When ON/OFF control action is selected in Control action selectiton

AT when the Peak Power Suppression function is enabled

When the peak power suppression function is enabled, the output is allocated so that it does not exceed the total current setting value, so AT cannot be executed because it may exceed the total current setting value if AT is executed.

(2) Auto balance control function

This function suppresses partial burning and mechanical strain by performing soaking on one control target at multiple control points.

Setting procedure of auto balance control

Describes the procedure for auto balance control.

- ① Selection of Module Address
Extension Function Selection (P.8-32)", select module addresses from 1 to consecutive numbers.
- ② Select Auto balance control function in Extension function selection.
- ③ Select Interlock or Alone in Auto balance control interlock/alone selection.
- ④ Select Master channel or Slave channel in Auto balance control master/slave selection.
- ⑤ Select Enabled or Disabled in Auto balance control Enabled/Disabled selection.
- ⑥ Set the number of modules managed by the master module in Number of communication management module setting (when Interlock is selected in Auto balance control interlock/alone selection).
- ⑦ Select Allowed in Control Allowed/Prohibited selection.

Operation explanation of auto balance control

When using the communication expansion module QMC1-C□, QMC1-C□ becomes the master and transfers data between control modules.

When the communication expansion module QMC1-C□ is not used, the control module QTC1-RP (with power supply / communication option) becomes the master, and the master channel and slave channel are selected from the master input channel by auto balance control master/slave selection.

The auto balance control function does not work when the master channel is not selected.

When Enabled is selected for Auto balance control Enabled/Disabled selection, control prohibited is changed to control allowed to start auto balance control.

The slave channels that are allowed to control within 10 seconds from the master channel on which autobalance control was started are the target channels for autobalance control.

Slave channels that have been allowed to control after 10 seconds have passed (during automatic balance control operation) are excluded from normal operation and are controlled normally.

When the auto balance control function operates, the SV of the slave channel heats up according to the PV of the master channel.

If the master channel has an input error, cancel the auto balance control function.

Slave channels that have no input error are individually controlled normally.

The set value ramp function is disabled during auto balance control.


It is also invalid when 2 DOF PID control, Fast-PID control, ON-OFF control or Gap-PID control is selected in control action selection.

When using the auto balance control function, the same input range is used for the inputs that are used for auto balance control.

Slave channel SV of auto balance control

Slave channel SV of auto balance control =

$$\text{Master channel PV} + (\text{Slave channel SV} - \text{Master channel SV})$$

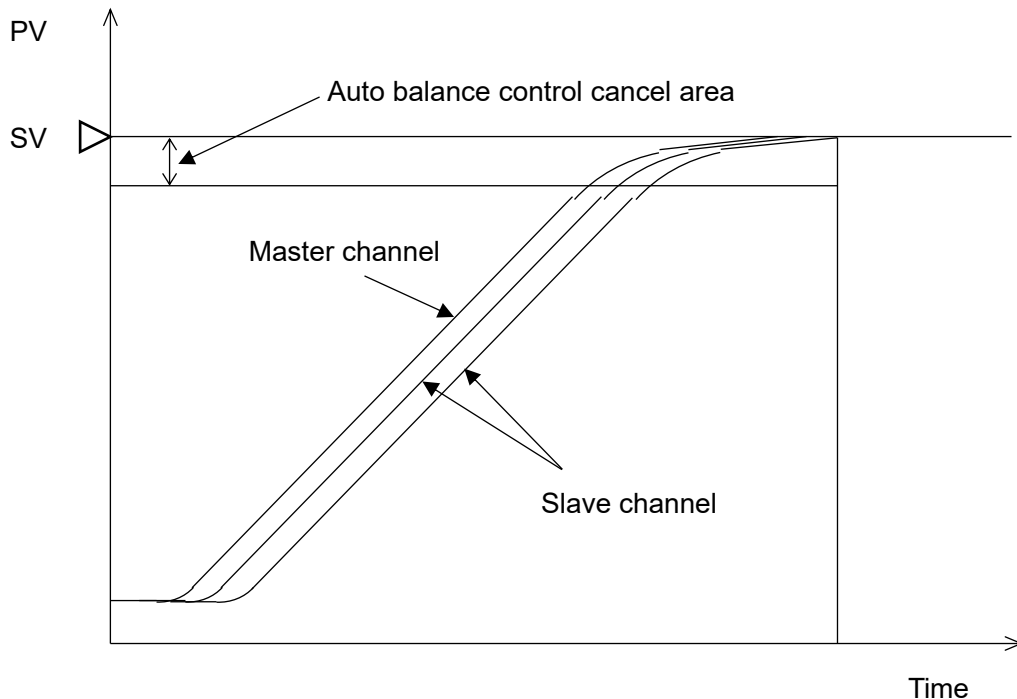

(Fig. 15.3.1-2)

Auto balance control interlock/alone selection

Select whether the auto balance control function is interlock or alone.

Both interlock and alone can be selected within one unit. However, connect the modules for which Interlock is selected continuously for the number of communication management modules.

If the module for which Alone is selected is connected to the modules that are connected in succession, the subsequent modules will not be linked.

- Interlock

Performs the auto balance control between modules.

Auto balance control can be performed as one group within one unit consisting of communication expansion module QMC1-C□ or control module QTC1-RP and control module QTC1-R0.

- Alone


Performs auto balance control within the module.

You can use the channels in the control module for auto balance control.

When select interlock and use control module QTC1-RP

Setting example when 4 channels are used for auto balance control with interlock and 2 channels are used for normal control

	Control module 1 QTC1-RP (with power supply/communication option)		Control module 2 QTC1-R0 (no power supply/communication option)		Control module 3 QTC1-R0 (no power supply/communication option)	
Channel	CH1	CH2	CH1	CH2	CH1	CH2
Auto balance control interlock/alone selection	Interlock		Interlock		Alone	
Auto balance control Enabled/Disabled selection	Enabled	Enabled	Enabled	Enabled	Disabled	Disabled
Auto balance control master/slave selection (input channel No.)	1: CH1 Master channel		0: Slave channel		0: Slave channel	

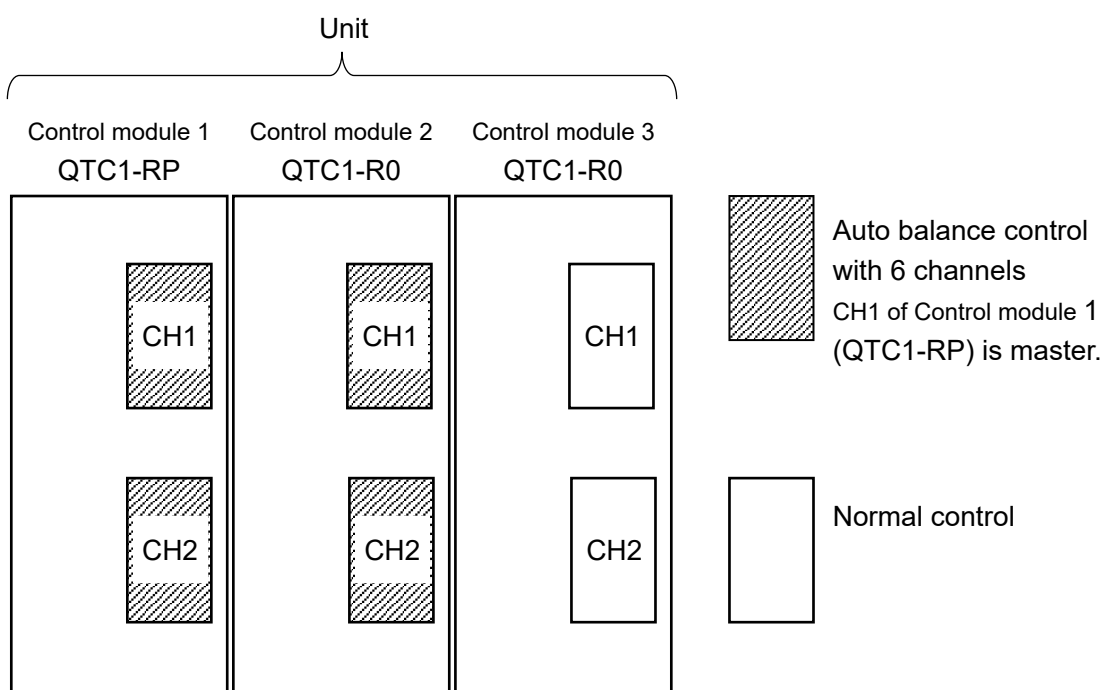

(Fig. 15.3.1-3)


[Description]

- The following channels for which Enabled is selected in Auto balance control Enabled/Disabled selection are grouped as one group, and CH1 of Control module 1 (QTC1-RP) is used as a master for auto balance control.
CH1 and CH2 of Control module 1 (QTC1-RP)
CH1 and CH2 of Control module 2 (QTC1-R0)
- The following channels for which Enabled is selected in Auto balance control Enabled/Disabled selection performs normal control.
CH1 and CH2 of Control module 3(QTC1-R0)

When select interlock and use communication expansion module QMC1-C□

Setting example when 4 channels are used for auto balance control with interlock and 2 channels are used for normal control

	Control module 1 QTC1-R0 (no power supply/communication option)		Control module 2 QTC1-R0 (no power supply/communication option)		Control module 3 QTC1-R0 (no power supply/communication option)	
Channel	CH1	CH2	CH1	CH2	CH1	CH2
Auto balance control interlock/alone selection	Interlock		Interlock		Alone	
Auto balance control Enabled/Disabled selection	Enabled	Enabled	Enabled	Enabled	Disabled	Disabled
Auto balance control master/slave selection (input channel No.)	2: CH2 Master channel		0: Slave channel		0: Slave channel	

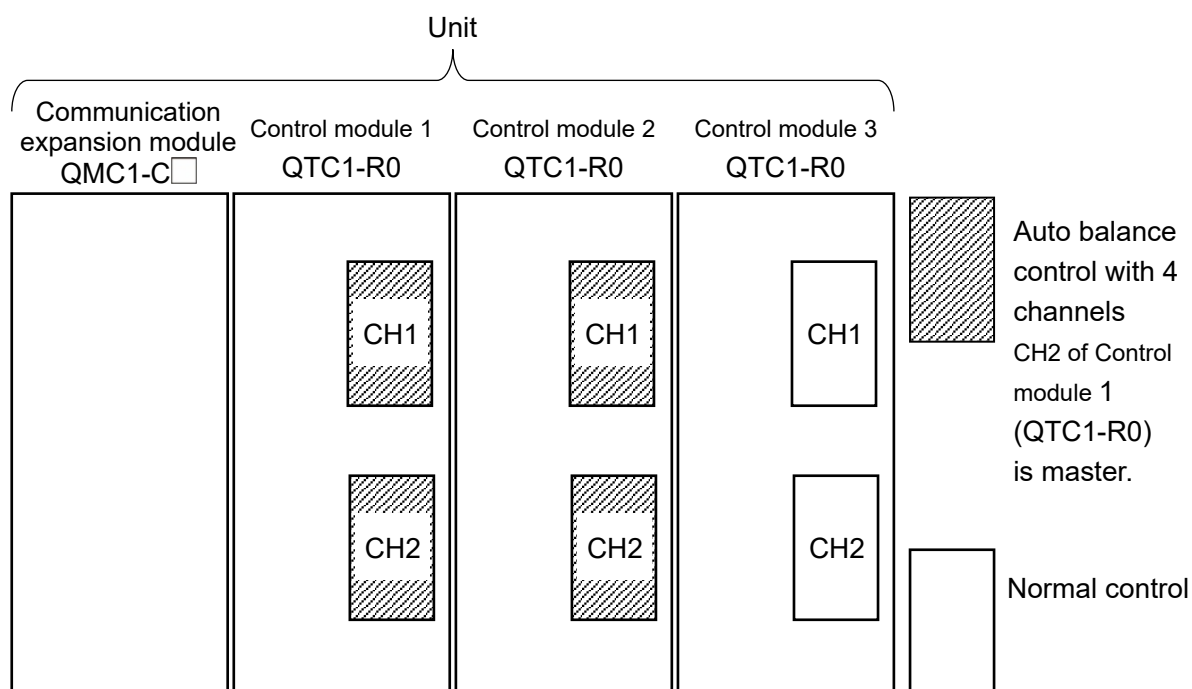

(Fig. 15.3.1-4)


[Description]

- The following channels for which Enabled is selected in Auto balance control Enabled/Disabled selection are grouped as one group, and CH2 of Control module 1 (QTC1-R0) is used as a master for auto balance control.
CH1 and CH2 of Control module 1(QTC1-R0)
CH1 and CH2 of Control module 2(QTC1-R0)
- The following channels for which Enabled is selected in Auto balance control Enabled/Disabled selection performs normal control.
CH1 and CH2 of Control module 3(QTC1-R0)
- The communication expansion module (QMC1-C□) transfers data between control modules.

When select alone

Setting example when 2 channels are used for auto balance control with alone and 4 channels are used for normal control

	Control module 1 QTC1-RP(with power supply/communication option)		Control module 2 QTC1-R0 (no power supply/communication option)		Control module 3 QTC1-R0 (no power supply/communication option)	
Channel	CH1	CH2	CH1	CH2	CH1	CH2
Auto balance control interlock/alone selection	Alone		Alone		Alone	
Auto balance control Enabled/Disabled selection	Disabled	Disabled	Disabled	Disabled	Enabled	Enabled
Auto balance control master/slave selection (input channel No.)	0: Slave channel		0: Slave channel		4: CH4 Master channel	

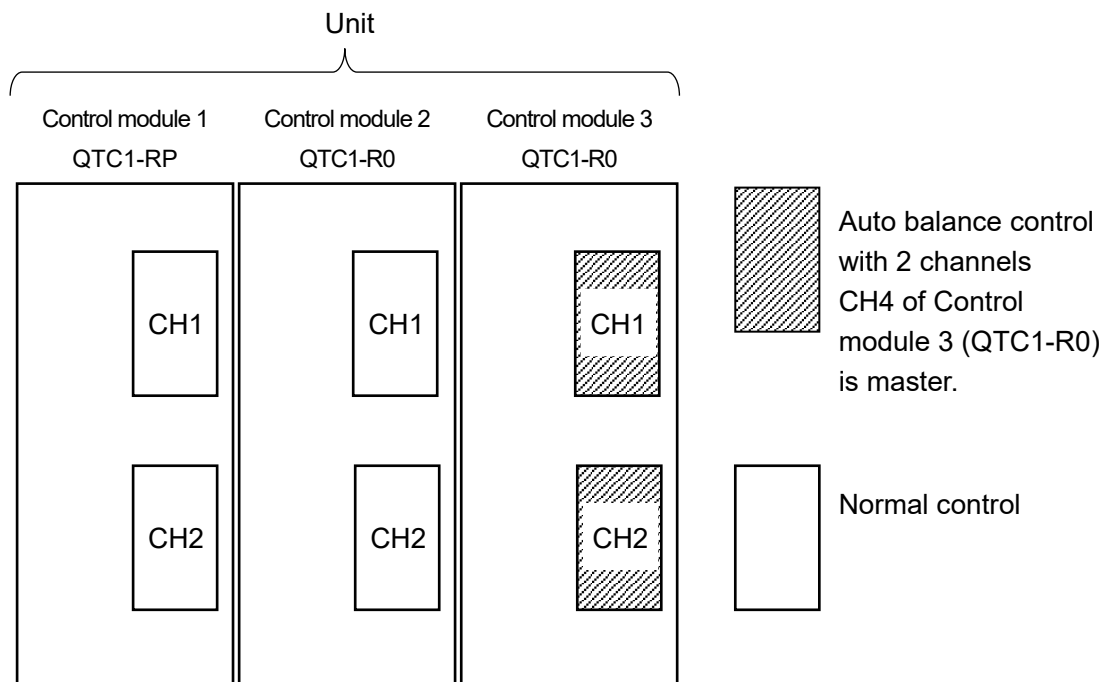

(Fig. 15.3.1-5)

[Description]

- The following channels for which Enabled is selected in Auto balance control Enabled/Disabled selection are grouped as one group, and CH2 of Control module 3 (QTC1-R0) is used as a master for auto balance control.
CH1 and CH2 of Control module 3(QTC1-R0)
- The following channels for which Disabled is selected in Auto balance control Enabled/Disabled selection performs normal control.
CH1 and CH2 of Control module 1(QTC1-RP)
CH1 and CH2 of Control module 2(QTC1-R0)

Auto balance control start output setting

When using the auto balance control function, the target value of the master channel is SV, but the SV of the slave channel becomes the PV of the master channel, so the slave channel does not start the auto balance control unless the master channel heats up. ..

As a result, the temperature of the slave channel is delayed and a temperature difference with the master channel is generated, so that the MV is set so that the output of the slave channel turns on when auto balance control starts in order to prevent deterioration of simultaneity.

The setting value of 0.00 to 1.00 corresponds to 0 to 100%.

Auto balance control start condition setting

The auto balance control is started in the following cases.

- When input is not burnout or underscale
- When AT Cancel is selected in AT Perform/Cancel
- When master is selected in master/slave selection
- When Reverse action is selected in Direct/Reverse action selection
- When the heater burnout alarm or loop break alarm is not generated

Auto balance control cancel condition setting

The auto balance control is canceled in the following cases.

- When input is not burnout or underscale
- When AT Perform is selected in AT Perform/Cancel
- When Direct action is selected in Direct/Reverse action selection
- When a Heater burnout alarm or Loop break alarm occurs on the master channel.

However, if a Heater burnout alarm or Loop break alarm occurs on a slave channel, the auto balance control is canceled only for that channel.

- When Control Prohibited is selected in Control Enable/Prohibited selection

Auto balance control cancel area setting

When the PV of the master channel reaches the autobalance control cancel area and when the PV of each slave channel reaches the autobalance control cancel area, the auto balance control function is released.

Master channel $PV \geq \text{Master channel SV} - \text{Auto balance control cancel area}$

(When 0 is set, the auto balance control cancel area is twice the proportional band of the master channel.)

Slave channel $PV \geq \text{Slave channel SV} - \text{Auto balance control cancel area}$

(When 0 is set, the auto balance control cancel area is twice the proportional band of the master channel.)


Number of communication management module setting

Set the number of units including the master module.

If two slave modules for interlock are connected, set them as three.

15.3.2 Output Gain – Bias Function

When controlling the temperature of the metal plate, the heater is controlled at multiple points. However, if multiple outputs are used for the inputs and the distribution of the output amount is known in advance, the ratio and bias for MV (reference output) can be set to perform uniform control.

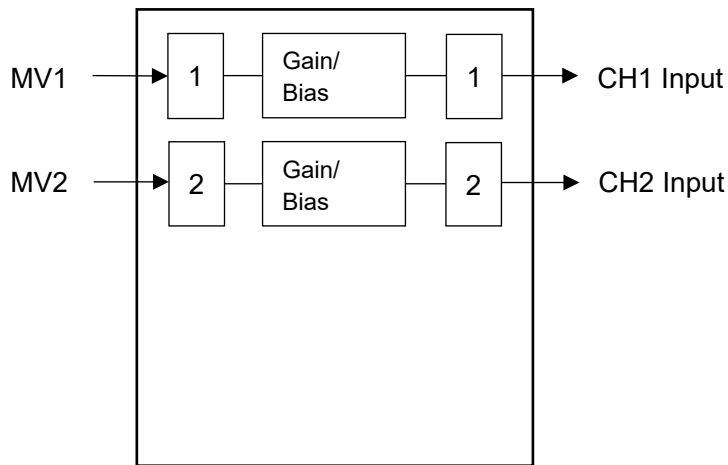

(Fig. 15.3.2-1)

15.3.3 Input Math Function

In Input math function selection, select Standard, Difference input or Addition input.

The input math function selected for CH1 corresponds to CH1 and CH2. However, if a function other than the standard one is selected in control function selection, input math function selection becomes disabled.

Standard	The input value of CH is used as PV for control.
Difference input	The temperature difference between CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV - CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the difference input specifications, execute AT individually for each channel and then select difference input.
Addition input	The added value of CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV + CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the addition input specifications, execute AT individually for each channel and then select addition input.

15.3.4 Input Difference Selection

Input difference selection detects the input difference between the current channel and the selected channel, and when the input difference detection setting exceeds the set value, the input difference flag of status flag 1 B12: Set "out of range". However, this function does not work when the own channel is selected in input difference selection.

Setting range: 0.001 to 10.000°C

15.3.5 Combination of Functions

(1) About combination of control action selectiton / output selection and control function / extension function

○: Can be combined

×: Cannot be combined

Control action selectiton Output selection Control function Extension function	Control action selectiton					Output selection
	Fast-PID control	Slow-PID control	2 DOF PID control	Gap-PID control	ON-OFF control	
Auto balance control function	×	○	×	×	×	○
Peak power suppression function	○	○	○	○	×	×
Cascade control	○	○	○	×	○	×
Heating/Cooling control	○	○	○	○	○	×
Output gain-bias function	○	○	○	○	○	○
Input math function	○	○	○	○	○	○

(2) About combination of control function and extension function

○: Can be combined

×: Cannot be combined (If set, operation cannot be guaranteed)

	Auto balance control function	Peak power suppression function	Cascade control	Heating/Cooling control	Output gain-bias function	Input math function
Auto balance control function		×	×	○(*)	×	×
Peak power suppression function	×		×	×	×	×
Cascade control	×	×		×	○(*)	×
Heating/Cooling control	○(*)	×	×		×	○
Output gain-bias function	×	×	○(*)	×		×
Input math function	×	×	×	○	×	

(*): It cannot be used together with output selection.

(3) About combinations within modules and units

○: Can be combined

×: Cannot be combined

	Within modules	Within units
Auto balance control function	○	○
Peak power suppression function	○	×
Cascade control	○	×
Heating/Cooling control	○	×
Output gain-bias function	○	×
Input math function	○	×

15.4 Attached Function

15.4.1 Power Failure Countermeasure

The non-volatile IC memory backs up the setting data.

15.4.2 Self-Diagnosis


The watchdog timer monitors runaway and halt of the program, and when an abnormality is detected, it resets the MCU and initializes the instrument.

15.4.3 PV Filter Time Constant


This is a function to stabilize the PV of the process (pressure, flow rate, etc.) where the PV fluctuation before the PV filter processing is performed by performing the temporary delay calculation of the PV before the PV filter processing with the filter function on the software. When PV before PV filter processing changes stepwise as shown in (Fig. 14.4.4-1), if PV time constant (T) is set, PV filter will be set after T seconds as shown in (Fig. 14.4.4-2). It changes to reach 63% of the PV after treatment.

If the set value is too large, the control result may be adversely affected by the delay in response.

PV filter time constant : 0.0 to 10.0 seconds

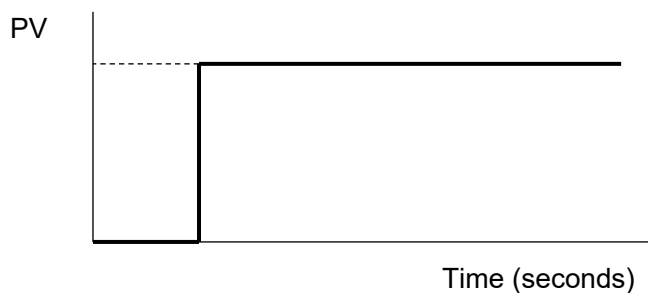

(Fig. 15.4.4-1)

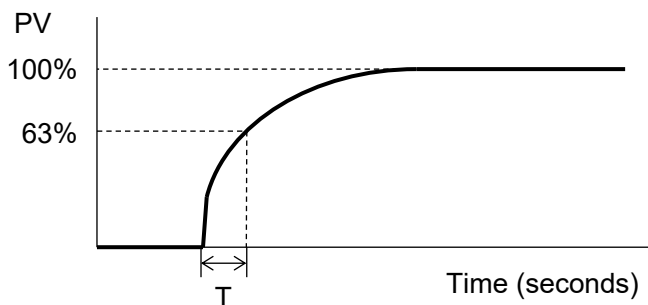

(Fig. 15.4.4-2)

15.4.4 Moving average count

This function stabilizes the indicated value by averaging the value whose input value fluctuates due to noise.

Moving average count: 1 to 10 times (Factory default: 1 time)

15.4.5 CH Enable/Disable

Select enable or disable for each channel.

When disabled is selected, all operations are disabled for the selected channel and PV becomes 0.

15.4.6 Overscale

In the case of the following input range, overscale will occur and B4: Input error (overscale) of status flag 1 will be set to "1: Error". However, control continues during overscale.

Refer to the relationship between sensor error, overscale, underscale, and control (Fig. 15.4.8-1). (P.15-28)

Rated high limit to Input range high limit + 0.500°C

15.4.7 Underscale

In the case of the following input range, underscale will occur and B5: Input error (underscale) of status flag 1 will be set to "1: Error". However, control continues during underscale.

Refer to the relationship between sensor error, overscale, underscale, and control (Fig. 15.4.8-1). (P.15-28)


Input range low limit – 5.000°C to Rated low limit

15.4.8 Sensor Error

Channels meeting the following conditions will trigger a sensor error, set the sensor error flag to status flag 2, and turn the control output OFF.

When the input range low limit is less than -5.000°C and exceeds the input range high limit +0.500°C

At this time, PV is fixed to the of input range low limit -5.000°C-1 digit and the input range high limit +0.500°C +1 digit.

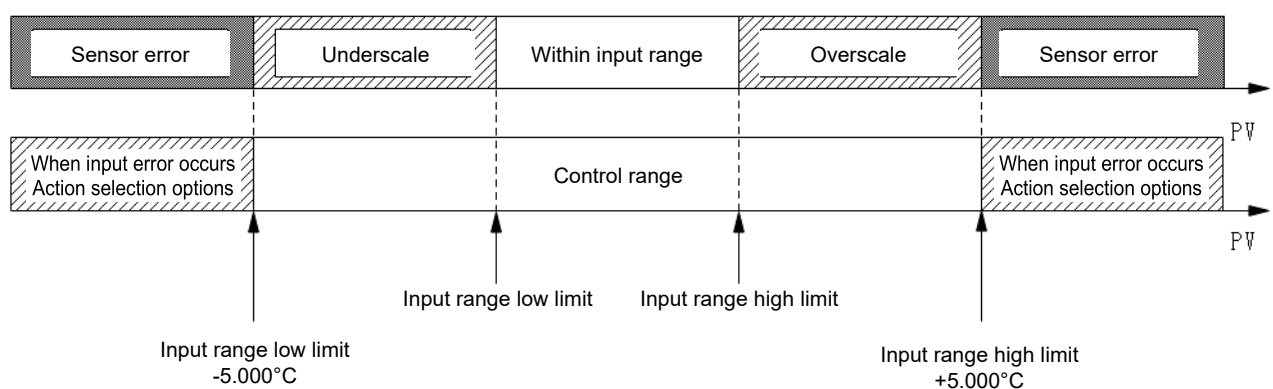

(Fig. 15.4.8-1)

15.4.9 ADC Error

If there is an abnormality such as a failure in the internal circuit, an ADC error occurs, B6: ADC error of status flag 2 is set to "1: Error", and the control output of the channel in which the error occurred is turned off.

At this time, PV becomes 32767.

15.4.10 Warm-up indication

The power indicator flashes every 500 ms for about 3 seconds after the power is turned on.

15.4.11 Contact Switching Total Number of Times

The control output ON/OFF count can be integrated and measured.

ON/OFF is set as one time and totaling is performed.

This allows you to grasp the approximate contact life as the number of switching times of the switch used externally. However, since the saving cycle is 1 hour, the number of times within 1 hour may not be saved due to a power failure.

15.4.12 Total Energizing Time

It can check the time that the power is on.

The accumulated time is saved every 10 minutes.

It can grasp the approximate usage time from the accumulated time. However, since the save cycle is 10 minutes, the time within 10 minutes may not be saved due to a power failure.

Total energizing time: 10 minutes/count

15.4.13 Heater Accumulated Energizing Time

For relay contact output or non-contact voltage output, you can check the cumulative time the heater is energized.

When the output time to the heater reaches 1 minute cumulatively, the count is added.

The accumulated time is saved every 10 minutes.

The accumulated time can be used to understand the approximate usage period of the heater, which can be used as a guide for replacing the heater. However, since the save cycle is 10 minutes, the time within 10 minutes may not be saved due to a power failure.

Cumulative heater energization time: 1 minute/count

15.4.14 Error History

When an error occurs, the error type and accumulated energization time are saved for the past 10 times.

Error history exists for each channel, and device common errors are saved in the error history of all channels.

Total energizing time: 1 hour/count

Bit	Error content		
B0	Alarm 1	0: Normal	1: Error
B1	Alarm 2	0: Normal	1: Error
B2	Alarm 3	0: Normal	1: Error
B3	Alarm 4	0: Normal	1: Error
B4	Heater burnout alarm	0: Normal	1: Error
B5	Undefined	Indefinite	
B6	Loop break alarm	0: Normal	1: Error
B7	Sensor error	0: Normal	1: Error
B8	Input error (Overscale)	0: Normal	1: Error
B9	Input error (Underscale)	0: Normal	1: Error
B10	Undefined	Indefinite	
B11	Non-volatile IC memory error	0: Normal	1: Error
B12	ADC error	0: Normal	1: Error
B13	Undefined	Indefinite	
B14	Undefined	Indefinite	
B15	Undefined	Indefinite	

15.5 Operation Diagram

15.5.1 Control Output Operation Diagram

Action	Reverse (Heating) action			Direction (Cooling) action		
Control action						
Relay contact output						
	Periodic action according to deviation			Periodic action according to deviation		
Non-contact voltage output						
	Periodic action according to deviation			Periodic action according to deviation		
Direct current input DC voltage input						
	Change continuously according to deviation			Change continuously according to deviation		
Open collector output						
	Periodic action according to deviation			Periodic action according to deviation		
Display (O1) Green						
	ON OFF			OFF ON		

: Operates ON or OFF.

CH2 control output: ⑩ ⑪, Display O2

15.5.2 Control Output ON/OFF Operation Diagram

Action	Reverse (Heating) action		Direction (Cooling) action	
Control action				
Relay contact output				
Non-contact voltage output				
Direct current input DC voltage input				
Open collector output				
Display (O1) Green				

: Operates ON or OFF.

CH2 control output: ①⑥ ①⑦, Display O2

15.5.3 Alarm Operation Diagram


	High limit alarm	Low limit
Alarm action		
Alarm output		
	High/Low limits alarm	High/Low range alarm
Alarm action		
Alarm output		
	Process High alarm	Process Low alarm
Alarm action		
Alarm output		
	High limit with standby	Low limit with standby
Alarm action		
Alarm output		

	High/Low limits alarm with standby	High/Low limits alarm individually
Alarm action		
Alarm output		
	High/Low limit s range alarm individually	High/Low limits alarm with standby
Alarm action		
Alarm output		

: Event output ON.
 : Event output ON or OFF.
 : Event output OFF.
 : The standby function works in this part.

- Alarm 1 value, Alarm 1 high limit value, Alarm 1 low limit value and Alarm 1 hysteresis represent Alarm 1 value setting, Alarm 1 high limit value setting, Alarm 1 low limit value setting and Alarm 1 hysteresis setting, respectively.
In the case of Alarm 2, Alarm 3 and Alarm 4, replace them respectively.
- The EVT indicator lights when the alarm output is ON and turns off when the alarm output is OFF.
- Event output works on the channel for which event output is selected in Event output allocation selection.
- CH3 alarm 1 to 4 operates for CH1 input.
- CH4 alarm 1 to 4 operates for CH2 input.

15.5.4 Heater Burnout Alarm Operation Diagram

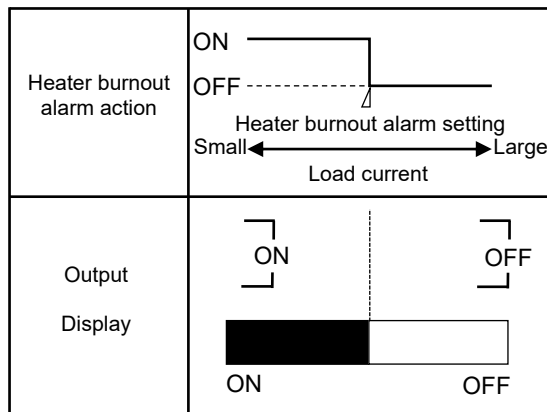

- The EVT indicator lights when the alarm output is ON and turns off when the alarm output is OFF.
- Event output works on the channel for which event output is selected in Event output allocation selection.

15.5.5 Heating/Cooling Control Operation Diagram

When heating/cooling control is selected for CH1 in control function selection

Control action			
Relay contact output (OUT1)			
Non-contact voltage output (OUT1)			
Direct current output (OUT1) DC voltage output (OUT1)			
Open collector output (OUT1)			
Relay contact output (OUT2)			
Non-contact voltage output (OUT2)			
Direct current output (OUT2) DC voltage output (OUT2)			
Open collector output (OUT2)			
Display (O1)			
Display (O2)			




: ON or OFF

— : Heating control action

- - - - : Cooling control action

15.5.6 Heating/Cooling Control Operation Diagram (When Setting Dead Band)

When heating/cooling control is selected for CH1 in control function selection

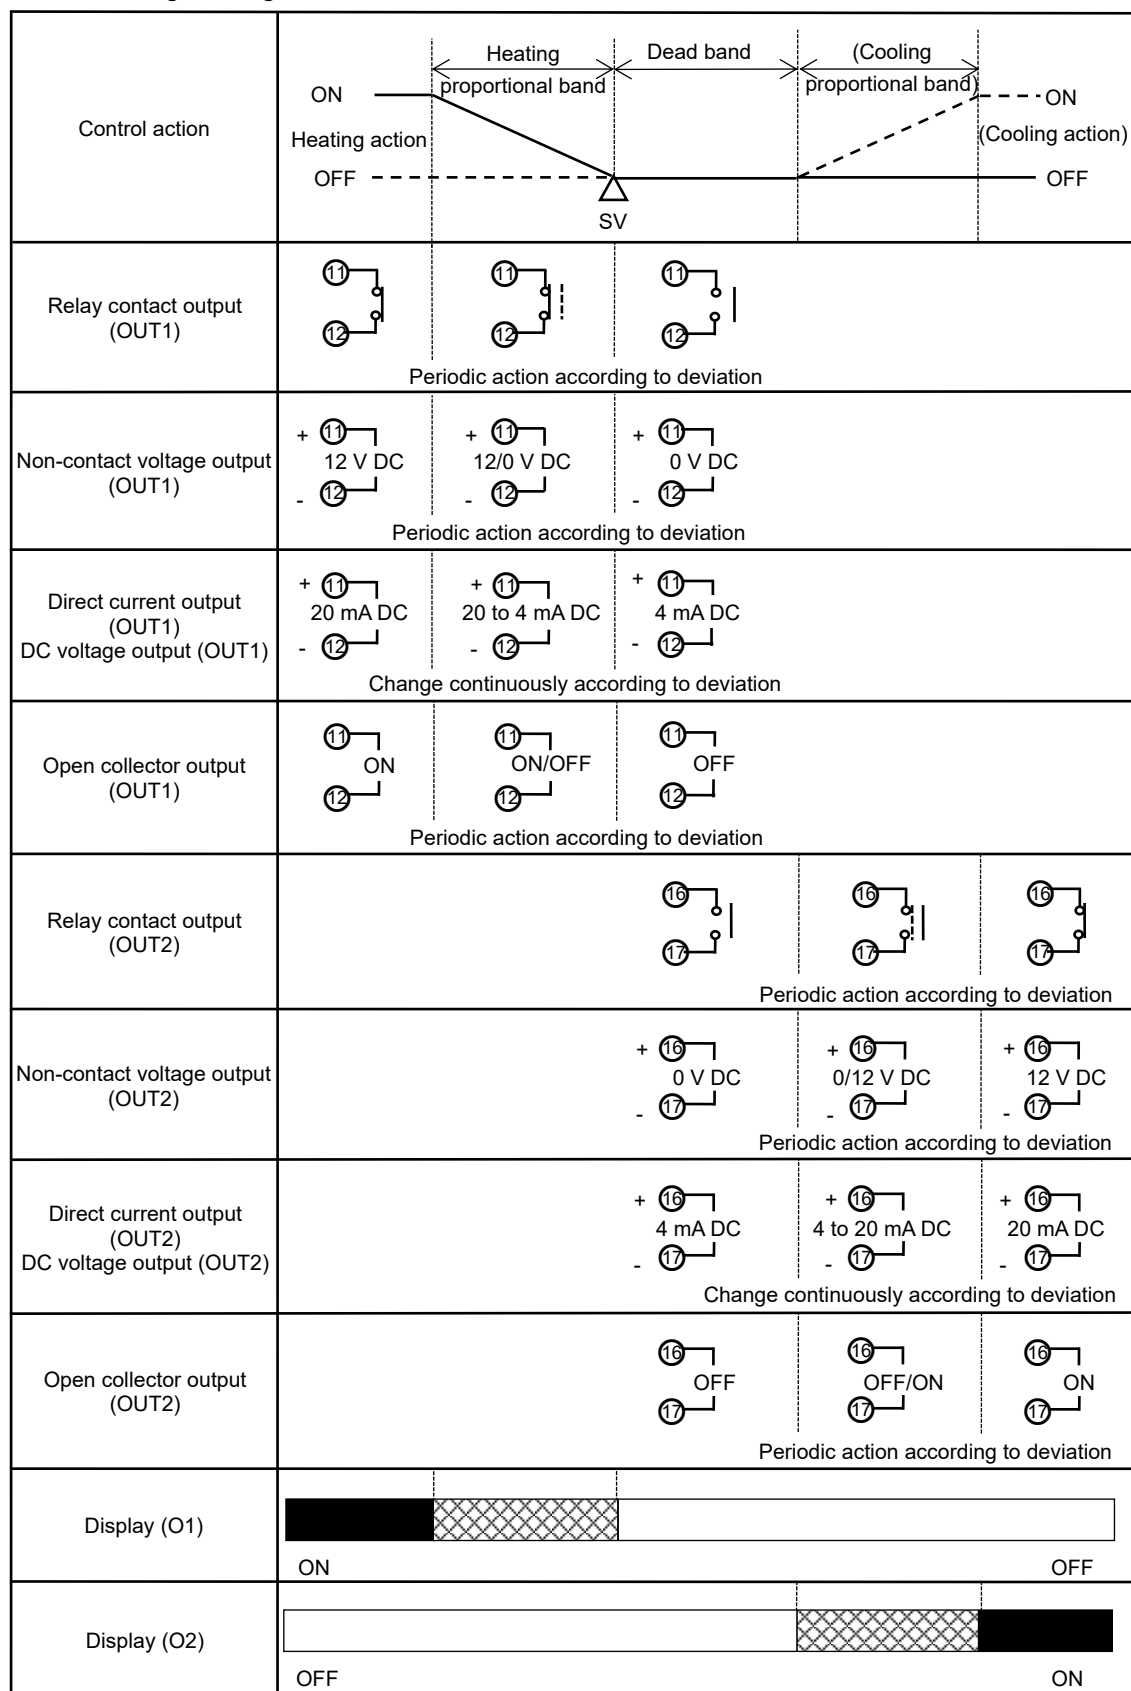

: ON or OFF



: Heating control action



: Cooling control action

15.5.7 Heating/Cooling Control Operation Diagram (When Setting Overlap Band)

When heating/cooling control is selected for CH1 in control function selection

Control action			
Relay contact output (OUT1)	Periodic action according to deviation		
Non-contact voltage output (OUT1)	Periodic action according to deviation		
Direct current output (OUT1) DC voltage output (OUT1)	Change continuously according to deviation		
Open collector output (OUT1)	Periodic action according to deviation		
Relay contact output (OUT2)	Periodic action according to deviation		
Non-contact voltage output (OUT2)	Periodic action according to deviation		
Direct current output (OUT2) DC voltage output (OUT2)	Change continuously according to deviation		
Open collector output (OUT2)	Periodic action according to deviation		
Display (O1)	ON OFF		
Display (O2)	OFF ON		

*1: Heating proportional band
*2: Cooling proportional band
*3: Overlap

: ON or OFF

———— : Heating control action

----- : Cooling control action

16 Maintenance and Inspection


16.1 Maintenance

You can use the console software (SWC-QTC101M) to check the error history, cumulative number of contact switching operations, heater cumulative energization time, and so on.
Useful for failure prediction maintenance.

Error history

Click [Error history] of [Main screen] tab → [Error history].

Display the Error history screen.

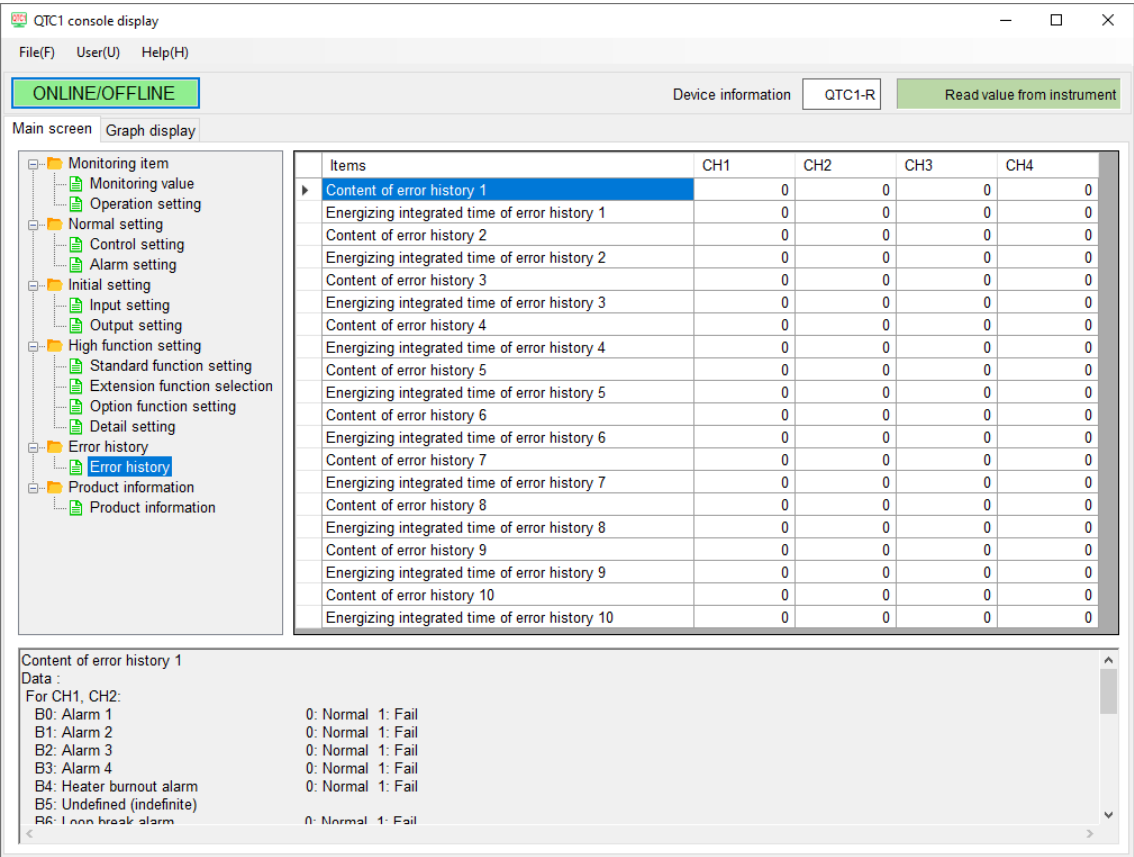

(Fig. 16.1-1)

Content of error history1 to 10, Energizing integrated time of error history1 to 10

The types of error history for the last 10 times and the integrated energizing time when an error occurs are displayed.
It can be used for future predictions from past error history.

Types of error history

The types of error history are shown below.

Bit	Error history types and data	
B0	Alarm 1	0: Normal 1: Error
B1	Alarm 2	0: Normal 1: Error
B2	Alarm 3	0: Normal 1: Error
B3	Alarm 4	0: Normal 1: Error
B4	Heater burnout alarm	0: Normal 1: Error
B5	Undefined	Indefinite
B6	Loop break alarm	0: Normal 1: Error
B7	Sensor error	0: Normal 1: Error
B8	Input error (Overscale)	0: Normal 1: Error
B9	Input error (Underscale)	0: Normal 1: Error
B10	Undefined	Indefinite
B11	Non-volatile IC memory error	0: Normal 1: Error
B12	ADC error	0: Normal 1: Error
B13	Undefined	Indefinite
B14	Undefined	Indefinite
b15	Undefined	Indefinite

Error history display

Error history is updated each time an error occurs. Error history 1 is always the latest.

After the 11th time, delete the old Error history.


Example: Error history 1 is deleted the 11th time and Error history 2 is deleted the 12th time.

Number of error Error history	1st	2nd	3rd		8th	9th	10th	11th	12th
Error history 1	1st	2nd	3rd		8th	9th	10th	11th	12th
Error history 2		1st	2nd		7th	8th	9th	10th	11th
Error history 3			1st		6th	7th	8th	9th	10th
Error history 4					5th	6th	7th	8th	9th
Error history 5					4th	5th	6th	7th	8th
Error history 6					3rd	4th	5th	6th	7th
Error history 7					2nd	3rd	4th	5th	6th
Error history 8					1st	2nd	3rd	4th	5th
Error history 9						1st	2nd	3rd	4th
Error history 10							1st	2nd	3rd
Delete error history								1st	2nd

Contact switching total number of times • Integral electrification time • Heater accumulated energizing time

Click [Product information] of [Main screen] tab → [Product information].

Display the Product information screen.

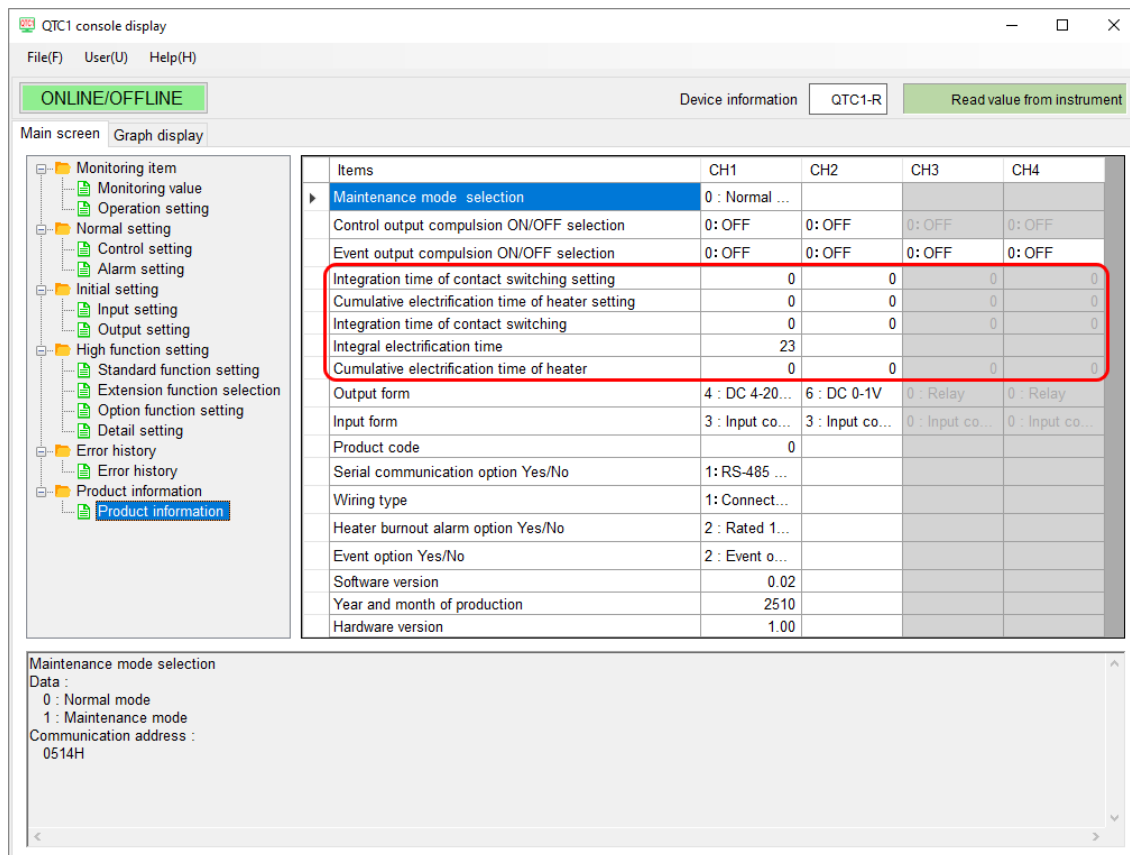

(Fig. 16.1-2)

Contact switching total number of times setting

Set when replacing the control module or relay.

Heater accumulated energizing time setting

Set when replacing the control module or heater.

Contact switching total number of times

It can be used to check the guideline for relay replacement time.

Integral electrification time

It can be used to check the product life of the control module itself.

Heater accumulated energizing time

It can be used to check the guideline of heater product life.

16.2 Inspection


Control output forced ON/OFF and event output forced ON/OFF can be performed by selecting the maintenance mode using the console software (SWC-QTC101M).

Useful for checking wiring.

Control output forced ON/OFF • Event output forced ON/OFF

Click [Product information] of [Main screen] tab → [Product information].

Display the Product information screen.

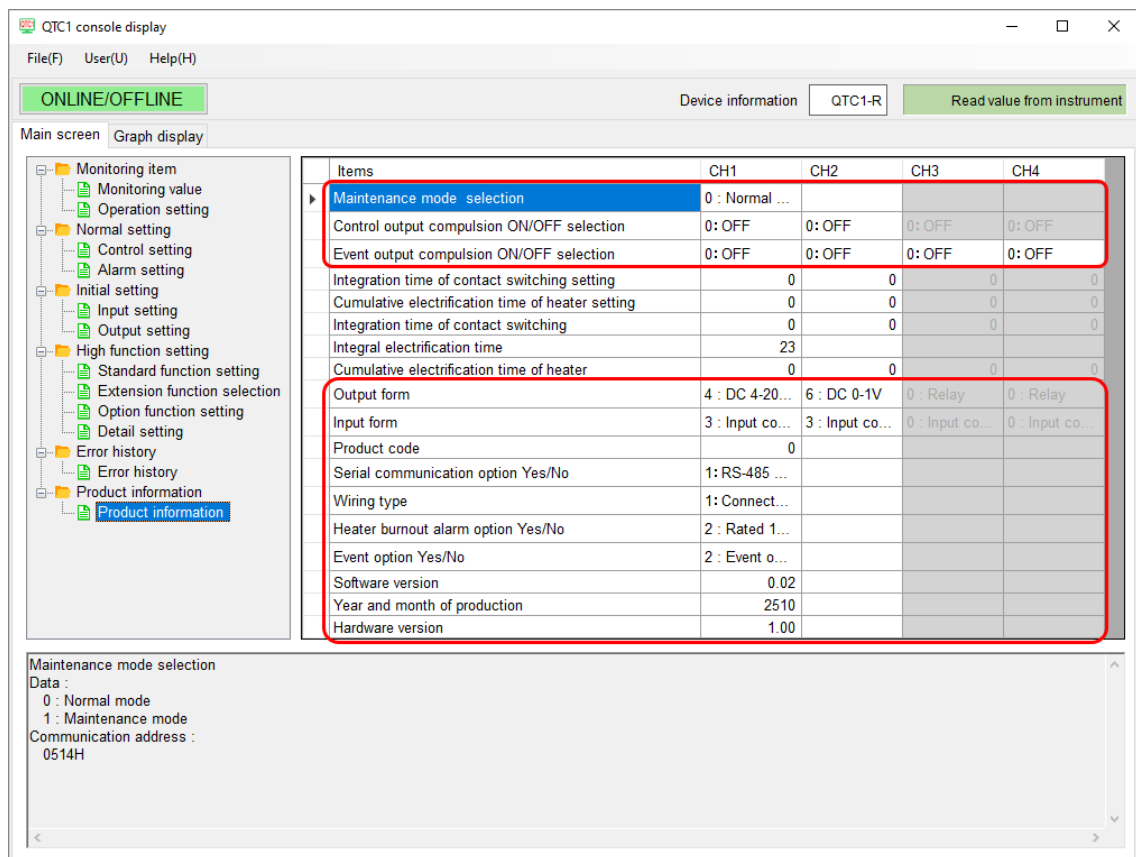

(Fig. 16.2-1)

Maintenance mode selection

Normal mode: Normal control is performed.

Maintenance mode: Only the reading of the input is valid and the control output and event output are turned off.

Control output forced ON/OFF selection

Control output is forcibly turned ON/OFF. It can be used to check the wiring in the operating state.

Event output forced ON/OFF selection

Event output is forcibly turned ON/OFF. It can be used to check the wiring in the operating state.

Product information

It can check the product information from the output form, input form, and product code.

Item	Product information example
Product code	Product code
Serial communication option	1: With power supply / upper communication function
Wiring type	1: Connector type
Output form	4: DC 4~20 mA
Input form	3: Input code R
Heater burout alarm option	2: CT 2 points Rated 100 A
Event option	1: Event input (2 points)
Software version	Ver. 0.02
Year and month of production	2510: October 2025
Hardware version	Ver. 1.00

17 Specifications

17.1 Standard Specifications

Rating

Rated scale			
	Input	Input Range	Resolution
	Pt100	0.000 to 32.000°C	0.001°C
Scaling possible. However, it works as SV low limit to SV high limit.			

Input



Input		
	RTD input	Pt100 4-wire type (JIS C1604-2013) Allowable input lead wire resistance: 100 Ω or less per wire
Event input		
	Input points	2 points
	Input type	Voltage contact input sink type
	Circuit current when closed	Approx. 6 mA
	Acquisition judgment time	40 ms to 40 ms + within the range of input sampling
CT input		
	20 A Specification (-2)	Rated voltage: 0.9 V, Rated current: 30 mA
	100 A Specification (-A)	Rated voltage: 0.9 V, Rated current: 120 mA

Output

Control output	Relay contact output	1a Control capacity: 3 A 250 V AC (resistive load) 1 A 250 V AC (inductive load $\cos\phi = 0.4$) Electrical life: 100,000 cycles Minimum applicable load: 10 mA 5 V DC
	Non-contact voltage (for SSR drive) output	12 V DC $\pm 15\%$ Max. 40 mA (short circuit protected) Non-isolated between power supply and output
	Direct current output	4 to 20 mA DC, 0 to 20 mA DC Resolution: 12000 Resolution Load resistance: Max. 550 Ω Non-isolated between power supply and output
	DC voltage output	0 to 1 V DC, 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC Resolution: 12000 Allowable load resistance: 1 k Ω or more Non-isolated between power supply and output
	Open collector output	NPN Allowable load current: 100 mA or less Load voltage: 30 V DC or less Residual voltage: 1.2 V DC or less Leakage current when OFF: 0.1 mA or less
Event output	Output points	4 points
	Circuit	NPN open collector
	Max. load voltage	30 V DC
	Max. load capacity	50 mA

Power supply

Power supply voltage	24 V DC Allowable voltage fluctuation: 20 to 28 V DC
Power consumption	3 W or less
Inrush current	Max. 10 A

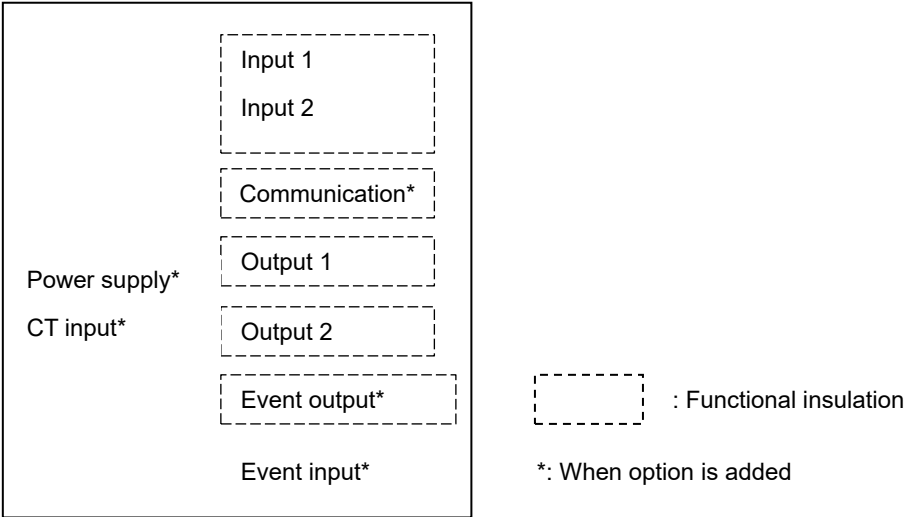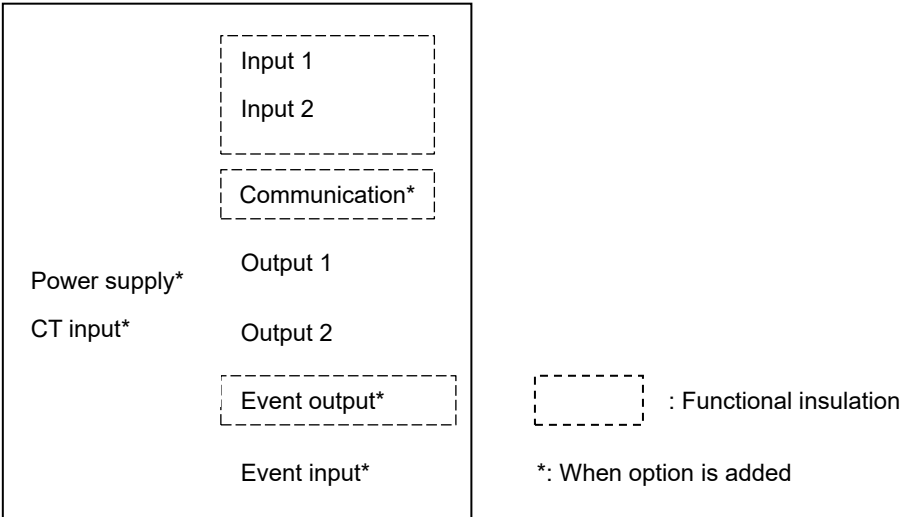Circuit insulation configuration	Relay contact output, Open collector output  (Fig. 17.1-1) Non-contact voltage output, Direct current output, DC voltage output  (Fig. 17.1-2)
Insulation resistance	500 V DC 10 MΩ or more
Dielectric strength	Between Power terminal – Ground (GND): 1.5 kV AC for 1 minute Between Power terminal – Ground (GND): 1.5 kV AC for 1 minute Between Input terminal – Power terminal: 750 V AC for 1 minute

Recommended Environment

Ambient temperature	-10 to 50°C (no condensation or freezing)
Ambient humidity	35 to 85%RH (no condensation)
Altitude	2,000 m or less
Installation environment	Pollution degree 2 (EN61010-1)
Memory protection	Non-volatile memory (Number of writes: 1 trillion times)
Environmental specification	RoHS directive compliant

Performance

Base accuracy	When the ambient temperature is 23°C and the mounting angle is ±5 degrees RTD input: Within ±0.05°C
Effect of ambient temperature	Within ±100 ppm/°C of input span
Effect of electromagnetic interference	Within ±1% of each input span
Input sampling period	125 ms

General Structure

Weight	Approx. 150 g	
External dimensions	30 × 100 × 85 mm (W × H × D excluding protrusion)	
Mounting type	DIN rail mounting type	
Case	Flame-resistant resin, Color: Black	
Panel	Polycarbonate sheet	
Applicable standard		
	EN	EN61010-1 (Pollution degree 2)
	EC Directive	EMI: EN61326 Radiated interference field strength: EN55011 Group1 ClassA Terminal noise voltage: EN55011 Group1 ClassA EMS: EN61326

Setting Structure

Communication specification selection	Select the communication speed, data bit, parity, stop bit, and communication protocol using the DIP switch.
Module address selection	Select the module address 0 to F (1 to 16) with the rotary switch. The value obtained by adding 1 to the value of the selected rotary switch becomes the module address.
CUnet communication specification selection	The station address, communication speed, master address and number of occupied (OWN) items are selected by DIP switches.

Control Performance

Control action selection	Select any control method from 2 DOF PID control, Fast-PID control, Slow-PID control, ON-OFF control or Gap-PID control. Optimal control is possible by selecting the control type according to the intended use and process. The control action selection can be selected only when control prohibited. When the integral time is set to 0 or 0.0, Slow-PID control cannot be selected.																
2 DOF PID control	Control type that achieves both tracking characteristics when changing SV and suppression of disturbance. <table border="1"> <tr> <td>Proportional band (P)</td><td>0.001 to Input span °C</td></tr> <tr> <td>Integral time (I)</td><td>0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.</td></tr> <tr> <td>Derivative time (D)</td><td>0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.</td></tr> <tr> <td>Proportional gain 2 DOF coefficient (α)</td><td>0.00 to 1.00</td></tr> <tr> <td>Integral 2 DOF coefficient (β)</td><td>0.00 to 10.00</td></tr> <tr> <td>Derivative 2 DOF coefficient (γ)</td><td>0.00 to 1.00</td></tr> <tr> <td>Proportional cycle</td><td>0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)</td></tr> <tr> <td>Output high limit, Output low limit</td><td>0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)</td></tr> </table>	Proportional band (P)	0.001 to Input span °C	Integral time (I)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.	Derivative time (D)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.	Proportional gain 2 DOF coefficient (α)	0.00 to 1.00	Integral 2 DOF coefficient (β)	0.00 to 10.00	Derivative 2 DOF coefficient (γ)	0.00 to 1.00	Proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)	Output high limit, Output low limit	0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)
Proportional band (P)	0.001 to Input span °C																
Integral time (I)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.																
Derivative time (D)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.																
Proportional gain 2 DOF coefficient (α)	0.00 to 1.00																
Integral 2 DOF coefficient (β)	0.00 to 10.00																
Derivative 2 DOF coefficient (γ)	0.00 to 1.00																
Proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)																
Output high limit, Output low limit	0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)																

Fast-PID control	Derivative leading PID control type, a general control type in which the derivative operation operates according to the PV change amount • P control: When the integral time and derivative time are set to 0 • PI control: When the derivative time is set to 0 • PD control: When the integral time is set to 0 • Deviation PID control: When changing the SV with time, setting the Proportional gain 2 DOF coefficient (α) to 1.00 and the Derivative 2 DOF coefficient (γ) to 1.00 causes the differential action to operate according to the deviation. <table border="1" data-bbox="512 546 1461 1753"> <tr> <td>Proportional band (P)</td><td>0.001 to Input span °C</td></tr> <tr> <td>Integral time (I)</td><td>0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.</td></tr> <tr> <td>Derivative time (D)</td><td>0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.</td></tr> <tr> <td>Proportional gain 2 DOF coefficient (α)</td><td>0.00 to 1.00</td></tr> <tr> <td>Integral 2 DOF coefficient (β)</td><td>0.00 to 10.00</td></tr> <tr> <td>Derivative 2 DOF coefficient (γ)</td><td>0.00 to 1.00</td></tr> <tr> <td>Proportional cycle</td><td>0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)</td></tr> <tr> <td>Output high limit, Output low limit</td><td>0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)</td></tr> </table>	Proportional band (P)	0.001 to Input span °C	Integral time (I)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.	Derivative time (D)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.	Proportional gain 2 DOF coefficient (α)	0.00 to 1.00	Integral 2 DOF coefficient (β)	0.00 to 10.00	Derivative 2 DOF coefficient (γ)	0.00 to 1.00	Proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)	Output high limit, Output low limit	0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)
Proportional band (P)	0.001 to Input span °C																
Integral time (I)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.																
Derivative time (D)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.																
Proportional gain 2 DOF coefficient (α)	0.00 to 1.00																
Integral 2 DOF coefficient (β)	0.00 to 10.00																
Derivative 2 DOF coefficient (γ)	0.00 to 1.00																
Proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)																
Output high limit, Output low limit	0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)																

Slow-PID control	Proportional derivative PID control type, in which proportional operation operates according to PV and derivative operation operates according to PV change amount	
	Proportional band (P)	0.001 to Input span °C
	Integral time (I)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Derivative time (D)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Proportional gain 2 DOF coefficient (α)	0.00 to 1.00
	Integral 2 DOF coefficient (β)	0.00 to 10.00
	Derivative 2 DOF coefficient (γ)	0.00 to 1.00
	Proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)
	Output high limit, Output low limit	0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)
ON-OFF control	Control type that operates with only two values, ON and OFF	
	ON/OFF hysteresis	0.001 to 10.000°C

Gap-PID control	If the PV is noisy or if the operating part has hysteresis, a slight fluctuation may continue near the deviation of zero. In such a case, the dead zone is normally used, but since control is not performed within the dead zone, PV changes during disturbance. Therefore, it is a control method that gives deviation characteristics within the dead zone and responds to disturbance. <table border="1" data-bbox="512 403 1461 1805"> <tr> <td>Proportional band(P)</td><td>0.001 to Input span °C</td></tr> <tr> <td>Integral time (I)</td><td>0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.</td></tr> <tr> <td>Derivative time (D)</td><td>0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.</td></tr> <tr> <td>Proportional gain 2 DOF coefficient (α)</td><td>0.00 to 1.00</td></tr> <tr> <td>Integral 2 DOF coefficient (β)</td><td>0.00 to 10.00</td></tr> <tr> <td>Derivative 2 DOF coefficient (γ, Cd)</td><td>0.00 to 1.00</td></tr> <tr> <td>Proportional cycle</td><td>0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)</td></tr> <tr> <td>Output high limit, Output low limit</td><td>0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)</td></tr> <tr> <td>Gap width</td><td>0.0 to 10.0% (Factory default: 0.0%) Proportional band $\times$ Gap width (%), When 0.0%, gap width is disabled.</td></tr> <tr> <td>Gap coefficient</td><td>0.0 to 1.0 (Factory default: 1.0)</td></tr> </table>	Proportional band(P)	0.001 to Input span °C	Integral time (I)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.	Derivative time (D)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.	Proportional gain 2 DOF coefficient (α)	0.00 to 1.00	Integral 2 DOF coefficient (β)	0.00 to 10.00	Derivative 2 DOF coefficient (γ , Cd)	0.00 to 1.00	Proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)	Output high limit, Output low limit	0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)	Gap width	0.0 to 10.0% (Factory default: 0.0%) Proportional band $\times$ Gap width (%), When 0.0%, gap width is disabled.	Gap coefficient	0.0 to 1.0 (Factory default: 1.0)
Proportional band(P)	0.001 to Input span °C																				
Integral time (I)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.																				
Derivative time (D)	0 to 3600 seconds or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.																				
Proportional gain 2 DOF coefficient (α)	0.00 to 1.00																				
Integral 2 DOF coefficient (β)	0.00 to 10.00																				
Derivative 2 DOF coefficient (γ , Cd)	0.00 to 1.00																				
Proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No Direct current/DC voltage output)																				
Output high limit, Output low limit	0.0 to 100.0% when direct current output -5.0 to 105.0% (Factory default: Output low limit 0.0%, Output high limit 100.0%)																				
Gap width	0.0 to 10.0% (Factory default: 0.0%) Proportional band $\times$ Gap width (%), When 0.0%, gap width is disabled.																				
Gap coefficient	0.0 to 1.0 (Factory default: 1.0)																				
Control range	When the control range below is exceeded, the control output is turned off. Input range low limit -5.000°C to Input range high limit +5.000°C																				

Standard Function

Alarm output	When the deviation is set to $\pm$ of SV (excluding the process alarm), the alarm output turns ON or OFF (high/low limit range alarm) when PV exceeds the range. High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limits range, Process High alarm, Process Low alarm, High limit with standby, Low limit with standby, High/Low limits alarm with standby, High/Low limits alarm individually, High/Low limit s range alarm individually, High/Low limits alarm with standby individually, or No action. Refer to “15.5.3 Alarm Operation Diagram (P.15-33, P.15-34)” for detail of alarm action. <table border="1" data-bbox="488 535 1465 1061"> <tr> <td>Action</td><td>ON/OFF action</td></tr> <tr> <td>Alarm hysteresis</td><td>0.001 to 10.000°C</td></tr> <tr> <td>Output</td><td>Event output allocated by status flag or event output allocation selection</td></tr> <tr> <td>Alarm setting 0 Enabled/Disabled selection</td><td>When Enabled is selected in Alarm setting 0 Enabled/Disabled selection, High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limits range, Process High alarm, Process Low alarm, High limit with standby, Low limit with standby, High/Low limits alarm with standby, High/Low limits alarm individually, High/Low limit s range alarm individually, High/Low limits alarm with standby individually, the alarm action will work even if the alarm action setting value is set to 0.</td></tr> </table>	Action	ON/OFF action	Alarm hysteresis	0.001 to 10.000°C	Output	Event output allocated by status flag or event output allocation selection	Alarm setting 0 Enabled/Disabled selection	When Enabled is selected in Alarm setting 0 Enabled/Disabled selection, High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limits range, Process High alarm, Process Low alarm, High limit with standby, Low limit with standby, High/Low limits alarm with standby, High/Low limits alarm individually, High/Low limit s range alarm individually, High/Low limits alarm with standby individually, the alarm action will work even if the alarm action setting value is set to 0.
Action	ON/OFF action								
Alarm hysteresis	0.001 to 10.000°C								
Output	Event output allocated by status flag or event output allocation selection								
Alarm setting 0 Enabled/Disabled selection	When Enabled is selected in Alarm setting 0 Enabled/Disabled selection, High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limits range, Process High alarm, Process Low alarm, High limit with standby, Low limit with standby, High/Low limits alarm with standby, High/Low limits alarm individually, High/Low limit s range alarm individually, High/Low limits alarm with standby individually, the alarm action will work even if the alarm action setting value is set to 0.								
Loop break alarm	Detects actuator trouble (heater burnout, sensor burnout). <table border="1" data-bbox="488 1137 1465 1368"> <tr> <td>Loop break alarm time</td><td>0 to 200 minutes</td></tr> <tr> <td>Loop break alarm band</td><td>0.000 to 15.000°C</td></tr> <tr> <td>Output</td><td>Event output allocated by status flag or event output allocation selection</td></tr> </table>	Loop break alarm time	0 to 200 minutes	Loop break alarm band	0.000 to 15.000°C	Output	Event output allocated by status flag or event output allocation selection		
Loop break alarm time	0 to 200 minutes								
Loop break alarm band	0.000 to 15.000°C								
Output	Event output allocated by status flag or event output allocation selection								
Setting value ramp function	When the SV is changed, control is performed from the SV before the change to the SV after the change at the set change rate. When the power is turned on, control is performed at the set rate of change from PV to SV at that time. <table border="1" data-bbox="488 1554 1465 1635"> <tr> <td>SV increase rate</td><td>Temperature input 0.000 to 10.000 °C/min.</td></tr> <tr> <td>SV decrease rate</td><td>Temperature input 0.000 to 10.000 °C/min.</td></tr> </table> (Both the rise rate and fall rate have a factory default of 0.000°C/min; however, setting this function to 0.000°C/min disables it.)	SV increase rate	Temperature input 0.000 to 10.000 °C/min.	SV decrease rate	Temperature input 0.000 to 10.000 °C/min.				
SV increase rate	Temperature input 0.000 to 10.000 °C/min.								
SV decrease rate	Temperature input 0.000 to 10.000 °C/min.								

Resore action selection when power is turn on	When the power is turned on, select whether to resume in the continuous state (state before turning off the power) or in the stopped state.
Non-volatile IC memory save selection	Select whether to allow or prohibit saving data to the non-volatile IC memory. If you select save prohibition, can temporarily change all the set values, but if turn the power off and then on, it will return to the value before selecting save prohibition.
Auto/Manual selection	Select automatic or manual control. When switching from automatic control to manual control or from manual control to automatic control, the balanceless bumpless function works to prevent sudden changes in MV. When the power is turned on again during the manual control, it will be restored by the automatic control. When switched to manual control, the MV can be set arbitrarily. (*) Manual control MV setting range -5.0 to 105.0% When the power is turned on again, it is restored with the control action selected in the power-on restore action selection. (*): If the sensor error occurs in manual control, the MV becomes 0 %.
Sensor correction factor setting	Set the slope of the sensor input value. 0.000 to 10.000
Sensor correction setting	Set the sensor correction value. If the temperature at the control location and the temperature at the sensor installation location are different, PV is shifted and corrected. However, it is valid within the input rated range regardless of the sensor correction value. -100.0 to 100.0°C
Control function selection	Select from standard, heating/cooling control, cascade control or output selection function. However, control function selection can only be changed when control is disabled.

Heating/Cooling control	If it is difficult to control the temperature of the controlled object only by heating control, control is performed in combination with cooling control. When heating/cooling control is selected for CH1 in control function selection, CH1 becomes heating output and CH2 becomes cooling output.	
2 DOF PID control		
	Cooling P-band (Pc)	0.000 to Input span °C Setting to 0.000°C enables ON-OFF control.
	Cooling Integral time (Ic)	0 to 3600 seconds (Factory default: 200 seconds) or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Cooling Derivative time (Dc)	0 to 3600 seconds (Factory default: 50 seconds) or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Cooling proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No direct current or DC voltage output)
	Cooling output high limit, Cooling output low limit	0.0 to 100.0 % when direct current output -5.0 to 105.0 % (Factory default: Output low limit 0.0%, Output high limit 100.0%)
	Cooling ON/OFF hysteresis	0.001 to 10.000°C

Fast-PID control	Cooling P-band (Pc)	0.000 to Input span °C Setting to 0.000°C enables ON-OFF control.
	Cooling Integral time (Ic)	0 to 3600 seconds (Factory default: 200 seconds) or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Cooling Derivative time (Dc)	0 to 3600 seconds (Factory default: 50 seconds) or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Cooling proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No direct current or DC voltage output)
	Cooling output high limit, Cooling output low limit	0.0 to 100.0 % when direct current output -5.0 to 105.0 % (Factory default: Output low limit 0.0%, Output high limit 100.0%)
	Cooling ON/OFF hysteresis	0.001 to 10.000°C
Slow-PID control	Cooling P-band (Pc)	0.000 to Input span °C
	Cooling Integral time (Ic)	1 to 3600 seconds (Factory default: 200 seconds) or 0.1 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Cooling Derivative time (Dc)	0 to 3600 seconds (Factory default: 50 seconds) or 0.0 to 2000.0 seconds The setting range varies depending on the integral/derivative decimal point position selection.
	Cooling proportional cycle	0.1 to 100.0 seconds (Factory default: Relay output 30.0 seconds, Non-contact voltage output, Open collector output 3.0 seconds, No direct current or DC voltage output)
	Cooling output high limit, Cooling output low limit	0.0 to 100.0 % when direct current output -5.0 to 105.0 % (Factory default: Output low limit 0.0%, Output high limit 100.0%)
	Cooling ON/OFF hysteresis	0.001 to 10.000°C
ON-OFF control	Cooling ON/OFF hysteresis	0.001 to 10.000°C

Cooling control parameters	Overlap/dead band		-10.000 to 10.000°C						
	Cooling action mode selection	(1) Air cooling	Linear characteristics (Factory default)						
		(2) Oil cooling	1.5th power of the linear characteristics						
(3) Water cooling		2nd power of the linear characteristics							
Cascade control	The MV on the master side obtained from the SV on the master side (CH1) and PV is substituted for the SV on the slave side (CH2), and control calculation is performed on the slave side and control is performed on the MV on the slave side. When cascade control is selected for CH1, CH1 becomes the master and CH2 becomes the slave.								
Extension function selection	Select No function, Peak power suppression function or Auto balance control function.								
Peak power suppression function	A function to suppress the peak power value when there is a power limit for the facility. By setting the total current, power suppression is controlled when the sum of the current values set for each channel is less than or equal to the total current value. However, this function does not work for direct current output and DC voltage output. The change of each set value is effective only when control is inhibited. <table><tr><td>Total current setting</td><td>0.0 to 400.0 A</td></tr><tr><td>Current value setting</td><td>0.0 to 100.0 A (Set by each channel)</td></tr><tr><td>Output ON delay setting</td><td>When the peak power suppression function operates and the total current value is exceeded due to mechanical delay even when the value is less than the total current value, the control output is delayed and output. 0 to 100 ms (Factory default: 30 ms)</td></tr></table>			Total current setting	0.0 to 400.0 A	Current value setting	0.0 to 100.0 A (Set by each channel)	Output ON delay setting	When the peak power suppression function operates and the total current value is exceeded due to mechanical delay even when the value is less than the total current value, the control output is delayed and output. 0 to 100 ms (Factory default: 30 ms)
Total current setting	0.0 to 400.0 A								
Current value setting	0.0 to 100.0 A (Set by each channel)								
Output ON delay setting	When the peak power suppression function operates and the total current value is exceeded due to mechanical delay even when the value is less than the total current value, the control output is delayed and output. 0 to 100 ms (Factory default: 30 ms)								
Current judgment	Judges the current value for each proportional cycle of each channel, and judges whether to allow control output, wait for control output, or determine which channel will allow control output in the next proportional cycle.								
Conditions for enabling the peak power suppression function	The peak power suppression function will be enabled in the following cases. • When the input is not the input error, overscale or underscale during control prohibition • When Control Enable is selected in Control Enable/Prohibited selection								
Conditions for disabling the peak power suppression function	The peak power suppression function will be disabled in the following cases. • When the input is not the input error, overscale or underscale during control prohibition • When Control Prohibited is selected in Control Enable/Prohibited selection • When ON/OFF control action is selected in Control action selectiton								
AT when the Peak Power Suppression function is enabled	When the peak power suppression function is enabled, the output is allocated so that it does not exceed the total current setting value, so AT cannot be executed because it may exceed the total current setting value if AT is executed.								


Auto balance control function	This function suppresses partial burning and mechanical strain by performing soaking on one control target at multiple control points. When using the communication expansion module QMC1-C□, QMC1-C□ becomes the master and transfers data between control modules. When the communication expansion module QMC1-C□ is not used, the control module QTC1-RP (with power supply / communication option) becomes the master, and the master channel and slave channel are selected from the master input channel by auto balance control master/slave selection. The auto balance control function does not work when the master channel is not selected. When Enabled is selected for Auto balance control Enabled/Disabled selection, control prohibited is changed to control allowed to start auto balance control. The slave channels that are allowed to control within 10 seconds from the master channel on which autobalance control was started are the target channels for autobalance control. Slave channels that have been allowed to control after 10 seconds have passed (during automatic balance control operation) are excluded from normal operation and are controlled normally. When the auto balance control function operates, the SV of the slave channel heats up according to the PV of the master channel. If the master channel has an input error, cancel the auto balance control function. Slave channels that have no input error are individually controlled normally. The set value ramp function is disabled during auto balance control. It is also invalid when 2 DOF PID control, Fast-PID control, ON-OFF control or Gap-PID control is selected in control action selection. When using the auto balance control function, the same input range is used for the inputs that are used for auto balance control. For direct current input and DC voltage input, set the scaling high limit and scaling low limit to the same setting. Slave channel SV of auto balance control Slave channel SV of auto balance control = Master channel PV + (Slave channel SV - Master channel SV)
Auto balance control interlock/alone selection	Select whether to use the auto balance control function with interlock or alone. When interlock is selected, automatic balance control is possible between modules including the master module. However, only one group can be used with interlock. When alone is selected, auto balance control is possible only within the module.

Auto balance control start output setting	When using the auto balance control function, the target value of the master channel is SV, but since the SV of the slave channel becomes the PV of the master channel, the slave channel does not start the auto balance control unless the master channel heats up. As a result, the temperature rise of the slave channel is delayed, a temperature difference with the master channel is generated, and in order to prevent the simultaneity from being deteriorated, the MV is set so that the output of the slave channel turns on at the start of the auto balance control. Setting range: 0.00 to 1.00 (Factory default: 0.00) ※0.00 to 1.00 corresponds to 0 to 100%
Auto balance control start condition setting	The auto balance control is started in the following cases. • When input is not burnout or underscale • When AT Cancel is selected in AT Perform/Cancel • When master is selected in master/slave selection • When Reverse action is selected in Direct/Reverse action selection • When the heater burnout alarm or loop break alarm is not generated
Auto balance control cancel condition setting	The auto balance control is canceled in the following cases. • When input is not burnout or underscale • When AT Perform is selected in AT Perform/Cancel • When Direct action is selected in Direct/Reverse action selection • When a Heater burnout alarm or Loop break alarm occurs on the master channel. However, if a Heater burnout alarm or Loop break alarm occurs on a slave channel, the auto balance control is canceled only for that channel. • When Control Prohibited is selected in Control Enable/Prohibited selection
Auto balance control cancel area setting	When the PV of the master channel reaches the autobalance control cancel area and when the PV of each slave channel reaches the autobalance control cancel area, the auto balance control function is released. Master channel PV $\geq$ Master channel SV - Auto balance control cancel area (Factory default: 0.000 When 0.000 setting is twice the proportional band) Slave channel PV $\geq$ Slave channel SV - Auto balance control cancel area (Factory default: 0.000 When 0.000 setting is twice the proportional band of the master channel)
Output selection function	If the used channel fails, you can change the input to an unused channel and select the output location for the input. Select the input channel for the output of each channel. Selection item: CH1 to CH2 (Default value: Input on the same channel as the output channel)

Output gain-bias function	When controlling the temperature of a metal plate, heater control is performed at multiple locations. When using multiple outputs for inputs, if the distribution of output amounts is known in advance, the ratio to MV (reference output) And the bias is set to control evenly. <table border="1" data-bbox="488 286 1465 371"> <tr> <td>Output gain</td><td>0.00 to 10.00 times</td></tr> <tr> <td>Output bias</td><td>0.0 to 100.0%</td></tr> </table>	Output gain	0.00 to 10.00 times	Output bias	0.0 to 100.0%		
Output gain	0.00 to 10.00 times						
Output bias	0.0 to 100.0%						
Input math function	Select Standard, Difference input or Addition input. The input math function selected for CH1 corresponds to CH1 and CH2. However, if heating/cooling control, cascade control or output selection function is selected for control function selection, the input math function is invalid. <table border="1" data-bbox="488 631 1465 1361"> <tr> <td>Standard</td><td>The input value of CH is used as PV for control.</td></tr> <tr> <td>Difference input</td><td> The temperature difference between CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV - CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the difference input specifications, execute AT individually for each channel and then select difference input. </td></tr> <tr> <td>Addition input</td><td> The added value of CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV + CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the addition input specifications, execute AT individually for each channel and then select addition input. </td></tr> </table>	Standard	The input value of CH is used as PV for control.	Difference input	The temperature difference between CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV - CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the difference input specifications, execute AT individually for each channel and then select difference input.	Addition input	The added value of CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV + CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the addition input specifications, execute AT individually for each channel and then select addition input.
Standard	The input value of CH is used as PV for control.						
Difference input	The temperature difference between CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV - CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the difference input specifications, execute AT individually for each channel and then select difference input.						
Addition input	The added value of CH1 and CH2 is used as the PV for CH1 and is controlled by CH1. $CH1\ PV = CH1\ PV + CH2\ PV$ Each setting value such as scaling and PV filter time constant can be set for each channel. When performing AT with the addition input specifications, execute AT individually for each channel and then select addition input.						
Input difference function	The input difference selection detects the input difference between the local channel and the selected channel, and when the input difference setting exceeds the set value, the input difference flag is set to 1. However, this function does not work when you select your own channel with input difference selection. Setting range: 0.001 to 10.000°C						
Scaling function	The scaling low limit to the scaling high limit can be set arbitrarily within the input range. However, this serves as the SV low limit to SV high limit . When the scaling high limit and scaling low limit are set to the same value, the control output turns OFF.						
Number of communication management module setting	Set the number of modules managed by the master module when using the SIF function or auto balance control function. 1 to 16 modules						

Attached Function

Power failure countermeasure	The setting data is backed up in the non-volatile IC memory.
Self-diagnosis	The watchdog timer monitors runaway and halt of the program, and when an abnormality is detected, it resets the MCU and initializes the instrument.
PV filter time constant setting	The fluctuation of PV due to noise is reduced by the digital first-order low-pass filter. PV filter time constant: 0.0 to 10.0 seconds (Factory default: 0.0 seconds)
Number of moving average setting	Stabilizes the indicated value by averaging the values that PV changes due to noise. Number of moving averages: 1 to 10 times (Factory default: 1 time)
CH Enable/Disable selection	Select enable or disable for each channel. When disabled is selected, all operations are disabled for the selected channel and PV becomes 0.00.
Overscale	In the case of the following input range, overscale will occur and B4: Input error (overscale) of status flag 1 will be set to "1: Error". However, control continues during overscale. Rated high limit to Input range high limit $+0.500^{\circ}\text{C}$ Refer to the relationship between sensor error, overscale, underscale, and control (Fig. 17.1-3). (P.17-19)
Underscale	In the case of the following input range, underscale will occur and B5: Input error (underscale) of status flag 1 will be set to "1: Error". However, control continues during underscale. Input range low limit -5.000°C to Rated low limit Refer to the relationship between sensor error, overscale, underscale, and control (Fig. 17.1-3). (P.17-19)

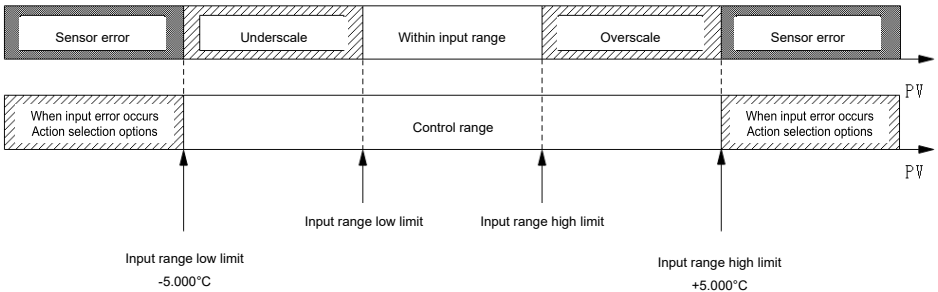Sensor error	In the case of the following, a sensor error will occur, B5: Sensor error of status flag 2 will be set to "1: Error", and the control output will be turned off. When the input range low limit is less than -5.000°C and exceeds the input range high limit $+0.500^{\circ}\text{C}$. At this time, PV is fixed to the of input range low limit -5.000°C 1 digit and the input range high limit $+0.500^{\circ}\text{C} +1$ digit.  (Fig. 17.1-3)
ADC error	If there is an abnormality such as a failure in the internal circuit, the ADC becomes abnormal, sets "1: Error" in status flag 2, B6: ADC error, and turns off the control output of the channel where the error occurred. At this time, PV becomes 32767.
Warm up indication	The power indicator flashes every 500 ms for about 3 seconds after the power is turned on.

Contact switching total number of times	The control output ON/OFF count can be integrated and measured. ON/OFF is set as one time and totaling is performed. This allows you to grasp the approximate contact life as the number of switching times of the switch used externally. However, since the saving cycle is 10 minutes, the number of times within 10 minutes may not be saved due to a power failure.																																		
Total energizing time	It can check the time that the power is on. The accumulated time is saved every 10 minutes. It can grasp the approximate usage time from the accumulated time. However, since the save cycle is 10 minutes, the time within 10 minutes may not be saved due to a power failure. Total energizing time: 10 minutes/count																																		
Heater accumulated energizing time	For relay contact output or non-contact voltage output, you can check the cumulative time the heater is energized. When the output time to the heater reaches 1 minute cumulatively, the count is added. The accumulated time is saved every 10 minutes. The accumulated time can be used to understand the approximate usage period of the heater, which can be used as a guide for replacing the heater. However, since the save cycle is 10 minutes, the time within 10 minutes may not be saved due to a power failure. Cumulative heater energization time: 1 minute/count																																		
Error history	When an error occurs, the bit ON/OFF and accumulated energization time are saved for the past 10 times. Error history exists for each channel, and device common errors are saved in the error history of all channels. Total energizing time: 1 hour/count <table border="1"> <thead> <tr> <th>Bit</th><th>Error content</th></tr> </thead> <tbody> <tr> <td>B0</td><td>Alarm 1 0: Normal 1: Error</td></tr> <tr> <td>B1</td><td>Alarm 2 0: Normal 1: Error</td></tr> <tr> <td>B2</td><td>Alarm 3 0: Normal 1: Error</td></tr> <tr> <td>B3</td><td>Alarm 4 0: Normal 1: Error</td></tr> <tr> <td>B4</td><td>Heater burnout alarm 0: Normal 1: Error</td></tr> <tr> <td>B5</td><td>Undefined Indefinite</td></tr> <tr> <td>B6</td><td>Loop break alarm 0: Normal 1: Error</td></tr> <tr> <td>B7</td><td>Sensor error 0: Normal 1: Error</td></tr> <tr> <td>B8</td><td>Input error (Overscale) 0: Normal 1: Error</td></tr> <tr> <td>B9</td><td>Input error (Underscale) 0: Normal 1: Error</td></tr> <tr> <td>B10</td><td>Undefined Indefinite</td></tr> <tr> <td>B11</td><td>Non-volatile IC memory error 0: Normal 1: Error</td></tr> <tr> <td>B12</td><td>ADC error 0: Normal 1: Error</td></tr> <tr> <td>B13</td><td>Undefined Indefinite</td></tr> <tr> <td>B14</td><td>Undefined Indefinite</td></tr> <tr> <td>B15</td><td>Undefined Indefinite</td></tr> </tbody> </table>	Bit	Error content	B0	Alarm 1 0: Normal 1: Error	B1	Alarm 2 0: Normal 1: Error	B2	Alarm 3 0: Normal 1: Error	B3	Alarm 4 0: Normal 1: Error	B4	Heater burnout alarm 0: Normal 1: Error	B5	Undefined Indefinite	B6	Loop break alarm 0: Normal 1: Error	B7	Sensor error 0: Normal 1: Error	B8	Input error (Overscale) 0: Normal 1: Error	B9	Input error (Underscale) 0: Normal 1: Error	B10	Undefined Indefinite	B11	Non-volatile IC memory error 0: Normal 1: Error	B12	ADC error 0: Normal 1: Error	B13	Undefined Indefinite	B14	Undefined Indefinite	B15	Undefined Indefinite
Bit	Error content																																		
B0	Alarm 1 0: Normal 1: Error																																		
B1	Alarm 2 0: Normal 1: Error																																		
B2	Alarm 3 0: Normal 1: Error																																		
B3	Alarm 4 0: Normal 1: Error																																		
B4	Heater burnout alarm 0: Normal 1: Error																																		
B5	Undefined Indefinite																																		
B6	Loop break alarm 0: Normal 1: Error																																		
B7	Sensor error 0: Normal 1: Error																																		
B8	Input error (Overscale) 0: Normal 1: Error																																		
B9	Input error (Underscale) 0: Normal 1: Error																																		
B10	Undefined Indefinite																																		
B11	Non-volatile IC memory error 0: Normal 1: Error																																		
B12	ADC error 0: Normal 1: Error																																		
B13	Undefined Indefinite																																		
B14	Undefined Indefinite																																		
B15	Undefined Indefinite																																		

Console communication	Connect a communication cable (commercial item) to the console communication connector, and The following operations can be performed from an external computer using the software (SWC-QTC101M). (1) Reading and setting of SV, PID and various set values (2) PV and operation status reading (3) Change of function <table border="1"> <tr> <td>Communication protocol</td><td>MODBUS RTU</td></tr> <tr> <td>Communication cable</td><td>USB - micro USB Type-B(commercial item)</td></tr> <tr> <td>Software</td><td>Console software (SWC-QTC101M)</td></tr> </table>	Communication protocol	MODBUS RTU	Communication cable	USB - micro USB Type-B(commercial item)	Software	Console software (SWC-QTC101M)
Communication protocol	MODBUS RTU						
Communication cable	USB - micro USB Type-B(commercial item)						
Software	Console software (SWC-QTC101M)						
Firmware update function	Connect a communication cable (commercial item) to the console communication connector, and software (SWC-QTC101M) to update the function from an external computer. When the firmware is updated, the set values are initialized.						

Other Item

Accessories	Mounting and wiring instruction manual: 1 Power supply terminal cover: 1 (Included when power supply / host communication function is provided or when power supply / CUnet communication function is provided.) Connector for wiring (2ESS-05P): 2
Sold separately	Termination resistance: RES-S07-100 100 Ω Front terminal cover: TC-QTC CT: CTL-6-S-H (For heater burnout alarm 20 A) CTL-12-S36-10L1U (For heater burnout alarm 100 A) Connector harness for heater burnout alarm: WQ Connector harness for event input/output: EVQ

17.2 Optional Specifications

Power supply and Communication	Perform the following operations from the external computer. (1) Reading and setting of SV, PID and various set values (2) PV and operation status reading (3) Change of function	
	Communication line	EIA RS-485 (C5 option)
	Communication method	Half-duplex communication
	Synchronization method	Start-stop synchronization
	Communication protocol	MODBUS RTU or SIF specifications can be selected by DIP switch
	Communication speed	9600 bps, 19200 bps, 38400 bps or 57600 bps can be selected by DIP switch
	Data bit/Parity/Stop bit	Select the following with the DIP switch Data bit: 8 Parity: Even, Odd, No parity Stop bit: 1 or 2
	Communication response delay time	Set the delay time to return the response from the module after receiving the command from the host. 0 to 1000 ms
	The SIF function (Smart InterFace, programless communication function) the PLC Q series manufactured by Mitsubishi Electric Corp. and this instrument, and reads and writes various data to and from PLC registers using the communication protocol of the PLC.	
	Communication protocol	Format 4
	Communication command	A compatible 1C frame AnA/AnU common command (QR/QW) (D register)
	Using the console software (SWC-QTC101M), select the PLC register start number, PLC register address, the monitoring items and setting items to be linked, and set the specifications.	
	The control module QTC1-RP becomes the master, and the selected monitor item is periodically written to the PLC register by using the QW command, and the value of the PLC register is constantly updated.	
	In addition, the selected setting items are read from the PLC register in response to a setting request using the QR command.	
	When the read data is changed, the set value of control module QTC1-RP or control module QTC1-R0 is updated.	

	CUnet communication function CUnet communication writes the reading value from the module to the global memory (GM) specified by the station address (SA). It reads the setting values from the master address (DOSA) and sets them to the module. The setting value can also be changed by using the mail function of CUnet. <table><tr><td>Connection type</td><td colspan="2">Multi-drop</td></tr><tr><td>Communication method</td><td colspan="2">2-wire half-duplex</td></tr><tr><td>Synchronization method</td><td colspan="2">Bit-synchronous</td></tr><tr><td>Error detection</td><td colspan="2">CRC-16</td></tr><tr><td>Number of occupied slave addresses</td><td colspan="2">1</td></tr><tr><td>Maximum number of connected nodes</td><td colspan="2">64 nodes</td></tr><tr><td rowspan="4">Communication speed, Communication distance</td><td>Communication speed</td><td>Maximum network length</td></tr><tr><td>12 Mbps</td><td>100 m</td></tr><tr><td>6 Mbps</td><td>200 m</td></tr><tr><td>3 Mbps</td><td>300 m</td></tr><tr><td>Isolation method</td><td colspan="2">Pulse transformer isolation</td></tr><tr><td>Impedance</td><td colspan="2">100 Ω</td></tr><tr><td>Termination resistance</td><td colspan="2">Last connection, set by CUnet slave This instrument is not equipped.</td></tr></table>			Connection type	Multi-drop		Communication method	2-wire half-duplex		Synchronization method	Bit-synchronous		Error detection	CRC-16		Number of occupied slave addresses	1		Maximum number of connected nodes	64 nodes		Communication speed, Communication distance	Communication speed	Maximum network length	12 Mbps	100 m	6 Mbps	200 m	3 Mbps	300 m	Isolation method	Pulse transformer isolation		Impedance	100 Ω		Termination resistance	Last connection, set by CUnet slave This instrument is not equipped.	
Connection type	Multi-drop																																						
Communication method	2-wire half-duplex																																						
Synchronization method	Bit-synchronous																																						
Error detection	CRC-16																																						
Number of occupied slave addresses	1																																						
Maximum number of connected nodes	64 nodes																																						
Communication speed, Communication distance	Communication speed	Maximum network length																																					
	12 Mbps	100 m																																					
	6 Mbps	200 m																																					
	3 Mbps	300 m																																					
Isolation method	Pulse transformer isolation																																						
Impedance	100 Ω																																						
Termination resistance	Last connection, set by CUnet slave This instrument is not equipped.																																						
Heater burnout alarm	The heater current is monitored by CT (sold separately) to detect heater burnout. Cannot be added for direct current output and DC voltage output. <table><tr><td>Rating</td><td colspan="2">Single-phase 20 A/ 3-phase 20 A, Single-phase 100 A/ 3-phase 100 A</td></tr><tr><td>Setting range</td><td colspan="2">0.0 to 20.0 A (Setting 0.0 will not work) 0.0 to 100.0 A (Setting 0.0 will not work)</td></tr><tr><td>Setting accuracy</td><td colspan="2">±5% of rated value</td></tr><tr><td>Operating point</td><td colspan="2">Heater burnout alarm setting value</td></tr><tr><td>Action</td><td colspan="2">ON/OFF action</td></tr><tr><td>Output</td><td colspan="2">Event output allocation by status flag or event output allocation selection.</td></tr></table>			Rating	Single-phase 20 A/ 3-phase 20 A, Single-phase 100 A/ 3-phase 100 A		Setting range	0.0 to 20.0 A (Setting 0.0 will not work) 0.0 to 100.0 A (Setting 0.0 will not work)		Setting accuracy	±5% of rated value		Operating point	Heater burnout alarm setting value		Action	ON/OFF action		Output	Event output allocation by status flag or event output allocation selection.																			
Rating	Single-phase 20 A/ 3-phase 20 A, Single-phase 100 A/ 3-phase 100 A																																						
Setting range	0.0 to 20.0 A (Setting 0.0 will not work) 0.0 to 100.0 A (Setting 0.0 will not work)																																						
Setting accuracy	±5% of rated value																																						
Operating point	Heater burnout alarm setting value																																						
Action	ON/OFF action																																						
Output	Event output allocation by status flag or event output allocation selection.																																						

Event input	Operates with the content selected in event input allocation selection.		
	Setting value	Action	Contents
	0	No action	It can be used for any operation by reading the event input status flag. When the event input is turned off, the event input status flag is set to 0, and when the event input is turned on, the event input status flag is set to 1.
	1	Control start/stop (CH alone)	For the selected channel only, control will start when the event input turns ON, and control will stop when the event input turns OFF.
Event output	2	Control start/stop (CH interlock)	For all channels, turning on the event input starts the control, and turning off the event input stops the control.
	Operates with the content selected in event output allocation selection.		
	Setting value	Action	Contents
	0	No action	By selecting the event output ON/OFF selection from the host, the event output can be output. When the event output ON/OFF selection is set to 0 (event output OFF), the event output is turned off, and when it is set to 1 (event output ON), the event output is turned on.
	1	Control start/stop (CH alone)	The event output turns ON when any of the selected channel's alarm, heater burnout alarm, or loop error alarm is activated.
	2	Control start/stop (CH interlock)	The event output turns on when an alarm, heater burnout alarm, or loop error alarm occurs on all channels.

18 Troubleshooting

If any malfunctions occur, refer to the following items after checking that power is being supplied to the master module and slave module.

18.1 Communication (Upper Communication)

Problem	Possible Cause	Solution
Cannot communicate.	Is the communication cable disconnected?	Check the communication cable.
	Is the communication cable wiring correct?	Refer to “7 Wiring (P.7-1 to P.7-10)” or “13.4 Wiring (P.13-8 to P.13-14)”, and check the communication cable.
	Is there any disconnection or contact failure of the communication cable?	Check the communication cable.
	Is communication speed of the master and slave same?	Refer to “5.1.1 Selection of Communication Specifications (P.5-1, P.5-2)”, and check the communication speed of the master and slave.
	Are data bits, parity, and stop bits of the master and slave same?	Refer to “5.1.1 Selection of Communication Specifications (P.5-1, P.5-2)”, and check the data bit, parity, and stop bit of the master and slave.
	Is the module address of the command and slave same?	Refer to “5.1.2 Selection of Module Address (P.5-3)”, and check the module address of the command and slave.
	Are there any slaves that have the same module address?	Refer to “5.1.2 Selection of Module Address (P.5-3)”, and check the module address.
	Is the program considering the transmission timing?	Refer to “9. Communication Procedure (P.9-1)”, and check the program.
Communication is possible, but a negative acknowledgement is returned.	Are sending a command code that does not exist?	Refer to “11.1 Communication Command List (P.11-1 to P.11-20)”, and check the command code.
	Is the data of the write command exceeding the setting range?	Refer to “11.1 Communication Command List (P.11-1 to P.11-20)”, and check the setting range of write command.
	Is it not possible to write (During AT execution)?	Check the state of a slave.

18.2 Communication (CUnet Communication)

Problem	Possible Cause	Solution
Cannot communicate.	Is the communication line wiring correct?	Refer to “14.4.4 Wiring Example of CUnet Communication Line (P.14-11)”, and check the wiring of the communication line.
	Is the termination resistance attached to the last module in the communication line?	Refer to “14.4.4 Wiring Example of CUnet Communication Line (P.14-11)”, and attach the termination resistance to the last module in the communication line.
	Is the LAN cable a straight cable?	If the LAN cable is a crossover cable, communication is not possible. Use a straight cable.
	Is the station address correct?	Refer to “14.2 Setting CUnet communication specifications (P.14-3)”, and check the settings.
	Are there duplicate station addresses?	Refer to “14.2 Setting CUnet communication specifications (P.14-3)” and set the station address to avoid duplication.
	Is the communication speed between the host system (master) and the module the same?	Refer to “14.2 Setting CUnet communication specifications (P.14-3)” and check the communication speed.

18.3 PV Reading Value

Problem	Possible Cause	Solution
PV reading is abnormal or unstable.	Are the sensor input and temperature unit (°C/°F) selection correct?	Select the correct sensor input and temperature unit (°C/°F).
	Is the sensor correction factor or sensor correction value set appropriately?	Set an appropriate sensor correction factor or sensor correction value.
	Are the sensor specifications correct?	Use a sensor with appropriate specifications.
	Is AC leaking to the sensor?	Make the sensor non-grounded.
	Is there a device nearby that causes inductive interference or noise?	Keep away from device that may cause inductive interference or noise.

18.4 Status Flag 1

Problem	Possible Cause	Solution
"1: Error" is set in B4: Input error (Overscale).	It is an overscale. Is PV over the input range high limit (scaling high limit for direct current input and DC voltage input)?	Check the input signal source is normal.
"1: Error" is set in B5: Input error (Underscale).	It is an underscale. Is PV below the input range low limit (scaling low limit for direct current input and DC voltage input)?	Check the input terminal wiring and input signal source are normal.
"1: Error" is set in B15: Non-volatile IC memory error.	The nonvolatile IC memory is defective.	Contact our agency or us.

18.5 Status Flag 2

Problem	Possible Cause	Solution
"1: Error" is set in B4: Cold junction error.	It is a cold junction error. If the internal cold junction temperature is lower than -10°C (14°F) or higher than 50°C (122°F), a cold junction error will occur.	Check the installation environment such as the ambient temperature of the instrument.
"1: Error" is set in B5: Sensor error.	It is a sensor error. Is the sensor burn out?	Replace each sensor. How to check whether the sensor is burnt out • For thermocouple If the input terminals of this instrument are short-circuited and the around room temperature is indicated, this instrument is normal and the sensor may be burn out. • For RTD If a resistance of approx. 100 Ω is connected to the input terminal (between A and B) of this instrument and the input terminal (between B and B) is short-circuited and the temperature is indicated as 0°C (32°F), this instrument is normal and the sensor may be burn out. • For DC voltage (0 to 1 V DC) If the input terminals of this instrument are short-circuited and the scaling low limit is indicated, this instrument is normal and the sensor may be burn out. • For direct current (4 to 20 mA DC) If the input terminals of this instrument input 4 mA DC and the scaling low limit is indicated, this

Problem	Possible Cause	Solution
		instrument is normal and the sensor may be burn out. For DC voltage (1 to 5 V DC) If the input terminals of this instrument input 1 V DC and the scaling low limit is indicated, this instrument is normal and the sensor may be burn out.
"1: Error" is set in B5: Sensor error.	It is a sensor error. Is the sensor burn out?	- For direct current (0 to 20 mA DC) If the input terminals of this instrument input 4 mA DC and the input value is a value converted by scaling high and low limit settings, this instrument is normal and the sensor may be burn out. - For DC voltage (0 to 5 V DC, 0 to 10 V DC) If the input terminals of this instrument input 1 V DC and the input value is a value converted by scaling high and low limit settings, this instrument is normal and the sensor may be burn out.
"1: Error" is set in B6: ADC error.	It is the internal circuit error.	Contact our agency or us.

18.6 Control

Problem	Possible Cause	Solution
Control output does not turn on.	Is Prohibited selected in Control Allowed/Prohibited selection?	Select Prohibited in Control Allowed/Prohibited selection.
	Is the SV setting appropriate?	Set the appropriate SV.
The temperature does not rise.	Is the sensor broken?	Replace the sensor.
	Is the sensor or control output terminal securely attached to the input terminal of this instrument?	Attach the sensor or control output terminal to the input terminal of this instrument securely.
	Is the sensor or control output terminal wiring correct?	Wire correctly.
Control output remains ON.	Is the output low limit set to 100% or higher?	Set an appropriate value.
Control output remains OFF.	Is the output high limit set to 0% or less?	Set an appropriate value.
Chattering occurs with ON-OFF control.	Is the ON/OFF hysteresis setting too small?	Set an appropriate value.
Chattering occurs with PID control, PI control, PD control or P control.	Is the proportional cycle too small?	Set an appropriate value.

18.7 Loop Break Alarm

Problem	Possible Cause	Solution
The loop break alarm is activated even though the control terminal is normal.	Is the loop break alarm band setting too large for the loop break alarm time setting?	Set an appropriate loop break alarm band setting.
	Is the loop break alarm time setting too small for the loop break alarm band setting?	Set an appropriate loop break alarm time setting.

18.8 Heater Burnout Alarm

Problem	Possible Cause	Solution
Heater burnout alarm does not work.	Is the CT wiring correct?	Wire correctly.
	Is the control output turned ON?	The heater current value is updated when the control output is ON. Check the control parameter.
	Is the wrong channel set for the heater burnout alarm setting?	CH1 to CH4 correspond to the CT input connectors CT1 to CT4 respectively. When the CT is connected to CT3 in single-phase, set CH3. When CT is connected to CT1 and CT3 in 3-phase, set to CH1 and CH3 respectively.
	Is the heater burnout alarm setting appropriate?	Set an appropriate heater burnout alarm setting. Set it to about 80% of the heater current value considering the fluctuation of the power supply voltage. If 0.0 is set, heater burnout alarm does not work.
Heater burnout alarm cannot be canceled.	Is the heater burnout alarm setting appropriate?	Set an appropriate heater burnout alarm setting. Set a value smaller than the heater current value when the control output is ON.
	After the heater burnout alarm is activated, is the control output turned ON and the heater current value updated?	The heater burnout alarm cannot be canceled unless the heater current value is updated to the normal value. Check the control parameter.

SHINKO TECHNOS CO., LTD.
OVERSEAS DIVISION

Head Office: 2-5-1, Senbahigashi, Minoo, Osaka, 562-0035, Japan

[URL] <https://shinko-technos.co.jp/e/>

Tel: +81-72-727-6100

[E-mail] overseas@shinko-technos.co.jp

Fax: +81-72-727-7006