


If the type of your PC system is x86 or ARM64, connect a USB conversion cable to the PC.
And open Device Manager, and check other device.

If the condition is the following screen (1), please do the following (1) to (7).

(1) Click the [Other devices] in Device Manager. [1]


The [USB <-> Serial] will be shown.

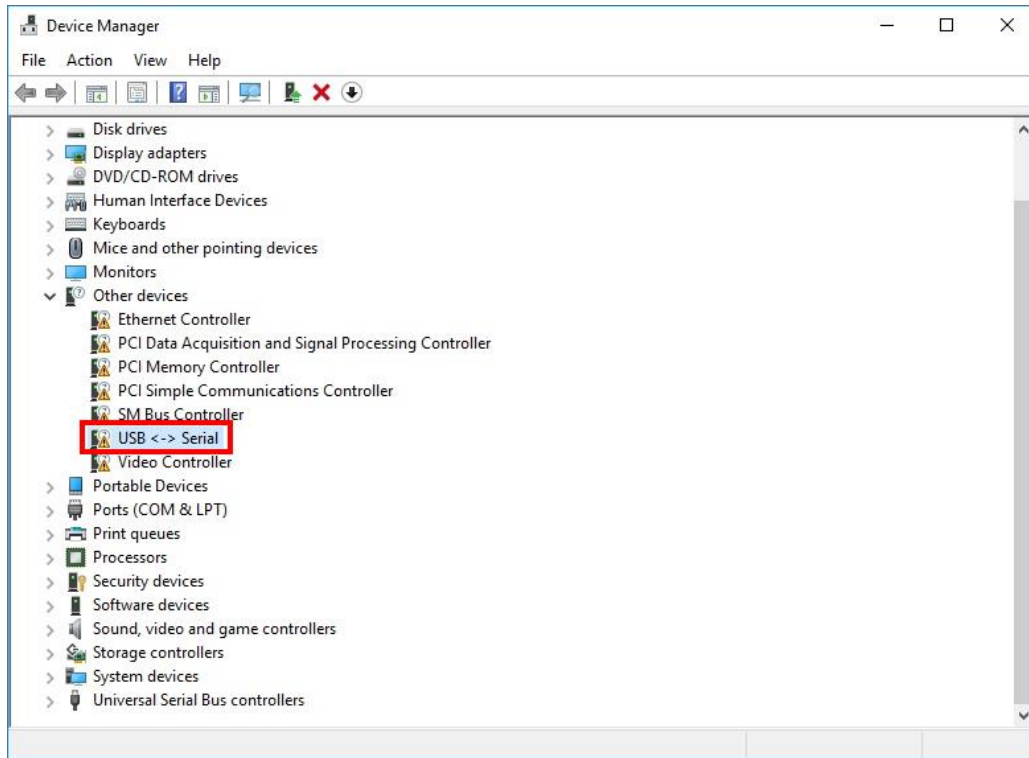

[1]

(2) Right-click the [USB <-> Serial], and choose [Properties]. [2]


The Properties screen of [USB <-> Serial] will be shown.

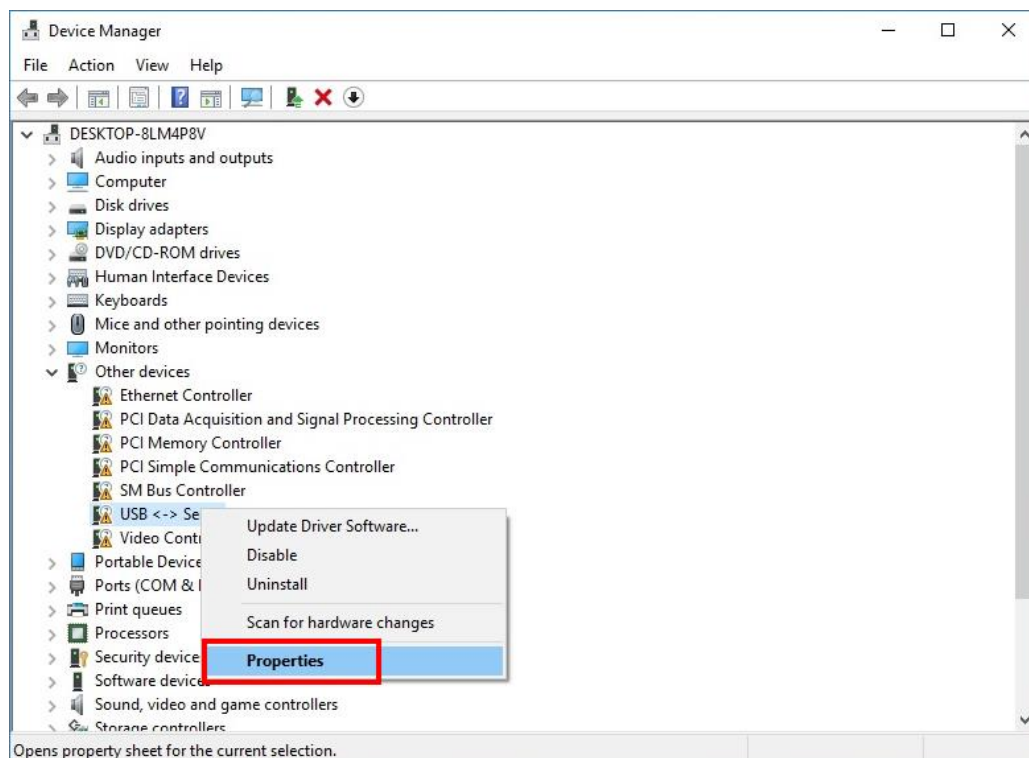

[2]

- (3) Click the [Driver] Tab in the [USB <-> Serial Properties] screen, and click the [Update Driver...].
[3]


The [Updated Driver] screen will be shown.

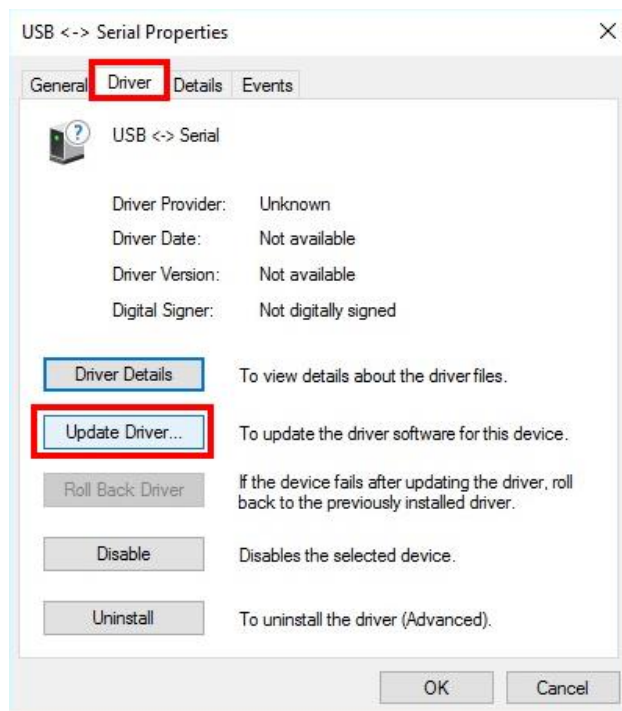

[3]

- (4) Click the [Browse my computer for driver software] [4]

The screen referencing Driver will be shown.

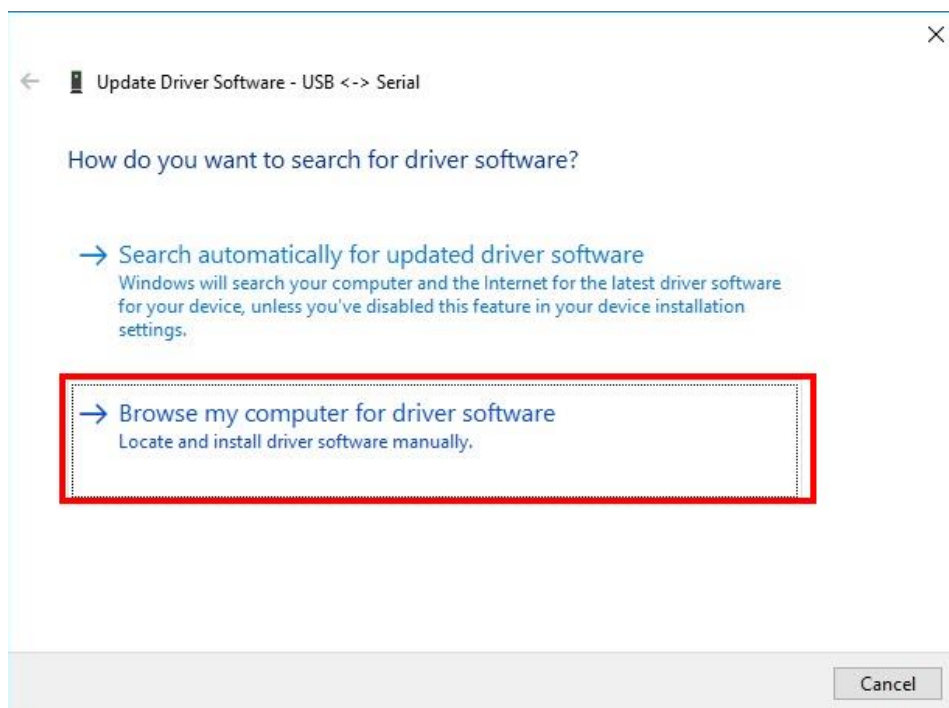

[4]


(5) Click the [Browse...] button, and choose the folder the USB driver is in. [5]

For x86, choose the x86 folder in the USB driver

For ARM64, choose the ARM64 folder in the USB driver

After choosing the folder the USB driver is in, click the [Next] button.


USB driver will be installed in the PC.

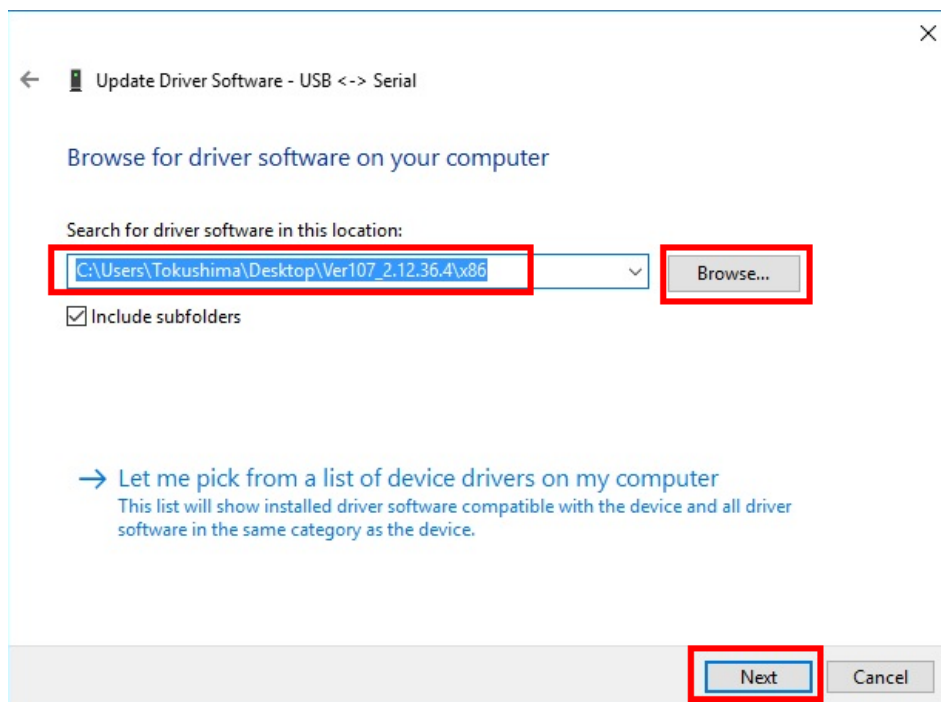

[5]

(6) After finishing installing the USB driver normally, the following screen will be shown. [6]

Click the [Close] button.

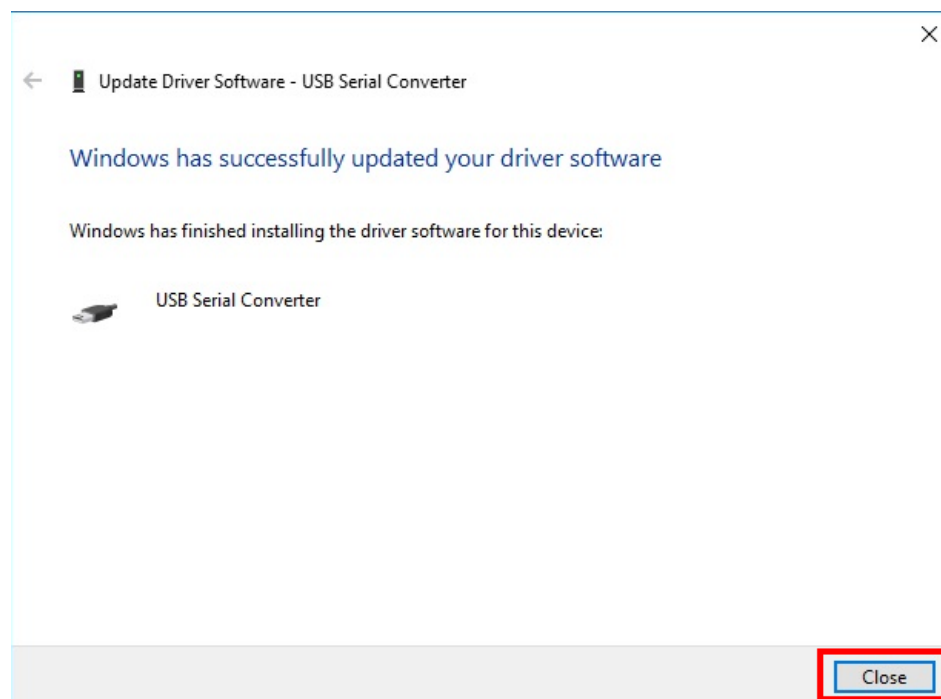

[6]

(7) Repeat (1) to (6) again.